PUBLICATION NUMBER PL-04010-05

October 22, 2015 Rev. A 11/1/2023



PUMP MODEL RS5A32—BAR

MANUAL PART 2 of 3

Use With: OM-03989

MR-03991

PARTS
LIST
WITH
PERFORMANCE CURVE

GORMAN-RUPP PUMPS

Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

RS SERIES PUMP PL—04010

PERFORMANCE CURVE - SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied. For warranty information, please visit www.grpumps.com/warranty.

PERFORMANCE CURVES

The performance curves on the following page are based on 70°F (21°C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PAGE A - 1 PART LIST MANUAL

PL-04010 RS SERIES PUMP

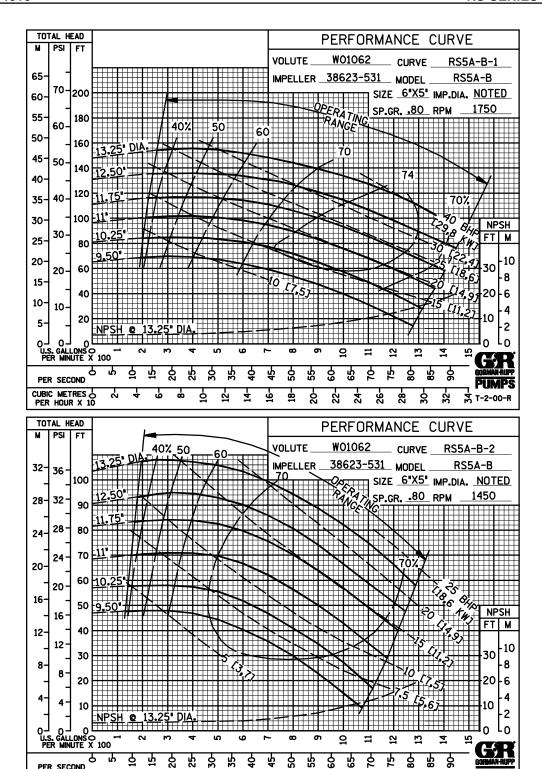

Performance Curve - Model RS5A32-BAR

-91 -81 24-26-

☆ T-2-00-R

8 - 10 - 12 - 41

PER SECOND

CUBIC METRES O
PER HOUR X 10


PARTS LIST MANUAL PAGE A – 2

RS SERIES PUMP PL-04010

This Page Intentionally Blank

PAGE A – 3 PART LIST MANUAL

S/N 1622710 Up PUMP ISSUE 5

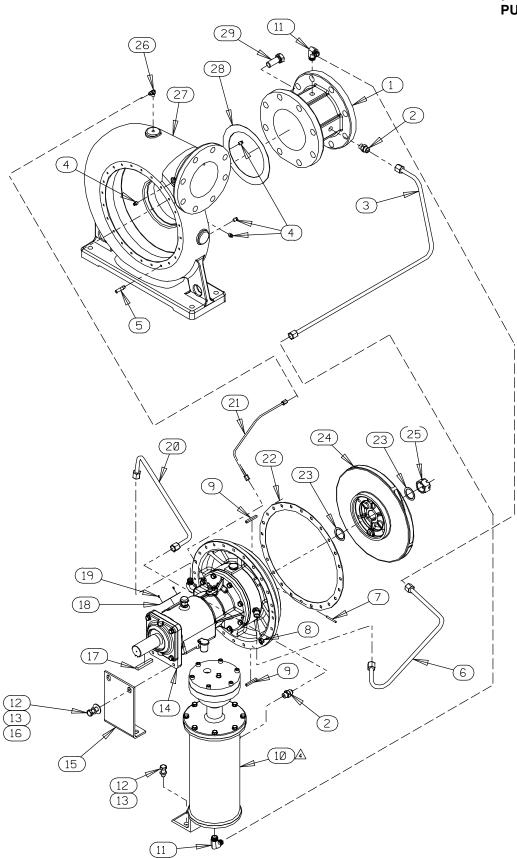

GORMAN-RUPP PUMPS

S/N 1622710 Up PUMP ISSUE 5

PARTS LIST Pump Model RS5A32—BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM PART NAME NO.	PART NUMBER	QTY	ITEM PART NAME NO.	PART Q NUMBER	TY
1 SUCTION FLANGE 2 CONNECTOR 3 RETURN TUBE ASSY 4 PIPE PLUG 5 STUD 6 SUCTION TUBE ASSY 7 SPIRAL PIN 8 HEX NUT 9 ★ IMPELLER KEY 10 ● AIR RELEASE VLV ASSY 11 MALE ELBOW 12 HEX HEAD CAP SCREW 13 LOCK WASHER 14 BEARING HSG ASSY 15 BEARING HSG SUPPORT 16 FLAT WASHER 17 ★ DRIVE KEY	K08 15991 N0611 15990	1 2 1 4 24 1 24 2 1 2 4 4 1 1 2	† 24 * IMPELLER 25 IMPELLER LOCK NUT 26 MALE ELBOW 27 PUMP CASING 28 * RING GASKET 29 HEX HEAD CAP SCREW NOT SHOWN: * DISCH FLANGE GASKET * SUCT FLANGE GASKET ROTATION DECAL INSTRUCTION TAG LUBRICATION DECAL SUCTION STICKER DISCHARGE STICKER G-R DECAL OPTIONAL:	K76643 15991 38623-531 13048 K88233 15111 25817-032 SEE NOTE BELOW 38682-208 19370 B1208 15991 1678G 19060 1679G 19370 2613M 38817-011 38816-074 6588AG 6588BJ GR-03	2 1 1 1 1 8 1 1 1 1 1 1 1 1 1 1 1 1 1 1
18 NAMEPLATE 19 DRIVE SCREW 20 DISCHARGE TUBE ASSY. 21 SEAL TUBE ASSY 22 * BODY COVER GASKET	2613DZ 13990 BM#04-03 17000 46335-099 46335-065 N15237-21 19060	1 2 1 1	-HEX HD CAPSCREW -GASKET	: 26642—206 B1212 15991 1678G 19060 D12 15991	1 8 1 8


^{*} INDICATES PARTS RECOMMENDED FOR STOCK

- † ALL ROTO-PRIME® IMPELLERS ARE TRIMMED AND INCLUDE WEAR RINGS AND GROOVE PINS. WEAR RINGS ARE NOT SOLD SEPARATELY.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.
- IP INCLUDED WITH REPAIR 46474-336 1
 PUMP CASING ASSY

GORMAN-RUPP PUMPS

RS5A32-BAR

S/N 1622710 Up PUMP ISSUE 5

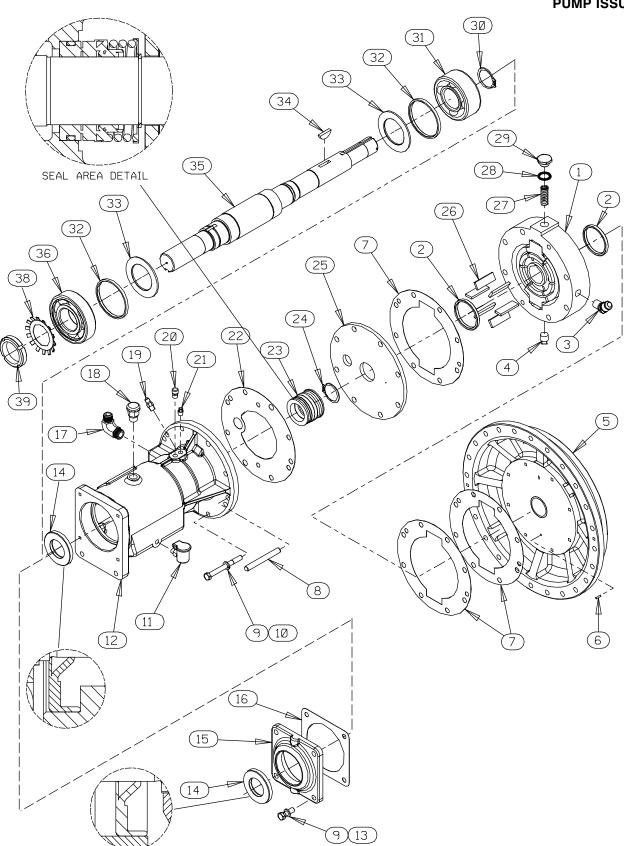

GORMAN-RUPP PUMPS

RS5A32-BAR

S/N 1622710 Up PUMP ISSUE 5


PARTS LIST R12922-04 Bearing Housing Assembly

ITEM PART NA NO.	AME	PART NUMBER	QTY	ITEM NO.	PART NA	AME	PART NUMBER	QTY
2 BLADE 3 MALE 4 PIPE P 5 BODY 6 * LOCAT † 7 * CENTE 8 DOWE 9 LOCK 10 HEX H 11 OILER 12 BEARII 13 HEX H 14 * OIL SE 15 BEARII 16 * BEARII 17 MALE 18 AIR VE	COVER TING PIN ER PLATE GASKET EL PIN WASHER HEAD CAP SCREW R ING HOUSING HEAD CAP SCREW EAL ING HOUSING CAP ING CAP GASKET ELBOW ENT CONNECTOR ENT	LK05271 K76623 15030 25812-161 P06 15079 T03712-20 10140 21154-666 R10150 19210 21133-116 J06 15991 B0615 15991 26713-054 W01172-04 11010 B0605 15991 25227-240 R12770-02 10010 N18938-01 18000 25812-011 S1703 25817-202 S2162 P02 15079	1 2 1 1 1 1 3 2 12 8 1 1 4 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 38 39 OPTI	* MEC SNA SPA ROTS SPF SNA * RINN SPF SNA * BALL OIL OIL * WO * IMP * BAL BRC BRC ONAL: SST	ICER PLATE GASKET CH SEAL AP RING ICER PLATE FOR BLADE RING G GASKET RING CAP AP RING L BEARING RING RING STOP ODRUFF KEY ELLER SHAFT L BEARING G LOCK WASHER G LOCK NUT TIMPELLER SHAFT IOROCARBON SEAL	R12923 18000 25271—921 24124—243 R12771—02 110 K79300—21 K76626 K86067 K68064 15991 24124—245 23421—410 K86483 15030 K76632—01 K74041 15590 T08620—02 150 S1077 23962—511 23962—011	6 1 1 1 1 2 2 1 10 1 1 1

^{*} INDICATES PARTS RECOMMENDED FOR STOCK

GORMAN-RUPP PUMPS

^{† 2} GASKETS REQUIRED ON ONE FACE ONLY WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

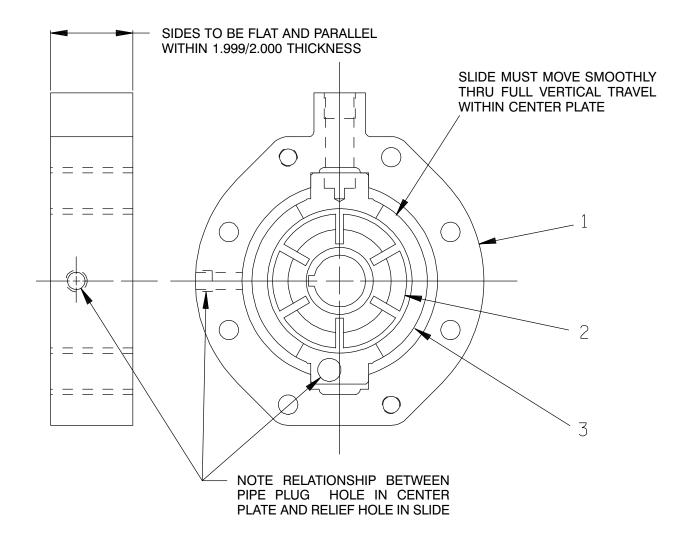

PARTS LIST LK05271 Group Grind

ITEM NO.	PART NAME	PART NUMBER	QTY
1	CENTER PLATE	NOT AVAILABLE	1
2	ROTOR	NOT AVAILABLE	1
3	SLIDE	NOT AVAILABLE	1

NOTE: THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

GORMAN-RUPP PUMPS

For Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280

Canada: 519-631-2870

International: +1-419-755-1352