PUBLICATION NUMBER PL-04013-03 May 17, 1999 Rev. B 11-6-2023



## PUMP MODEL RD4A32-B

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

**GORMAN-RUPP PUMPS** 

www.grpumps.com

## Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

### **RECORD YOUR PUMP MODEL AND SERIAL NUMBER**

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

RD SERIES PUMP PL—04013

### PERFORMANCE CURVE - SECTION A

### RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

#### WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.

#### PERFORMANCE CURVES

The performance curves on the following page are based on 70°F (21°C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.




Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PART LIST MANUAL PAGE A – 1

PL-04013 RD SERIES PUMP

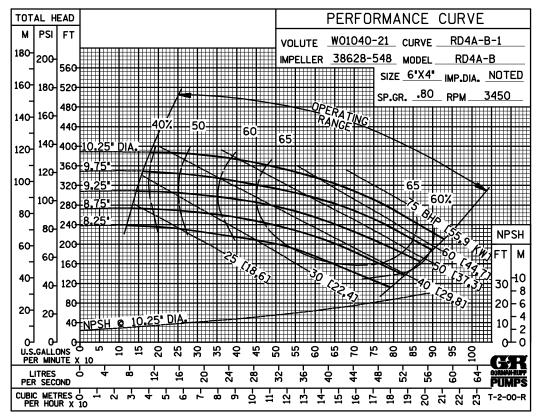

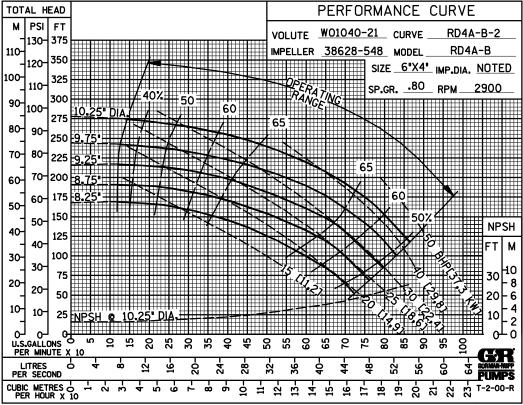

Performance Curve — Model RD4A32—B

PAGE A – 2 PARTS LIST MANUAL


RD SERIES PUMP PL-04013


This Page Intentionally Blank

PART LIST MANUAL PAGE A – 3

### **RD4A32-B**

### S/N 1195933N Up PUMP ISSUE 3

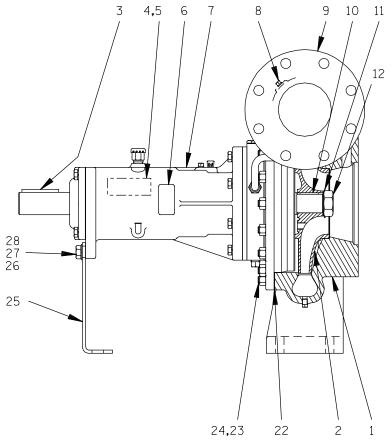

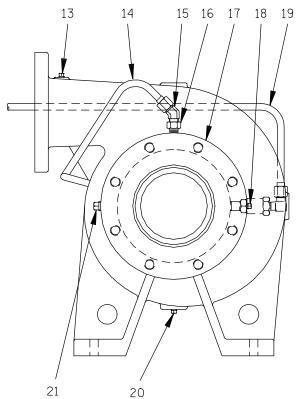

**GORMAN-RUPP PUMPS** 

www.grpumps.com

©1999 Gorman-Rupp Pumps

**S/N 1195933N Up PUMP ISSUE 3** 

### PARTS LIST Pump Model RD4A32-B

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
2 * 3 * 4 5 6 7 P 8 9 10 * 11 12 P 13	SHAFT KEY NAME PLATE DRIVE SCREW BRG LUBE DECAL BRG HOUSING ASSY PIPE PLUG DISCHARGE STICKER IMPELLER KEY LOCKWASHER IMPELLER NUT PIPE PLUG	W01040-21 38628-548 N0611 2613DZ BM#04-03 38816-074 R12924-02 P02 6588BJ K79330-23 S302 K76645 P02	13048 15990 13990 17000  15079  15990  15111 15079	1 1 1 1 2 1 1 1 1 1 1 1 1		STUD HEX NUT BEARING HSG SUPPOF HEX HD CAPSCREW LOCKWASHER FLAT WASHER  SHOWN:  * DISCH FLANGE GASKE'  * SUCTION FLANGE GSK INSTRUCTION TAG MALE ELBOW G-R DECAL ROTATION DECAL	B0805 J08 K08	15991 15991 15991 19060 19370	2 2 2
14 15 16 17 18 19 19 120 121 22 **	SUCTION TUBE ASSY MALE ELBOW STRAINER SUCTION STICKER PIPE PLUG DISCH TUBE ASSY PIPE PLUG PIPE PLUG PUMP CASING GASKET	46335-066 25812-161 26841-094 6588AG P02 46335-087 P02 P06 R11618	  15079  15079 15079 19060	1 1 1 1 1 1 1 1	ОРТІ	ONAL:  DISCHARGE CHECK VA  -CHECK VALVE  -CHECK VALVE GSKT  -HEX HD CAPSCREW  -HEX NUT  BRONZE IMPELLER  AIR RELEASE VALVE	LVE 26642—205 K79206—25 B1011 D10 N18952 GRP52—05	15991 15991 15991 14150	1 1 8 8 1 1


<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK


- † ALL ROTO-PRIME™ IMPELLERS ARE TRIMMED.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.
- INCLUDED WITH REPAIR 46474-343 --- 1
  PUMP CASING ASSY


### **GORMAN-RUPP PUMPS**

### RD4A32-B

### S/N 1195933N Up PUMP ISSUE 3

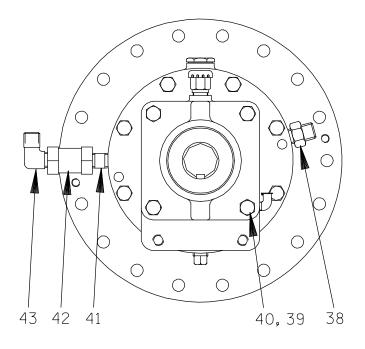

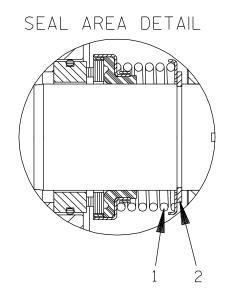

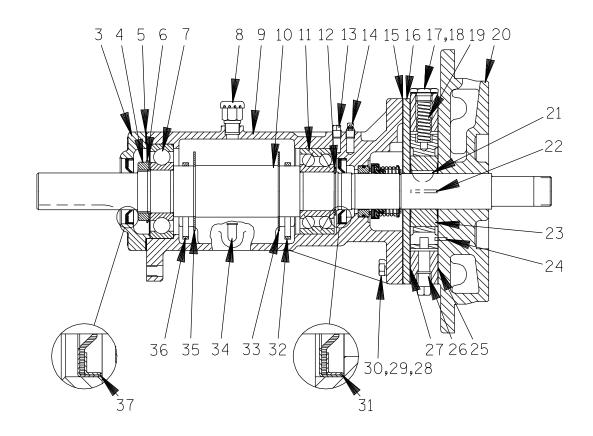

### **GORMAN-RUPP PUMPS**

www.grpumps.com

3 of 5

### RD4A32-B


**S/N 1195933N Up PUMP ISSUE 3** 

PARTS LIST R12924-02 Bearing Housing Assembly

ITEM PART NAME NO.	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1 * SEAL ASSEMBLY 2 SEAL RETAINING RING 3 BEARING CAP 4 BEARING LOCK NUT 5 * BEARING CAP GASKET 6 TAB WASHER 7 * OUTBOARD BEARING 8 AIR VENT 9 BEARING HOUSING 10 * IMPELLER SHAFT 11 * BALL BEARING 12 BEARING RET RING 13 PIPE PLUG 14 AIR VENT 15 * SPACER PLATE GASKET 16 SPACER PLATE 17 PRESS REG SPRING CAP 18 * SPRING CAP GASKET 19 * PRESS REG SPRING	25271-921 24124-243 R12770-02 23962-011 N18938-01 23962-511 23275-211 S1703 W01172-04 T08623-02 23421-410 24124-245 P02 S2162 R12923 R12771-02 K68064 K86067 K82659	10010  18000  11010 15010  15079  18000 11010 15991 	1 1 1 1 1 1 1 1 1 1	25 † 26 27 * 28 29 30 31 * 32 33 34 35 36 37 * 38 39 40 41 42 43	PIPE PLUG  CENTER PLATE GASKE HEX HD CAPSCREW LOCKWASHER DOWEL PIN  OIL SEAL SLINGER RING SLINGER RING STOP OILER SLINGER RING STOP SLINGER RING	P06	15030 1 14 15030 1 15030 0 15991 15991 15079 2	2 1 1 8 8 2 1 1 1 1 1 1 1 1 4 4 1 1
20 BODY COVER 21 * ROTOR WOODRUFF KEY 22 * ROTOR BLADE 23 GROUP GRIND 24 * LOCATING PIN	T06762-21	10140 15990 	1 1 1 6 1		SHOWN: PIPE PLUG DNAL: SST IMPELLER SHAFT	P02 T08623-02	15079 2 17080	1

<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

 $<sup>\</sup>dagger$   $\,$  2 GASKETS REQUIRED WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

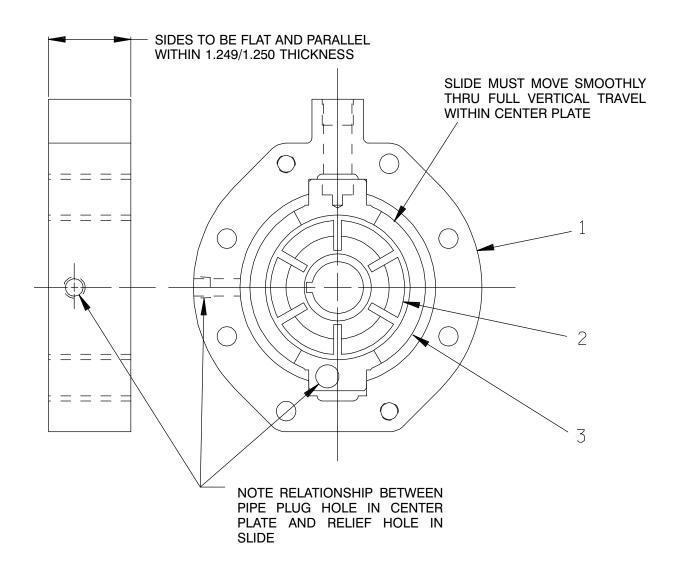

### PARTS LIST LK05268 Group Grind

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	CENTER PLATE	NOT AVAILABLE		1
2	ROTOR	NOT AVAILABLE		1
3	SLIDE	NOT AVAILABLE		1

**NOTE:** THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

### **GORMAN-RUPP PUMPS**

www.grpumps.com

5 of 5

# For U.S. and International Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280 International: +1-419-755-1352

For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870