PUBLICATION NUMBER PL-03990-04 October 22, 2015 Rev. A 11-7-2023

Use With: OM-03989 MR-03991



PUMP MODEL RS2A32—BAR

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

GORMAN-RUPP PUMPS

Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

RS SERIES PUMP PL—03990

PERFORMANCE CURVE - SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied. For warranty information, please visit www.grpumps.com/warranty.

PERFORMANCE CURVE

The performance curve on the following page is based on 70°F (21°C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PAGE A - 1 PART LIST MANUAL

PL-03990 RS SERIES PUMP

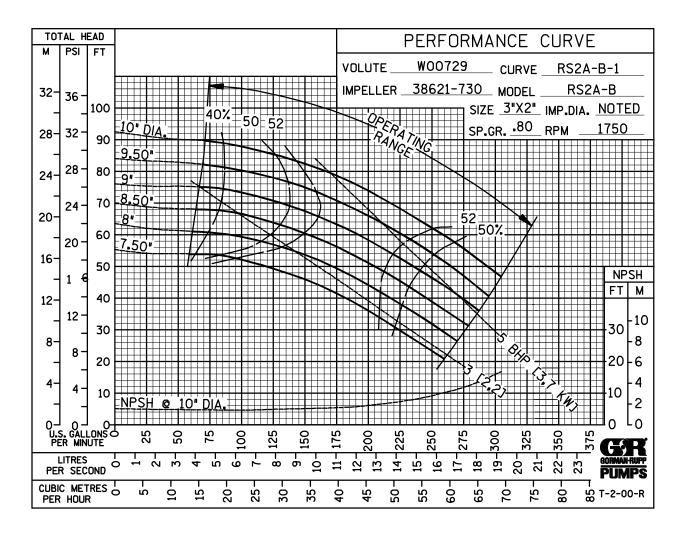

Performance Curve - Model RS2A32-BAR

PARTS LIST MANUAL PAGE A – 2


RS SERIES PUMP PL-03990

This Page Intentionally Blank

PAGE A – 3 PART LIST MANUAL

RS2A32-BAR

S/N 1630875 Up PUMP ISSUE 4

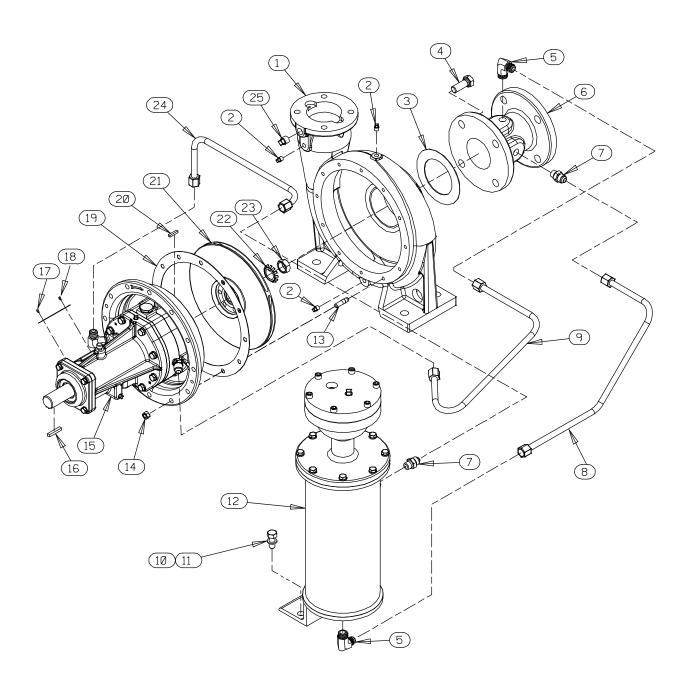

GORMAN-RUPP PUMPS

S/N 1630875 Up PUMP ISSUE 4

PARTS LIST Pump Model RS2A32—BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM PART NAME NO.	PART NUMBER	QTY	ITEM PART NAME PART QT NO. NUMBER	Υ
PUMP CASING PIPE PLUG 3 ** RING GASKET 4 HEX HEAD CAP SCREW 5 MALE ELBOW 6 SUCTION FLANGE 7 CONNECTOR 8 RETURN TUBE ASSY. 9 SUCTION TUBE ASSY. 10 HEX HEAD CAPSCREW 11 LOCK WASHER 12 ● AIR REL VALVE ASSY 13 STUD 14 HEX NUT 15 BEARING HSG ASSY 16 ** DRIVE KEY 17 NAMEPLATE	SEE NOTE BELOW P02 15079 38681-818 19370 B1007 15991 25812-011 10845B 10140 25812-214 46335-056 46335-055 B0805 15991 J08 15991 GRP33-08B C0606 15991 D06 15991 44143-112 N0406 15990 2613DZ 13990	1 4 1 4 2 1 2 1 1 2 2 1 12 12 12 11 12	20 ★ IMPELLER KEY K79328—23 15990 † 21 ★ IMPELLER 38621—730 13048 22 BRG LOCK WASHER 23962—506 23 IMPELLER LOCK NUT K75775 15111 24 DISCHARGE TUBE ASSY. 46335—095 P25 PIPE PLUG P06 15079 NOT SHOWN ★ CHK VALVE BODY GSKT 11589GA 19060 ★ DISCHARGE GASKET N14226 19060 INSTRUCTION TAG 38817—011 BEARING TAG 6588ABB ROTATION DECAL 2613M DISCHARGE STICKER 6588BJ SUCTION STICKER 6588BJ SUCTION STICKER 6588AG G-R DECAL GR—03 LUBRICATION DECAL 38816—081 OPTIONAL:	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
18 DRIVE SCREW 19 * BODY COVER GASKET	BM#04-03 17000 R08108 19060	2 1	COMPANION FLANGE KIT (SUCT AND DISCHAR K33849	GE) 1


^{*} INDICATES PARTS RECOMMENDED FOR STOCK

- † ALL ROTO-PRIME® IMPELLERS ARE TRIMMED.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.
- IP INCLUDED WITH REPAIR 46474-338 1
 PUMP CASING ASSY

GORMAN-RUPP PUMPS

RS2A32-BAR

S/N 1630875 Up PUMP ISSUE 4

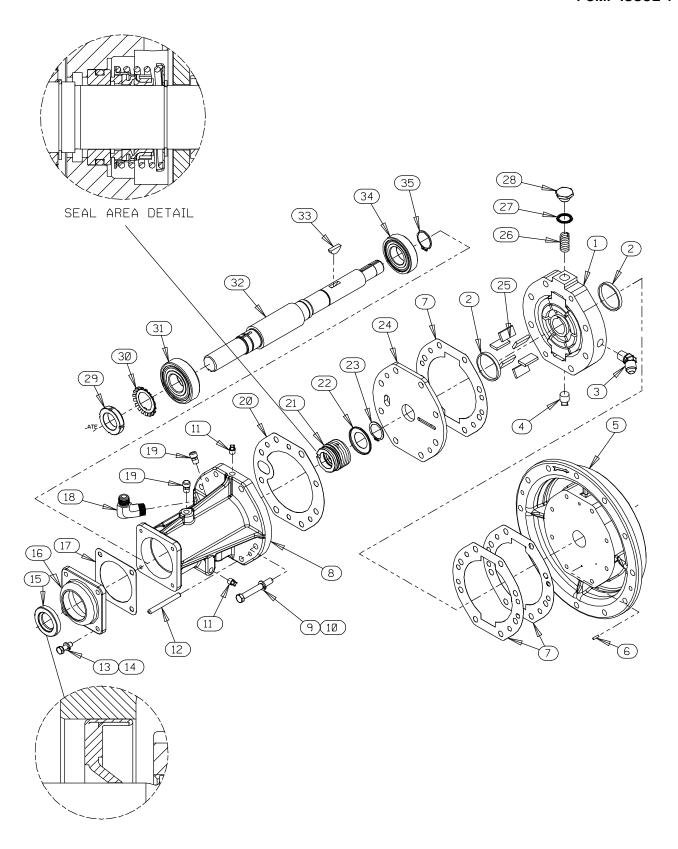

GORMAN-RUPP PUMPS

RS2A32-BAR

S/N 1630875 Up PUMP ISSUE 4

PARTS LIST 44143-112 Bearing Housing Assembly


1 GROUP GRIND LK05296 1 23 SNAP RING S700 2 BLADE SPACER K74031 15030 2 24 SPACER PLATE N14129 11010 3 MALE ELBOW 25812—161 1 25 * ROTOR BLADE K79300—20 4 PIPE PLUG P06 15079 1 26 PRESS REG SPRING K76301 5 BODY COVER T03532A 10140 1 27 PRESS REG GASKET K86067 6 * LOCATOR PIN 21154—666 1 28 SPRING CAP K68064 15991 † 7 * GASKET N14145 18010 3 29 BEARING LOCK NUT S301 8 BEARING HOUSING T02990 11010 1 30 LOCK WASHER S302 9 LOCK WASHER J06 15991 8 31 * BALL BEARING 23282—008 10 HEX HEAD CAP SCREW B0612 15991 8 32 * IMPELLER SHAFT R09454 15010 11 PIPE PLUG P02 15079 2 33 * WOODRUFF KEY K61559 15990 13 LOCK WASHER J05 15991 4 34 * BALL BEARING 23257—012 14 HEX HEAD CAP SCREW B0504 15991 4 35 SNAP RING S248 15 * OIL SEAL 25227—230 1 OPTIONAL: 16 BEARING HOUSING CAP N14130 10010 1 SST IMPELLER SHAFT R09454 17080 17 * GASKET K74033 18000 1 TEFLON SEAL ASSY 25271—743 18 MALE ELBOW 25812—011 1 OIL LUBE BEARING 44143—113	ITEM PART NAME NO.	PART NUMBER	QTY	ITEM PART NAME NO.	PART NUMBER	QTY
19 AIR VENT S2162 2 HOUSING ASSEMBLY 20 * GASKET N14144 18000 1 -INBOARD BEARING S310 21 * MECH SEAL 1-1/4 25271-192 1 -OUTBOARD BEARING 23275-008 22 SPRING HOLDER 25273-266 1 -OIL CUP 26713-051	2 BLADE SPACER 3 MALE ELBOW 4 PIPE PLUG 5 BODY COVER 6 * LOCATOR PIN † 7 * GASKET 8 BEARING HOUSING 9 LOCK WASHER 10 HEX HEAD CAP SCREW 11 PIPE PLUG 12 DOWEL PIN 13 LOCK WASHER 14 HEX HEAD CAP SCREW 15 * OIL SEAL 16 BEARING HOUSING CAP 17 * GASKET 18 MALE ELBOW 19 AIR VENT 20 * GASKET 21 * MECH SEAL 1-1/4	K74031 15030 25812—161 P06 15079 T03532A 10140 21154—666 N14145 18010 T02990 11010 J06 15991 B0612 15991 P02 15079 21133—073 J05 15991 B0504 15991 25227—230 N14130 10010 K74033 18000 25812—011 S2162 N14144 18000 25271—192	1 1 1 1 3 1 8 8 2 2	24 SPACER PLATE 25 * ROTOR BLADE 26 PRESS REG SPRING 27 PRESS REG GASKET 28 SPRING CAP 29 BEARING LOCK NUT 30 LOCK WASHER 31 * BALL BEARING 32 * IMPELLER SHAFT 33 * WOODRUFF KEY 34 * BALL BEARING 35 SNAP RING OPTIONAL: SST IMPELLER SHAFT TEFLON SEAL ASSY OIL LUBE BEARING HOUSING ASSEMBLY —INBOARD BEARING —OUTBOARD BEARING	N14129 11010 K79300—20 K76301 K86067 K68064 15991 S301 S302 23282—008 R09454 15010 K61559 15990 23257—012 S248 R09454 17080 25271—743 44143—113 S310 23275—008	1 6 1 1 1 1 1 1 1 1 1

^{*} INDICATES PARTS RECOMMENDED FOR STOCK

GORMAN-RUPP PUMPS

^{† 2} GASKETS REQUIRED ON ONE FACE ONLY WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

[•] ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.

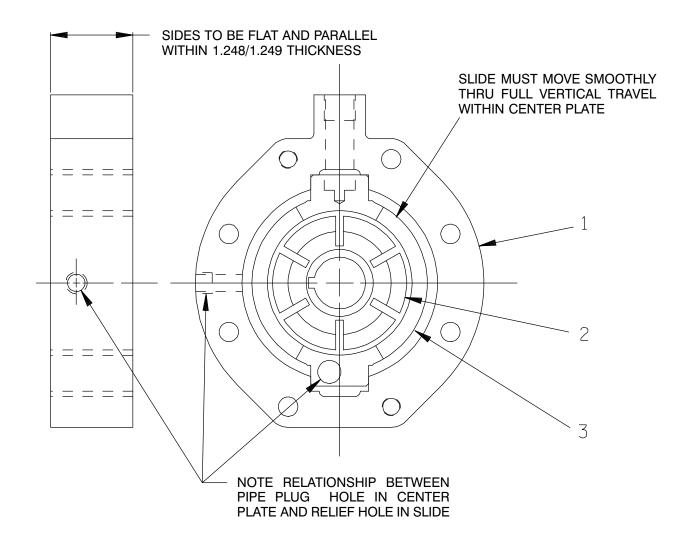

PARTS LIST LK05296 Group Grind

ITEM NO.	PART NAME	PART NUMBER	QTY
1	CENTER PLATE	NOT AVAILABLE	1
2	ROTOR	NOT AVAILABLE	1
3	SLIDE	NOT AVAILABLE	1

NOTE: THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

GORMAN-RUPP PUMPS

For Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280

Canada: 519-631-2870

International: +1-419-755-1352