Use With: OM-03989 MR-03991



PUMP MODEL RS3A32—BAR

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

RS SERIES PUMP PL-04003

PERFORMANCE CURVE - SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.

PERFORMANCE CURVE

The performance curve on the following page is based on 70° F (21° C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PAGE A - 1 PART LIST MANUAL

PL-04003 RS SERIES PUMP

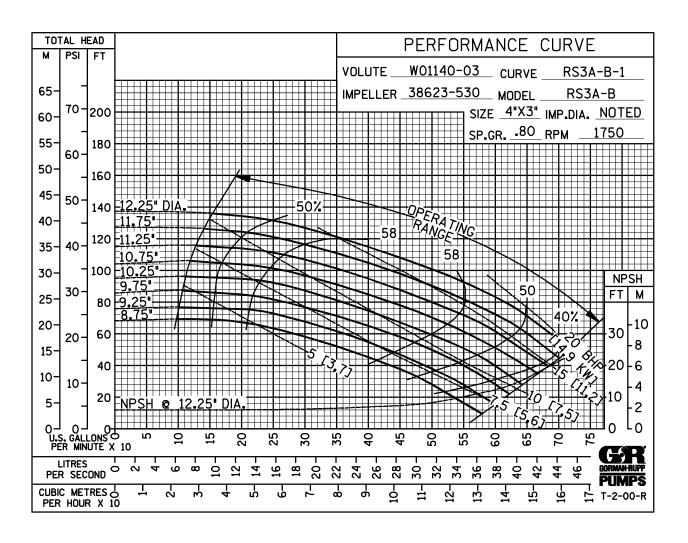

Performance Curve - Model RS3A32-BAR

PARTS LIST MANUAL PAGE A – 2


RS SERIES PUMP PL-04003

This Page Intentionally Blank

PAGE A – 3 PART LIST MANUAL

B RS3A32-BAR

S/N 1198336N Up PUMP ISSUE 4

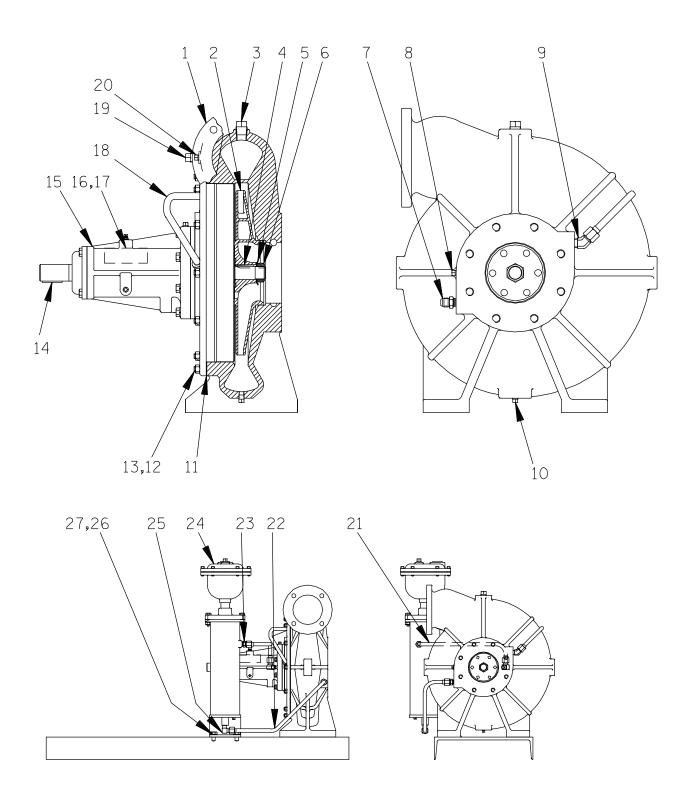

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

RS3A32-BAR

S/N 1198336N Up PUMP ISSUE 4

PARTS LIST Pump Model RS3A32—BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.


ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM PART NAME PART MAT'L Q NO. NUMBER CODE	YTÇ
1 2 * 3 4 * 5 6 7 8 9 10 11 * 12 13 14 * 15 16	PIPE PLUG IMPELLER KEY BRG LOCKWASHER IMPELLER NUT MALE CONNECTOR PIPE PLUG MALE ELBOW PIPE PLUG PUMP CASING GASKET STUD HEX NUT SHAFT KEY BRG HOUSING ASSY NAME PLATE	W01140-03 38623-530 P08 K79329-23 23962-506 K75776 25812-214 P02 25812-161 P02 N14146 C0606 D06 N0406 R12051-011 2613DZ	13048 15079 15990 15111 15079 15079 20000 15991 15990 13990	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 1 1 1 1	22 RETURN TUBE ASSY 46335—075 —— 23 MALE CONNECTOR 25812—214 —— 24 ● AIR RELEASE VALVE GRP33—06B —— 25 MALE ELBOW 25812—011 —— 26 HEX HD CAPSCREW B0805 15991 27 LOCKWASHER J08 15991 NOT SHOWN: ** SUCT FLANGE GASKET N14147 18000 ** DISCH FLANGE GASKET 11589GA 18000 SUCTION STICKER 6588AG —— ROTATION DECAL 2613M —— LUBE DECAL 38816—081 —— INSTRUCTION TAG 38817—011 —— DISCHARGE STICKER 6588BJ —— GR DECAL GR—03 —— GR DECAL GR—03 —— BEARIBG TAG 6588ABB ——	1 1 1 1 2 2 1 1 1 1 1 1 1 1 1
17 18	PRIMING TUBE ASSY	BM#04-03 46335-085	17000	2 1	OPTIONAL:	
19 20 21	PIPE PLUG PIPE PLUG DISCHARGE TUBE ASSY	P06 P02 46335-074	15079 15079 	1 1 1	COMPANION FLANGES (SUCT AND DISCHARGE -COMPANION FLG KIT K33850 STEEL TUBING KIT 48263-508	1 1


 $[\]frak*$ INDICATES PARTS RECOMMENDED FOR STOCK


- † ALL ROTO-PRIME® IMPELLERS ARE TRIMMED.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.

В RS3A32-BAR

S/N 1198336N Up PUMP ISSUE 4

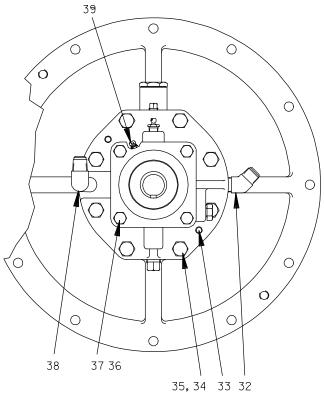

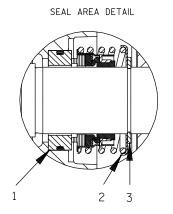

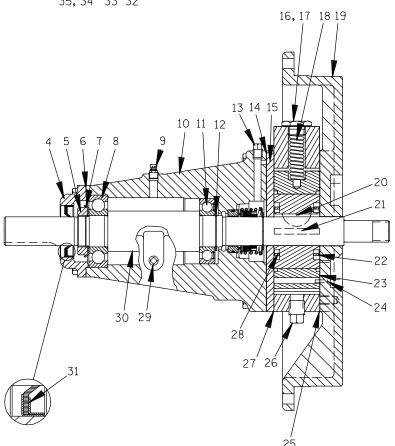

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Printed in U.S.A.

RS3A32-BAR

S/N 1198336N Up PUMP ISSUE 4


PARTS LIST R12051-11 Bearing Housing Assembly

ITEM PART NAME NO.	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1 * SEAL ASSEMBLY	25271-192		1	25 🕏	OLIVILITY DATE OF YORK		18010	2
2 SPRING HOLDER	25273-266		1	26	PIPE PLUG	P06	15079	1
3 SEAL SNAP RING	S700		1	27 →			18010	1
4 BEARING CAP	N14130	10010	1	28	ROTOR BLADE SPACE		15030	1
5 BEARING LOCK NUT	S301		1	29	PIPE PLUG	P02	15079	1
6 ★ BEARING CAP GASKET	K74033	18000	1	30 →	[₭] IMPELLER SHAFT	R10123	15010	1
7 TAB WASHER	S302		1	31 →	OIL SEAL	25227-230)	1
8 * OUTBOARD BEARING	23282-008		1	32	MALE ELBOW	25812—16 ⁻		1
9 AIR VENT	S2162		1	33	DOWEL PIN	21133-076	-	2
10 BEARING HOUSING	T02990	11010	1	34	HEX HD CAPSCREW	B0615	15991	8
11 [★] BALL BEARING	23257-012		1	35	LOCKWASHER	J06	15991	8
12 BEARING RET RING	S248		1	36	HEX HD CAPSCREW	B0504	15991	4
13 PIPE PLUG	P02	15079	1	37 38	LOCKWASHER MALE ELBOW	J05 25812-01	15991	4
14 ★ SPACER PLATE GASKET	N14144	18000	1	39	AIR VENT	S2162		1
15 SPACER PLATE	N14129	11010	1	33	AIII VLIVI	32102		
16 PRESS REG SPRING CAP	K68064	15991	1	OPTIO	ONAL ·			
17 [★] SPRING CAP GASKET	K86067		1	1	**PRESS REG SPRING	K74119		1
18 [★] PRESS REG SPRING	K74120		1		SST IMPELLER SHAFT		17080	1
19 BODY COVER	T02985B-01	10140	1		TEFLON SEAL ASSY	25271-743		1
20 ★ ROTOR WOODRUFF KEY	K74041	15990	1	(OIL LUBE BEARING	44143-104	4	1
21 [★] ROTOR BLADE	K79300-21		6		HOUSING ASSEMBLY		-	•
22 ROTOR BLADE SPACER	K74031	15030	1		INBOARD BEARING	G S310		1
23 GROUP GRIND	LK05293		1		OUTBOARD BEAR		3	1
24 * LOCATING PIN	21154-666		1	1	OIL CUP	26713-05°	1	1

^{*} INDICATES PARTS RECOMMENDED FOR STOCK

- † 2 GASKETS REQUIRED WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.
- ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.
- ** USE IN PLACE OF K74120 (ITEM 18) WITH IMPELLERS 10 1/2 INCHES OR SMALLER IN DIAMETER.

S/N 1198336N Up **PUMP ISSUE 4**

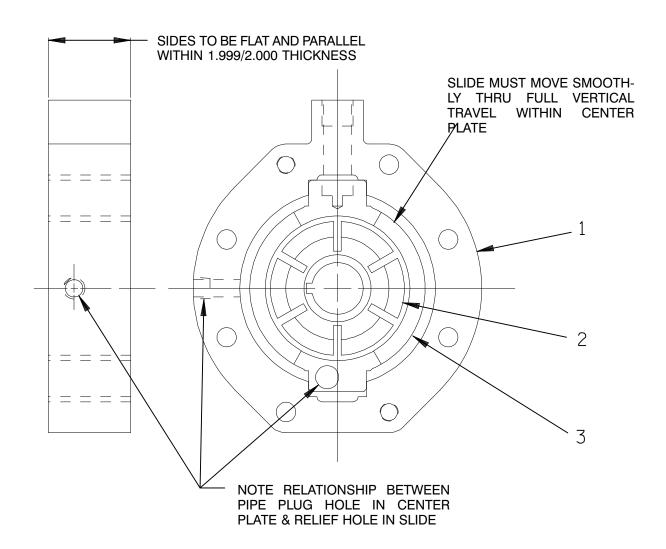

PARTS LIST LK05293 Group Grind

-					
	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
	1	CENTER PLATE	NOT AVAILABLE		1
	2	ROTOR	NOT AVAILABLE		1
	3	SLIDE	NOT AVAILABLE		1

NOTE: THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Printed in U.S.A.

For U.S. and International Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280 International: +1-419-755-1352

For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870