PUBLICATION NUMBER PL-04003-05 October 22, 2015 Rev. A 11-6-2023

Use With: OM-03989 MR-03991



# PUMP MODEL RS3A32—BAR

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

**GORMAN-RUPP PUMPS** 

# Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

## **RECORD YOUR PUMP MODEL AND SERIAL NUMBER**

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

RS SERIES PUMP PL-04003

### PERFORMANCE CURVE - SECTION A

# RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

#### WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied. For warranty information, please visit www.grpumps.com/warranty.

#### PERFORMANCE CURVE

The performance curve on the following page is based on 70°F (21°C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PAGE A - 1 PART LIST MANUAL

PL-04003 RS SERIES PUMP

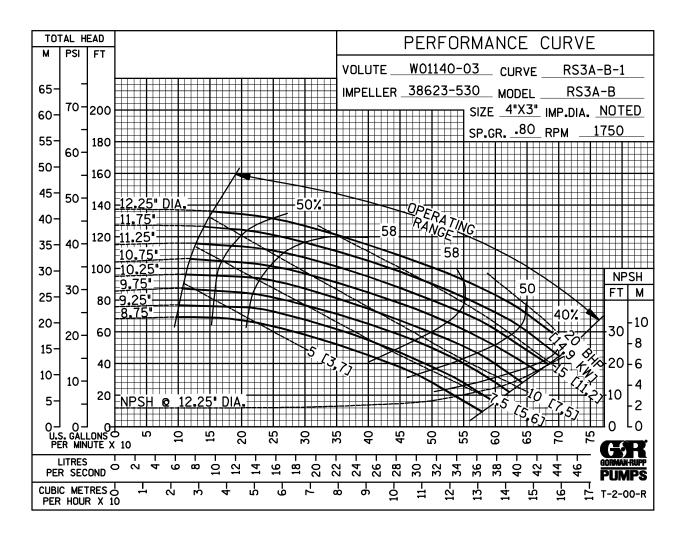

#### Performance Curve - Model RS3A32-BAR

PARTS LIST MANUAL PAGE A – 2


RS SERIES PUMP PL-04003

This Page Intentionally Blank

PAGE A – 3 PART LIST MANUAL

## RS3A32-BAR

# **S/N 1624402 Up PUMP ISSUE 5**

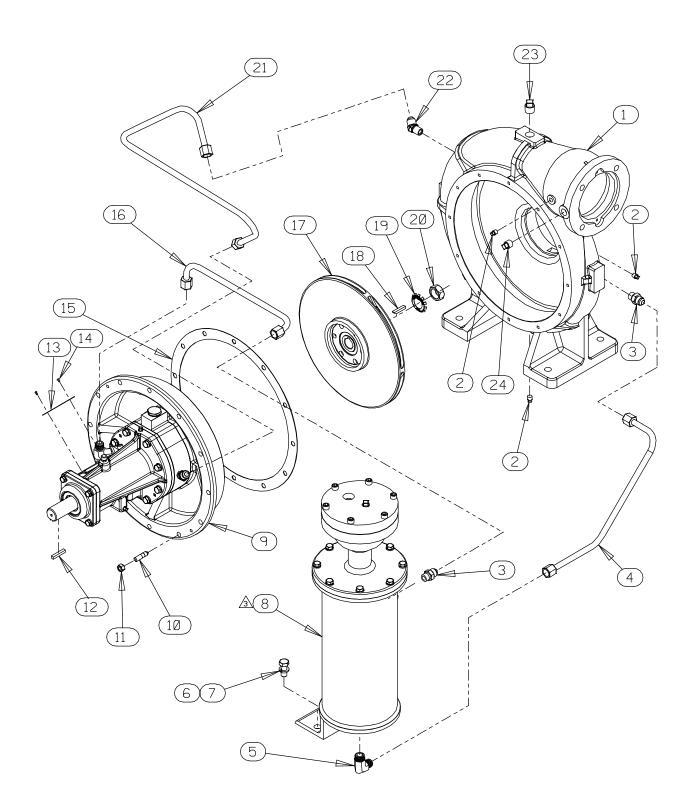

## **GORMAN-RUPP PUMPS**

**S/N 1624402 Up PUMP ISSUE 5** 

## PARTS LIST Pump Model RS3A32—BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM PART NAME NO.	PART NUMBER	QTY	ITEM PART NAME NO.	PART NUMBER	QTY
□ 1 PUMP CASING □ 2 PIPE PLUG 3 CONNECTOR 4 RETURN TUBE ASSY 5 MALE ELBOW 6 HEX HEAD CAP SCREW 7 LOCK WASHER 8 AIR REL VALVE ASSY 9 BEARING HSG ASSY □ 10 STUD 11 HEX NUT 12 * DRIVE KEY 13 NAMEPLATE 14 DRIVE SCREW 15 * BODY COVER GASKET 16 DISCHARGE TUBE ASSY † 17 * IMPELLER 18 IMPELLER	SEE NOTE BELOW P02 15079 25812-214 46335-075 25812-011 B0805 15991 J08 15991 GRP33-08B R12051-11 C0606 15991 D06 15991 N0406 15991 N0406 15990 2613DZ 13990 BM#04-03 17000 N14146 19060 46335-096 38623-530 13048 K79329-23 15990	1 3 2 1 1 2 2 1 12 12 1 1 2 1 1 2 1 1 1 2 1 1 1 1 2 1	19 LOCK WASHER 20 IMPELLER NUT 21 PRIMING TUBE 22 MALE ELBOW  123 PIPE PLUG  124 PIPE PLUG  NOT SHOWN:  * CHK VALVE BODY GSKT  * SUCT COVER GASKET G-R DECAL SUCTION STICKER ROTATION DECAL LUBRICATION DECAL LUBRICATION DECAL INSTRUCTION TAG DISCHARGE STICKER BEARING TAG  OPTIONAL: COMPANION FLANGE KIT	23962-519 K75776 15111 46335-085 25812-161 P08 15079 P06 15079 11589GA 19060 N14147 19060 GR-03 6588AG 2613M 38816-081 38817-011 6588BJ 6588ABB (SUCT AND DISC K33850	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1


<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

- † ALL ROTO-PRIME® IMPELLERS ARE TRIMMED AND INCLUDE WEAR RINGS AND GROOVE PINS. WEAR RINGS ARE NOT SOLD SEPARATELY.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.
- INCLUDED WITH REPAIR 46474—341 1
  PUMP CASING ASSY

**GORMAN-RUPP PUMPS** 

### RS3A32-BAR

# **S/N 1624402 Up PUMP ISSUE 5**

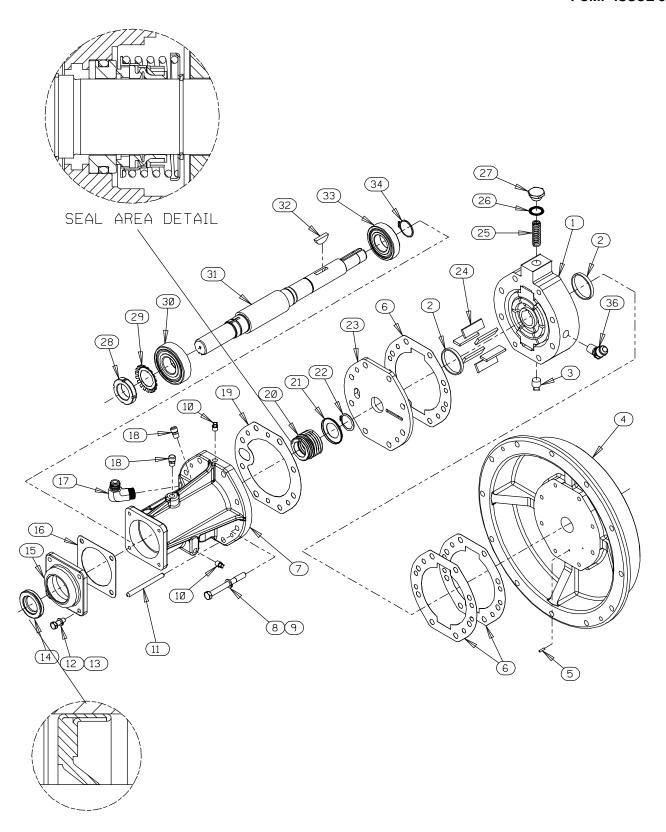

# **GORMAN-RUPP PUMPS**

### RS3A32-BAR


S/N 1624402 Up PUMP ISSUE 5

PARTS LIST R12051-11 Bearing Housing Assembly

ITEM PART NAME NO.	PART ( NUMBER	YTÇ	ITEM PAF NO.	RT NAME	PART NUMBER	QTY
2 BLADE SPACER 3 PIPE PLUG 4 BODY COVER L.H. 5 * LOCATING PIN † 6 * CENTER PLATE GSKT 7 BEARING HOUSING 8 LOCK WASHER 9 HEX HEAD CAP SCREW 10 PIPE PLUG 11 DOWEL PIN 12 LOCK WASHER 13 HEX HEAD CAP SCREW 14 * OIL SEAL 15 BEARING HOUSING CAP 16 * BRG HSG CAP GSKT 17 MALE ELBOW 18 AIR VENT 19 * SPACER PLATE GSKT 20 * MECH SEAL 1-1/4 21 SPRING HOLDER	LK05293 K74031 15030 P06 15079 T02985B-01 10140 21154-666 N14145 18010 T02990 11010 J06 15991 B0615 15991 P02 15079 21133-076 J05 15991 B0504 15991 25227-230 N14130 10010 K74033 18000 25812-011 S2162 N14144 18000 25271-192 25273-266 S700	1 2 1 1 1 3 1 8 8 8 2 2 4 4 4 1 1 1 1 2 1 1 1 1 1 1 1 1 1 1	23 24 * 25 26 * 27 28 29 30 * 31 * 32 * 33 * 34 35 OPTION	SPACER PLATE ROTOR BLADE PRESS REG SPRING RING GASKET SPRING CAP BEARING LOCK NUT LOCK WASHER BALL BEARING IMPELLER SHAFT WOODRUFF KEY BALL BEARING SNAP RING MALE ELBOW AL: SST IMPELLER SHAFT TEFLON SEAL ASSY OIL LUBE BEARING HOUSING ASSEMBLY —INBOARD BEARING —OUTBOARD BEARING —OIL CUP	N14129 11010 K79300-21 K74119 K86067 K68064 15991 S301 S302 23282-008 R10123 15010 K74041 15590 23257-012 S248 25812-161 R10769 17080 25271-743 44143-104 S310 23275-008 26713-051	1 6 1 1 1 1 1 1 1 1 1 1 1

<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

- † 2 GASKETS REQUIRED ON ONE FACE ONLY WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.
- ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.

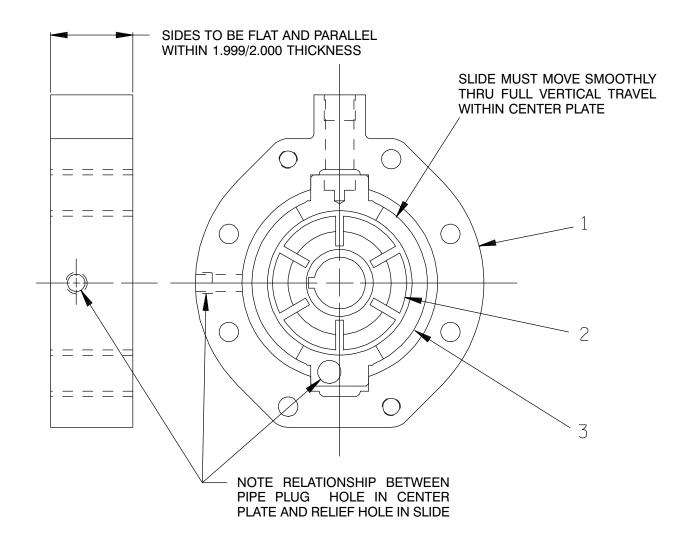

# PARTS LIST LK05293 Group Grind

ITEM		PART	
NO.	PART NAME	NUMBER	QTY
1	CENTER PLATE	NOT AVAILABLE	1
2	ROTOR	NOT AVAILABLE	1
3	SLIDE	NOT AVAILABLE	1

**NOTE:** THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

## **GORMAN-RUPP PUMPS**

# For Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280

Canada: 519-631-2870

International: +1-419-755-1352