

# PUMP MODEL RS5A31-BAR

MANUAL PART 2 of 3

# PARTS LIST WITH PERFORMANCE CURVE

# **GORMAN-RUPP PUMPS**

www.grpumps.com

©1999 Gorman-Rupp Pumps

#### Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

#### **RECORD YOUR PUMP MODEL AND SERIAL NUMBER**

Please record your pump model and serial number in the spaces provided below. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:

Serial Number:

# **PERFORMANCE CURVE – SECTION A**

#### RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:

Serial Number:

#### WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.


#### PERFORMANCE CURVE

The performance curve on the following page is based on 70°F (21°C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

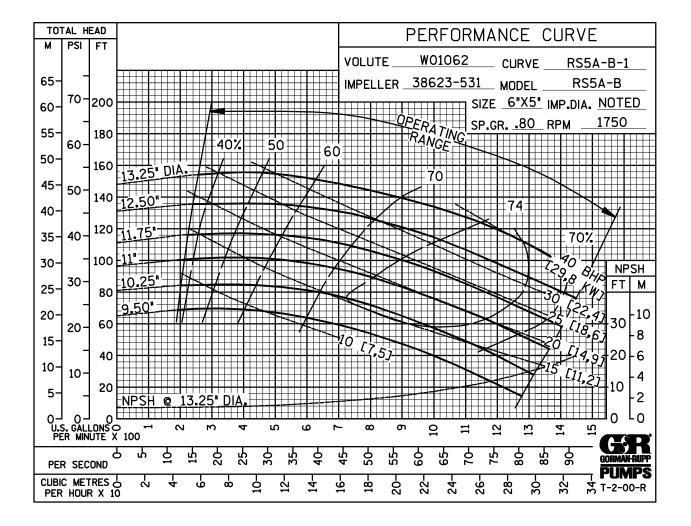


Performance Curve – Model RS5A31–BAR

This Page Intentionally Blank

# RS5A31-BAR

S/N 1217390 Up PUMP ISSUE 2

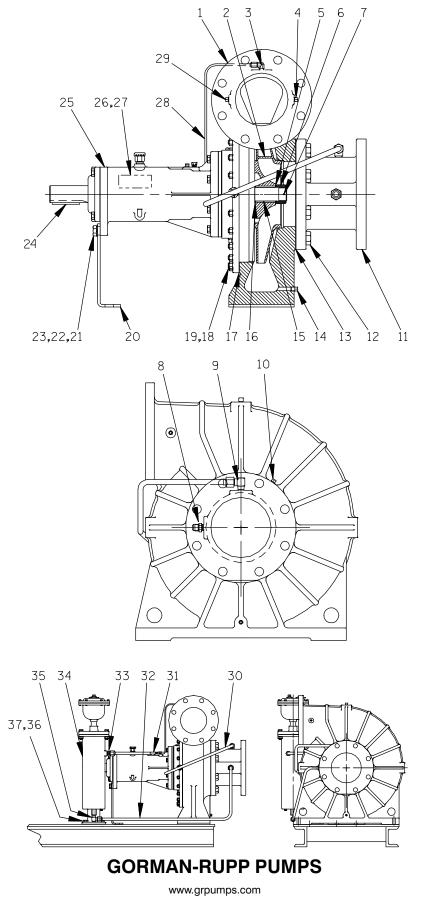

1 of 5

S/N 1217390 Up PUMP ISSUE 2

#### PARTS LIST Pump Model RS5A31-BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

| ITEM<br>NO.   | PART NAME  | PART<br>NUMBER   | MAT'L<br>CODE   | QTY  | ITEM PART NAME PART MAT'L QT<br>NO. NUMBER CODE   | ΩTY  |
|---|--|--|---|--|---|--|
| □ 1<br>2 *<br>3<br>□ 4<br>5<br>6<br>7<br>8<br>9<br>□ 10<br>11<br>12<br>13 *<br>□ 14<br>15 *<br>16 *<br>17 *<br>18<br>17 *<br>18<br>19<br>20 | MALE ELBOW<br>PIPE PLUG<br>IMPELLER WASHER<br>IMPELLER NUT<br>SPIRAL PIN<br>MALE CONNECTOR<br>MALE ELBOW<br>PIPE PLUG<br>SUCTION FLANGE<br>HEX HD CAPSCREW<br>SUCT FLANGE GASKET<br>PIPE PLUG<br>IMPELLER KEY<br>IMPELLER WASHER | SEE NOTE B<br>38623–531<br>25817–032<br>P02<br>K76643<br>K88233<br>21137–079<br>25812–214<br>25812–011<br>P02<br>11402F<br>B1208<br>38682–208<br>P02<br>K79330<br>K76643<br>N15237–21<br>C0606 1/2<br>D06<br>R12852–02 | ELOW<br>13048<br><br>15079<br>15991<br>15111<br><br>15079<br>10140<br>15991<br>19370<br>15079<br>16120<br>15991<br>20000<br>15991<br>15991<br>15991<br>15991<br>15990 | 1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>2<br>1<br>24<br>24<br>24<br>1 | 28  SEAL TUBE ASSY  46335-059     1  PIPE PLUG  P02  15079    30  SUCTION TUBE ASSY  46335-079     31  DISCHARGE TUBE ASSY  46335-077     32  RETURN TUBE ASSY  46335-078     33  MALE CONNECTOR  25812-214     34  AIR RELEASE VALVE  GRP33-06A     35  MALE ELBOW  25812-011     36  HEX HD CAPSCREW  B0805  15991    37  LOCKWASHER  J08  15991    37  LOCKWASHER  J08  15991    37  LOCKWASHER  J08  15991    37  LOCKWASHER  J08  15991    X  SUCT FLANGE GASKET  1678G  18000    & SUCT FLANGE GASKET  1678G  18000    G-R DECAL  GR-03     ROTATION DECAL  2613M     SUCTION STICKER  6588AG | 1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1 |
| 21  | HEX HD CAPSCREW  | B0805  | 15991   | 2  | OPTIONAL:   | 1  |
| 22  | LOCKWASHER   | J08  | 15991   | 2  | DISCHARGE CHECK VALVE   |  |
| 23  | FLAT WASHER  | K08  | 15991   | 2  | -CHECK VALVE 26642-106  |  |
| 24 *  | SHAFT KEY  | N0611  | 15990   | 1  | -HEX HD CAPSCREW  B1212  15991    -GASKET  38682–208  19730    -HEX NUT  D12  15991    STEEL TUBING KIT  48263–515  | 8  |
| 25  | BRG HOUSING ASSY   | 44143-092  |   | 1  |   | 1  |
| 26  | NAME PLATE   | 2613DZ   | 13990   | 1  |   | 8  |
| 27  | DRIVE SCREW  | BM#04-03   | 17000   | 2  |   | 1  |


\* INDICATES PARTS RECOMMENDED FOR STOCK


- † ALL ROTO-PRIME® IMPELLERS ARE TRIMMED.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.
- INCLUDED WITH REPAIR 46474−335 −−− 1 PUMP CASING ASSY


# **GORMAN-RUPP PUMPS**

RS5A31-BAR

S/N 1217390 Up PUMP ISSUE 2

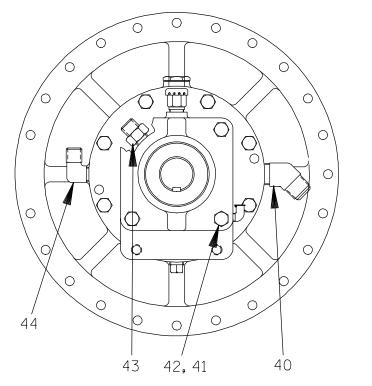

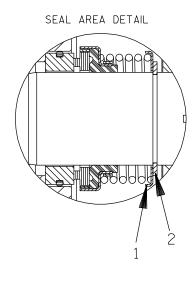

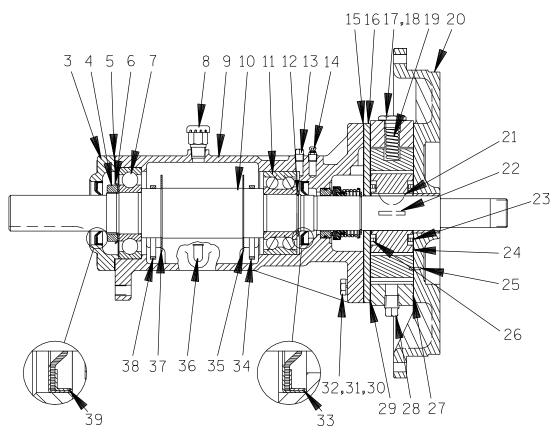

# **GORMAN-RUPP PUMPS**

# RS5A31-BAR

#### S/N 1217390 Up PUMP ISSUE 2

|   | Part<br>Number | MAT'L<br>CODE | QTY | ITEM<br>NO.        | PART NAME          |           | MAT'L (<br>CODE | ΫΤζ |
|---|----------------|---------------|-----|--------------------|--------------------|-----------|-----------------|-----|
| 1 $*$ SEAL ASSEMBLY 25                    | 5271-921       |               | 1   | 26                 | ROTOR BLADE SPACE  | R K76623  | 15030           | 1   |
| 2 RETAINING RING 24                       | 4124–243       |               | 1   | 27 †               | CENTER PLATE GASKE | T R10150  | 19210           | 2   |
| 3 BEARING CAP R <sup>-</sup>              | 12770-02       | 10010         | 1   | 28                 | PIPE PLUG          | P06       | 15079           | 1   |
| 4 BEARING LOCK NUT 23                     | 3962-011       |               | 1   | 29 <sup>&gt;</sup> | CENTER PLATE GASKE | T R10150  | 18010           | 1   |
| 5 $*$ BEARING CAP GASKET N                | 18938-01       | 18000         | 1   | 30                 | HEX HD CAPSCREW    | B0615     | 15991           | 8   |
| 6 BRG LOCKWASHER 23                       | 3962-511       |               | 1   | 31                 | LOCKWASHER         | J06       | 15991           | 8   |
| 7 * OUTBOARD BEARING S1                   | 31077          |               | 1   | 32                 | DOWEL PIN          | 21133-116 |                 | - 2 |
| 8 AIR VENT S                              | 61703          |               | 1   | 33 <sup>&gt;</sup> | OIL SEAL           | 25227-240 |                 | - 1 |
| 9 BEARING HOUSING W                       | V01172-04      | 11010         | 1   | 34                 | OIL RING           | K86483    | 15030           | 1   |
| 10 * IMPELLER SHAFT TO                    | 08620-02       | 15010         | 1   | 35                 | OIL RING STOP      | K76632-01 |                 | - 1 |
| 11 * INBOARD BEARING 23                   | 3421-410       |               | 1   | 36                 | OILER              | 26713-054 |                 | - 1 |
| 12 BEARING RET RING 24                    | 4124–245       |               | 1   | 37                 | OIL RING STOP      | K76632-01 |                 | - 1 |
| 13 PIPE PLUG PC                           | 02             | 15079         | 1   | 38                 | OIL RING           | K86483    | 15030           | 1   |
| 14 AIR VENT FITTING S2                    | 2162           |               | 1   | 39 ¥               | OIL SEAL           | 25227-240 |                 | - 1 |
| 15 $*$ SPACER PLATE GASKET R <sup>-</sup> | 12923          | 18000         | 1   | 40                 | MALE ELBOW         | 25812-161 |                 | - 1 |
| 16 SPACER PLATE R <sup>-</sup>            | 12771-02       | 11010         | 1   | 41                 | HEX HD CAPSCREW    | B0605     | 15991           | 4   |
| 17 PRESS REG SPRING CAP Ke                | 68064          | 15991         | 1   | 42                 | LOCKWASHER         | J06       | 15991           | 4   |
| 18 $*$ SPRING CAP GASKET K                | 86067          |               | 1   | 43                 | MALE CONNECTOR     | 25817-202 |                 | - 1 |
| 19 * PRESS REG SPRING K7                  | 76626          |               | 1   | 44                 | MALE ELBOW         | 25812-011 | 15079           | 1   |
| 20 BODY COVER TO                          | 03712–20       | 11010         | 1   |                    |                    |           |                 |     |
| 21 * ROTOR WOODRUFF KEY K                 | (74041         | 15990         | 1   | OPTIC              | NAL:               |           |                 |     |
| 22 * ROTOR BLADE K                        | 79300–21       |               | 6   |                    | SST IMPELLER SHAFT | T08620-02 | 17080           | 1   |
| 23 ROTOR BLADE SPACER K                   | 76623          | 15030         | 1   |                    | GROUP GRIND WITH   | LK05269   |                 | - 1 |
| 24 GROUP GRIND 42                         | 2212-016       |               | 1   |                    | C.I. ROTOR         |           |                 |     |
| 25 * LOCATING PIN 21                      | 1154—666       |               | 1   |                    | TEFLON SEAL        | 25271-761 |                 | 1   |


### PARTS LIST 44143–092 Bearing Housing Assembly

\* INDICATES PARTS RECOMMENDED FOR STOCK

† 2 GASKETS REQUIRED WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

# **GORMAN-RUPP PUMPS**

S/N 1217390 Up PUMP ISSUE 2

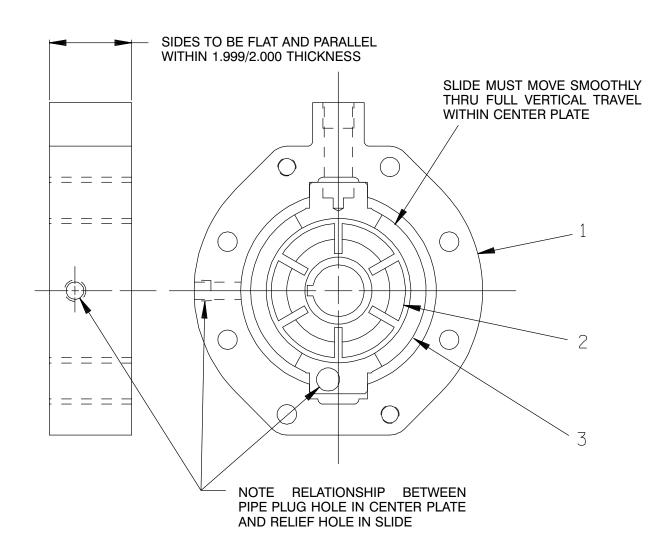

#### PARTS LIST 42212–016 Group Grind

| ITEM<br>NO. | PART NAME    | PART<br>NUMBER | MAT'L<br>CODE | QTY |
|-------------|--------------|----------------|---------------|-----|
| 1           | CENTER PLATE | NOT AVAILABLE  |               | 1   |
| 2           | ROTOR        | NOT AVAILABLE  |               | 1   |
| 3           | SLIDE        | NOT AVAILABLE  |               | 1   |

**NOTE:** THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

# **GORMAN-RUPP PUMPS**

For Warranty Information, Please Visit www.grpumps.com/warranty or call: U.S.: 419-755-1280 Canada: 519-631-2870 International: +1-419-755-1352