MANUAL PART 2 of 3

PARTS LIST WITH PERFORMANCE CURVE



www.grpumps.com

©2015 Gorman-Rupp Pumps



PUBLICATION NUMBER PL-04009-03 October 28, 2015 Rev. B 11-1-23



PUMP MODEL

RS5A31–BAR

Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your pump model and serial number in the spaces provided below. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:

Serial Number:

PERFORMANCE CURVE – SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:

Serial Number:

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied. For warranty information, please visit www.grpumps.com/warranty.


PERFORMANCE CURVES

The performance curves on the following page are based on 70°F (21°C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

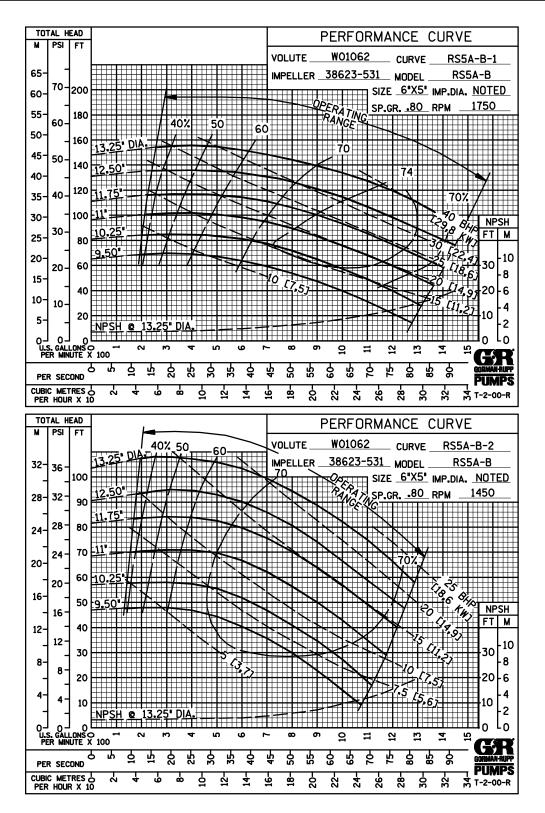


Performance Curve – Model RS5A31–BAR

This Page Intentionally Blank

RS5A31-BAR

S/N 1602971 Up PUMP ISSUE 3

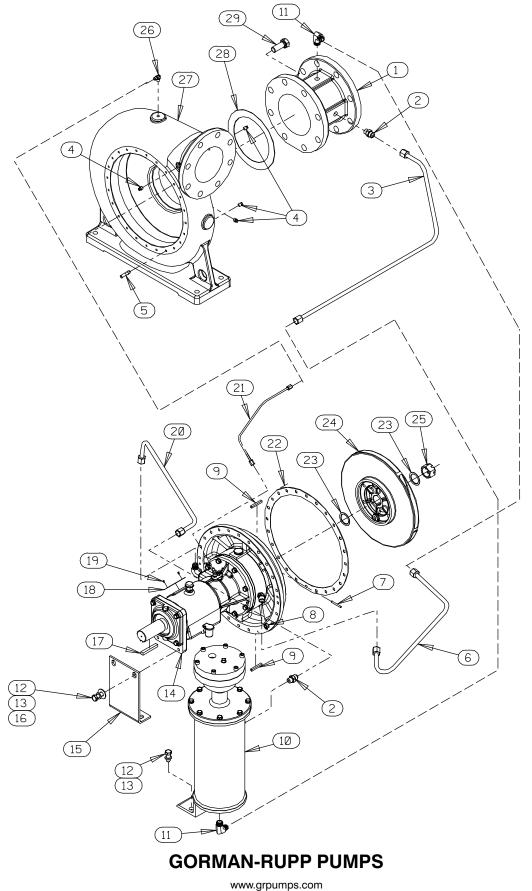

S/N 1602971 Up PUMP ISSUE 3

PARTS LIST Pump Model RS5A31-BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM PART NAME NO.	PART NUMBER	QTY	ITEM PART NAME PART Q ⁻ NO. NUMBER	ΓY
1 SUCTION FLANGE 2 CONNECTOR 3 RETURN TUBE ASSY □ 4 □ 5 5 STUD 6 SUCTION TUBE ASSY 7 SPIRAL PIN 8 HEX NUT 9 * 10 AIR RELEASE VLV ASSY 11 MALE ELBOW 12 HEX HEAD CAP SCREW 13 LOCK WASHER 14 BEARING HSG ASSY 15 BEARING HSG ASSY 16 FLAT WASHER 17 * 17 * 17 * 17 * 17 * 17 * 17 * 17 * 17 * 17 * 17 * 17 *	11402F 10140 25812–214 46335–078 P02 15079 C0606–1/2 15991 46335–079 21137–079 D06 15991 K79330 16120 GRP33–08A 25812–011 B0805 15991 J08 15991 44143–092 R12852–02 15990 K08 15991 N0611 15990	1 2 1 4 24 1 24 2 1 2 4 4 1 1 2 4 1	23 IMPELLER WASHER K76643 15991 †24 * IMPELLER 38623-531 13048 25 IMPELLER LOCK NUT K88233 15111 26 MALE ELBOW 25817-032 127 PUMP CASING SEE NOTE BELOW 28 * RING GASKET 38682-208 19370 29 HEX HEAD CAP SCREW B1208 15991 NOT SHOWN: * DISCH FLANGE GASKET 1678G 19060 * SUCT FLANGE GASKET 1679G 19370 ROTATION DECAL 2613M INSTRUCTION TAG 38817-011 LUBRICATION DECAL 38816-074 SUCTION STICKER 6588AG DISCHARGE STICKER 6588BJ G-R DECAL GR-03 OPTIONAL:	2 1 1 1 1 8 1 1 1 1 1 1 1 1
18 NAMEPLATE 19 DRIVE SCREW 20 DISCHARGE TUBE ASSY. 21 SEAL TUBE ASSY	2613DZ 13990 BM#04-03 17000	1 2 1 1	DISCHARGE CHECK VALVE -CHECK VALVE 26642-106 -HEX HD CAPSCREW B1212 15991 -GASKET 1678G 19060	1 8 1
22 $*$ BODY COVER GASKET	N15237-21 19060	1	–HEX NUT D12 15991	8


 $\ensuremath{\,\times\,}$ INDICATES PARTS RECOMMENDED FOR STOCK

- ALL ROTO-PRIME® IMPELLERS ARE TRIMMED AND INCLUDE WEAR RINGS AND GROOVE PINS. WEAR RINGS ARE NOT SOLD SEPARATELY.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.
- INCLUDED WITH REPAIR 46474-335 1
 PUMP CASING ASSY

GORMAN-RUPP PUMPS

RS5A31-BAR

S/N 1602971 Up PUMP ISSUE 3

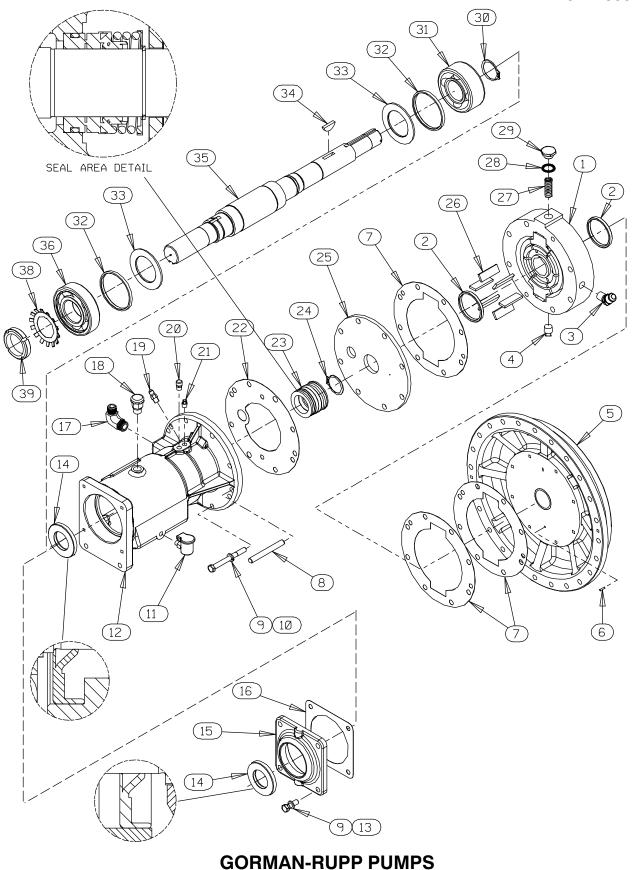

S/N 1602971 Up PUMP ISSUE 3

ITEM PART NAME PART NUMBER QTY NUMBER ITEM PART NAME NO. PART NO. QTY NUMBER 1 GROUP GRIND 42212-016 1 23 * MECH SEAL 25271-921 1 2 BLADE SPACER K76623 15030 2 24 SNAP RING 24124-243 1 3 MALE ELBOW 25812-161 1 25 SPACER PLATE R12771-02 11010 1 4 PIPE PLUG P06 15079 1 26 * ROTOR BLADE K79300-21 6 5 BODY COVER T03712-20 11010 1 27 SPRING K76626 1 6 * LOCATING PIN 21154-666 1 28 * RING GASKET K66067 1 8 DOWEL PIN 21133-116 2 30 SNAP RING 24124-245 1 9 LOCK WASHER J06 15991 12 31 8ALL BEARING 23421-410 1 10 HEX HEAD CAP SCREW B0615 15991 8 32 OIL RING K66483	44143–092 Bearing Housing Assembly								
2 BLADE SPACER K76623 15030 2 24 SNAP RING 24124-243 1 3 MALE ELBOW 25812-161 1 25 SPACER PLATE R12771-02 11010 1 4 PIPE PLUG P06 15079 1 26 % ROTOR BLADE K79300-21 6 5 BODY COVER T03712-20 11010 1 27 SPRING K76626 1 6 LOCATING PIN 21154-666 1 28 % RING GASKET K86067 1 7 * CENTER PLATE GASKET R10150 19210 3 29 SPRING CAP K68064 15991 1 9 LOCK WASHER J06 15991 12 31 * BALL BEARING 23421-410 1 10 HEX HEAD CAP SCREW B0651 55991 8 32 OIL RING K86483 15030 2 12 BEARING HOUSING W01172-04 11010 1 33 OIL RING STOP K76632-01 2 14 OIL SEAL		PART NAME		QTY		RT NAME		ΓY	
22 🔨 SPACER PLATE GASKET R12923 18000 1 C.I. ROTOR	3 4 5 6 * 7 8 9 10 11 12 13 8 15 16 * 17 18 19 20	BLADE SPACER MALE ELBOW PIPE PLUG BODY COVER LOCATING PIN CENTER PLATE GASKET DOWEL PIN LOCK WASHER HEX HEAD CAP SCREW OILER BEARING HOUSING HEX HEAD CAP SCREW OIL SEAL BEARING HOUSING CAP BEARING CAP GASKET MALE ELBOW AIR VENT MALE CONNECTOR AIR VENT	K76623 15030 25812–161 P06 15079 T03712–20 11010 21154–666 R10150 19210 21133–116 J06 15991 80615 15991 26713–054 W01172–04 11010 B0605 15991 25227–240 R12770–02 10010 N18938–01 18000 25812–011 S1703 25817–202 S2162	1 1 1 3 2 12 8 1 4 2 1	24 25 26 27 28 29 30 31 32 33 34 35 36 38 39	SNAP RING SPACER PLATE ROTOR BLADE SPRING RING GASKET SPRING CAP SNAP RING BALL BEARING OIL RING STOP WOODRUFF KEY IMPELLER SHAFT BALL BEARING BRG LOCK WASHER BRG LOCK NUT IAL: SST IMPELLER SHAFT FLUOROCARBON SEAL	24124–243 R12771–02 11010 K79300–21 K76626 K86067 K68064 15991 24124–245 23421–410 K86483 15030 K76632–01 K74041 15590 T08620–02 15010 S1077 23962–511 23962–511 23962–011 T08620–02 17080 25271–761	1 1 1 1 1 2	


PARTS LIST 44143–092 Bearing Housing Assembly

* INDICATES PARTS RECOMMENDED FOR STOCK

† 2 GASKETS REQUIRED ON ONE FACE ONLY WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

GORMAN-RUPP PUMPS

S/N 1602971 Up PUMP ISSUE 3

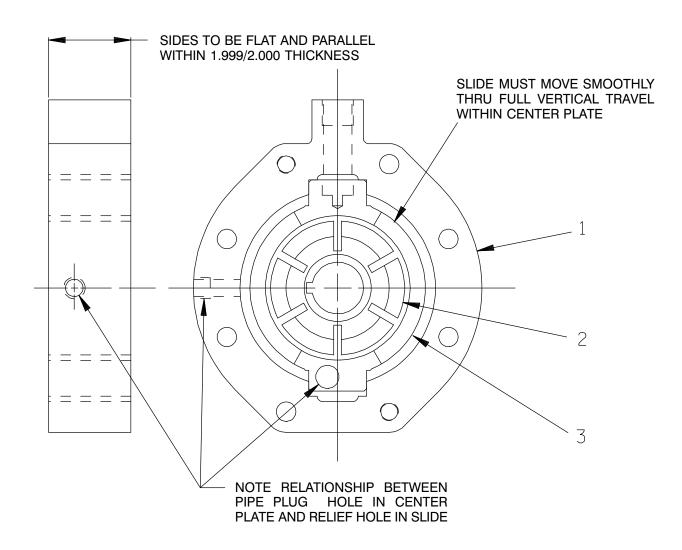

PARTS LIST 42212–016 Group Grind

ITEM NO.	PART NAME	PART NUMBER	QTY
1	CENTER PLATE	NOT AVAILABLE	1
2	ROTOR	NOT AVAILABLE	1
3	SLIDE	NOT AVAILABLE	1

NOTE: THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

GORMAN-RUPP PUMPS

For Warranty Information, Please Visit www.grpumps.com/warranty or call: U.S.: 419-755-1280 Canada: 519-631-2870 International: +1-419-755-1352