Use With: OM-03989 MR-03991

May 17, 1999 Rev. A 11-7-2023



PUMP MODEL RD2A31-B

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

PL-04015 RD SERIES PUMP

PERFORMANCE CURVE - SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.

PERFORMANCE CURVES

The performance curves on the following page are based on 70° F (21° C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).


PARTS LIST MANUAL PAGE A – 1

RD SERIES PUMP PL-04015

This Page Intentionally Blank

PAGE A – 2 PART LIST MANUAL

PL-04015 RD SERIES PUMP

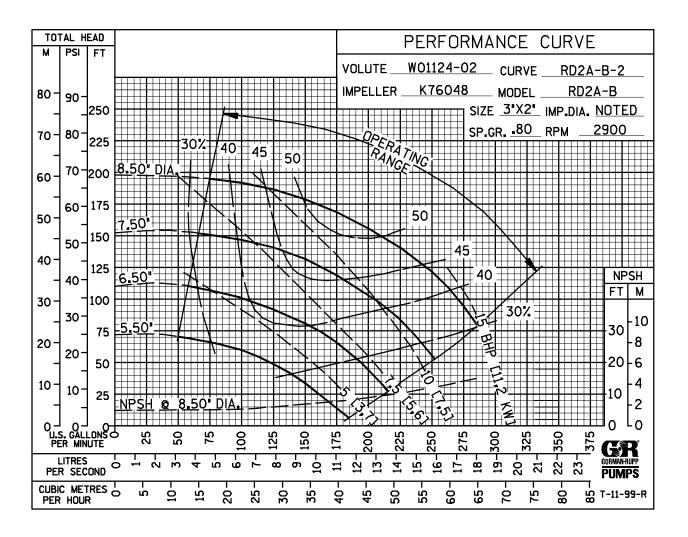



Performance Curves - Model RD2A31-B

PARTS LIST MANUAL PAGE A – 3

B RD2A31-B

S/N 1188242 Up PUMP ISSUE 2

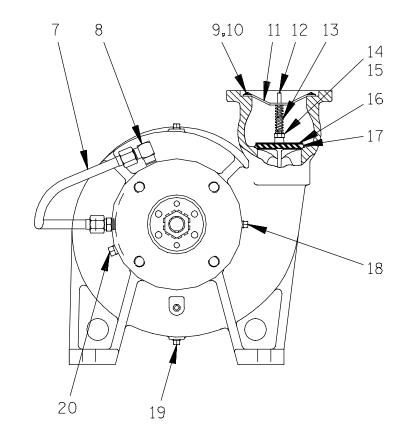

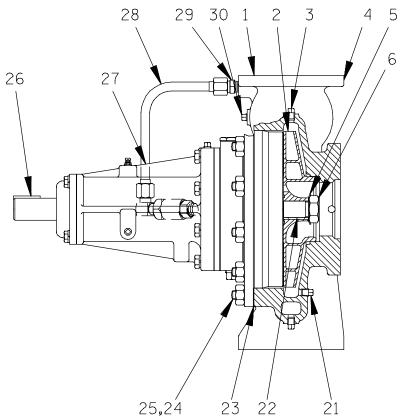

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Printed in U.S.A.

RD2A31-B

S/N 1188242 Up PUMP ISSUE 2

PARTS LIST Pump Model RD2A31—B

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1 2 * 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21	PIPE PLUG DISCHARGE STICKER LOCKWASHER IMPELLER NUT SUCTION TUBE ASSY MALE ELBOW SCREW T-TYPE LOCKWASHER GUIDE VALVE STEM VALVE SPRING HEX NUT T-TYPE LOCKWASHER DISCHARGE VALVE O-RING PIPE PLUG PIPE PLUG PIPE PLUG	W01124-02 38621-730 P02 6588BJ 23962-506 K75775 46335-072 25812-011 CM0401-1/2 AL04 K74251 K74008 K68834 D04 AL04 38345-630 25152-330 P02 P06	13048 15079 15111 15991 17170 15991 15991 17170 13047 15079 15079 15079	1 1 1 1 1 1 1 1 2 2 1 1 1 1 1 1 1 1 1 1	*	HEX NUT SHAFT KEY BRG HOUSING ASSY DISCHARGE TUBE ASSY CONNECTOR PIPE PLUG SHOWN: DISCH CHK VALVE GSKT DISCH FLANGE GASKET SUCTION STICKER NAME PLATE DRIVE SCREW STRAINER LUBE DECAL INSTRUCTION TAG G-R DECAL BEARING TAG ROTATION DECAL	25812-214 P02 11589GA	15991 15990 15079 19060 19060 13990 17000 	12 1 1 1 1 1 1 1 2 1 1 1 1 1
21 22 * 23 * 24	====	P02 K79328-23 R12531 C0807	15079 15990 19060 15991	1 1 1 12	OPTIO	NAL: AIR RELEASE VALVE BRONZE IMPELLER	GRPP52-01 K76048	IA 14150	1


^{*} INDICATES PARTS RECOMMENDED FOR STOCK


[†] ALL ROTO-PRIME™ IMPELLERS ARE TRIMMED.

[•] SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.

B RD2A31-B

S/N 1188242 Up PUMP ISSUE 2

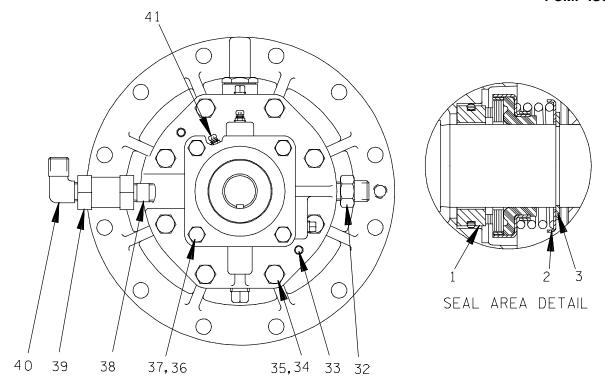

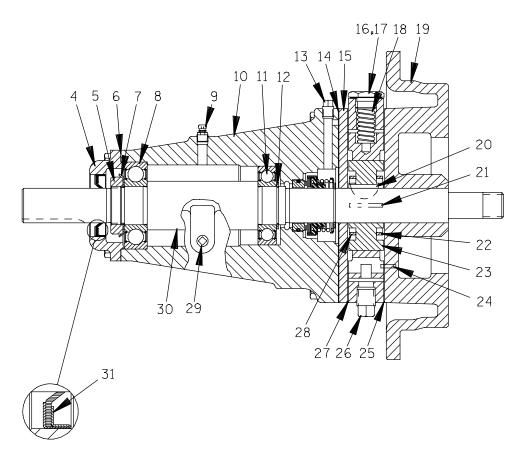

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Printed in U.S.A.

RD2A31-B

S/N 1188242 Up PUMP ISSUE 2

PARTS LIST 44143-001 Bearing Housing Assembly

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1 *	SEAL ASSEMBLY	25271-192		1	27 🔻	CENTER PLATE GASKE	T N14145	18010	1
2 *	SPRING CTR WASHER	25273-266		1	28	BLADE SPACER	K74031	15030	1
3	SEAL RETAINING RING	S700		1	29	PIPE PLUG	P02	15079	1
4	BEARING CAP	N14130	10010	1	30 ≯	← IMPELLER SHAFT	T07888	15010	1
5	BEARING LOCK NUT	S301		1	31 🔻	[←] OIL SEAL	25227-230)	1
6 *	BEARING CAP GASKET	K74033	18000	1	32	CONNECTOR	26351-062	2	1
7	TAB WASHER	S302		1	33	DOWEL PIN	21133-073	3	2
8 *	OUTBOARD BEARING	23282-008		1	34	HEX HD CAPSCREW	B0612	15991	8
9	AIR VENT	S2162		1	35	LOCKWASHER	J06	15991	8
10	BEARING HOUSING	T02990	11010	1	36	HEX HD CAPSCREW	B0504	15991	4
11 *	BALL BEARING	23257-012		1	37	LOCKWASHER	J05	15991	4
12	BEARING RET RING	S248		1	38	CLOSE NIPPLE	T06	15079	1
13	PIPE PLUG	P02	15079	1	39	CHECK VALVE	26641-082	2	1
14 *	SPACER PLATE GASKET	N14144	18000	1	40	MALE ELBOW	26351-133	3	1
15	SPACER PLATE	N14129	11010	1	41	AIR VENT	S2162		1
16	PRESS REG SPRING CAP	K68064	15991	1					
17 *	SPRING CAP GASKET	K86067		1	OPTIC	DNAL:			
18 *	PRESS REG SPRING	K76301		1		SST IMPELLER SHAFT	T07888	17080	1
19	BODY COVER	T07826-02	11010	1		TEFLON SEAL ASSY	25271-743	3	1
20 *	ROTOR WOODRUFF KEY	K61559	15990	1	•	OIL LUBE BEARING	44143-096	S	1
21 *	ROTOR BLADE	K79300-20		6		HOUSING ASSEMBLY			
22	ROTOR BLADE SPACER	K74031	15030	1		-INBOARD BEARING	S310		1
23	GROUP GRIND	42212-013		1		-OUTBOARD BEARING	3 23275-008	3	1
24 *	LOCATING PIN	21154-666		1		-OIL CUP	26713-051		1
25 †	CENTER PLATE GASKET	N14145	18010	2		GROUP GRIND WITH C	.I. ROTOR		
26	PIPE PLUG	P06	15079	1	I	-C.I. GROUP GRIND	LK05266		1


^{*} INDICATES PARTS RECOMMENDED FOR STOCK

 $[\]dagger$ 2 GASKETS REQUIRED WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

[•] ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.

В **RD2A31-B**

> S/N 1188242 Up PUMP ISSUE 2

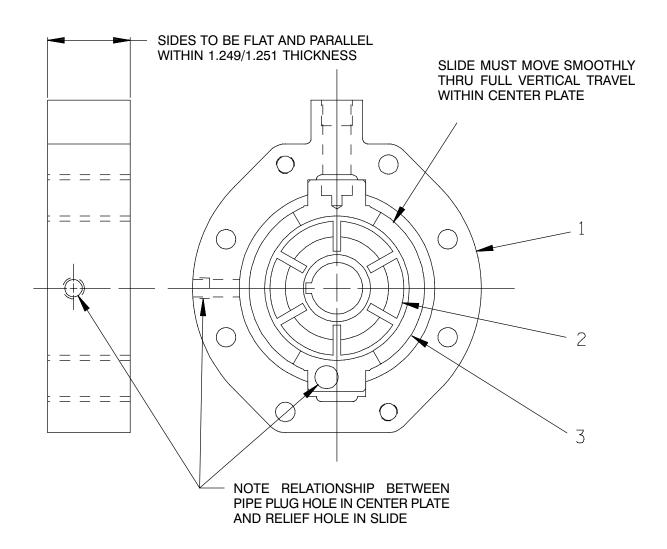

PARTS LIST 42212-013 Group Grind

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	CENTER PLATE	NOT AVAILABLE		1
2	ROTOR	NOT AVAILABLE		1
3	SLIDE	NOT AVAILABLE		1

NOTE: THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

THE GORMAN-RUPP COMPANY AND GORMAN-RUPP OF CANADA LIMITED 12 MONTH LIMITED WARRANTY

EXTENT AND DURATION OF WARRANTY

Coverage: The Gorman-Rupp Company or Gorman-Rupp of Canada Limited (herein individually referred to as "GR") each individually warrant that its products and parts shall be free from defects in material and workmanship for twelve (12) months from the date of purchase by the original end user.

Exceptions: This Limited Warranty shall not apply to the following products and parts: engines, motors, trade accessories and other products, components or materials not manufactured by GR. With respect to submersible pumps, the pump and motor are an integral unit and are therefore warranted as a unit. However, with respect to the electrical components in submersible pumps, this warranty is valid **only** when electrical controls for the pump have been specified and/or provided by GR. Wear and tear on any product resulting from normal use is not covered by this Limited Warranty.

LIMITATIONS

GR'S SOLE AND EXCLUSIVE WARRANTY WITH RESPECT TO ITS PRODUCTS AND PARTS IS THIS LIMITED WARRANTY. THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS AND/OR IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE.

EXCLUSIVE REMEDY AND DAMAGES

The sole and exclusive remedy for breach of this Limited Warranty by GR, and the entire extent of its liability for such breach or for damages arising and/or resulting from the use of the products and parts covered by this Limited Warranty shall be as follows:

1. Repair or replacement: If inspection shows that any GR product or part covered under this Limited Warranty is defective in materials or workmanship, GR shall repair or replace the defective product or part at its option, without charge. You must have properly installed, maintained and used the product or part claimed to be defective in accordance with the maintenance schedule and/or manual which comes with the product. No allowance will be made for labor, transportation or other charges incurred by you in connection with such repair or replacement.

2. To obtain the above remedy:

- a) Immediately notify GR at the address below of the claimed defect in materials or workmanship and provide the serial number or date code of the product and/or part and provide a copy of the invoice or bill of sale referencing the product and/or part by no later than the expiration date of the Limited Warranty period.
- b) GR will advise whether inspection of the product and/or part will be necessary and whether and how repair or replacement will be effected. If inspection by GR is necessary, the product or part must be sent freight prepaid to GR at the address stated below. Return shipment of the repaired product or part will be F.O.B. the address stated below.
- 3. Damages: GR's liability for damages for breach of this Limited Warranty shall not exceed the amount of the purchase price of the product or part in respect to which damages are claimed. IN NO EVENT SHALL GR BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES FOR BREACH OF THIS LIMITED WARRANTY OTHER THAN AS STATED HEREIN.

Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province.

THE GORMAN-RUPP COMPANY P.O. BOX 1217 MANSFIELD, OH 44901-1217 Phone: (419) 755-1011 GORMAN-RUPP OF CANADA LIMITED 70 Burwell Road St. Thomas, Ontario N5P 3R7 Phone: (519) 631–2870