

**INSTALLATION, OPERATION,  
AND MAINTENANCE MANUAL**  
WITH PARTS LIST



PAH SERIES® PUMP

MODEL
<b>PAH16A60C-B-C18</b>

**GORMAN-RUPP PUMPS**

[www.grpumps.com](http://www.grpumps.com)

Register your new  
Gorman-Rupp pump online at  
**[www.grpumps.com/register](http://www.grpumps.com/register)**.

Valid serial number and e-mail address required.



**The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.**

### **RECORD YOUR PUMP MODEL AND SERIAL NUMBER**

Please record your pump model and serial number in the spaces provided below. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model: \_\_\_\_\_

Serial Number: \_\_\_\_\_

# TABLE OF CONTENTS

<b>INTRODUCTION</b> .....	<b>PAGE I – 1</b>
<b>SAFETY - SECTION A</b> .....	<b>PAGE A – 1</b>
<b>INSTALLATION – SECTION B</b> .....	<b>PAGE B – 1</b>
Pump Dimensions .....	PAGE B – 1
<b>PREINSTALLATION INSPECTION</b> .....	PAGE B – 1
Battery Installation .....	PAGE B – 2
<b>POSITIONING PUMP</b> .....	PAGE B – 2
Lifting .....	PAGE B – 2
Mounting .....	PAGE B – 2
<b>SUCTION AND DISCHARGE PIPING</b> .....	PAGE B – 3
Materials .....	PAGE B – 3
Line Configuration .....	PAGE B – 3
Connections to Pump .....	PAGE B – 3
Gauges .....	PAGE B – 3
<b>SUCTION LINES</b> .....	PAGE B – 3
Fittings .....	PAGE B – 3
Strainers .....	PAGE B – 3
Sealing .....	PAGE B – 4
Suction Lines in Sumps .....	PAGE B – 4
Suction Line Positioning .....	PAGE B – 4
<b>DISCHARGE LINES</b> .....	PAGE B – 5
Siphoning .....	PAGE B – 5
Valves .....	PAGE B – 5
<b>ALIGNMENT</b> .....	PAGE B – 5
Coupled Drives .....	PAGE B – 6
<b>AUTO-START</b> .....	PAGE B – 6
Float Switch Installation .....	PAGE B – 6
<b>OPERATION – SECTION C</b> .....	<b>PAGE C – 1</b>
<b>OPERATION</b> .....	PAGE C – 1
<b>STARTING</b> .....	PAGE C – 1
Manual Starting .....	PAGE C – 1
Automatic Starting .....	PAGE C – 1
<b>PRIMING</b> .....	PAGE C – 2
<b>ROUTINE OPERATION</b> .....	PAGE C – 2
<b>OPERATION IN EXTREME HEAT</b> .....	PAGE C – 2
<b>OPERATIONAL CHECKS</b> .....	PAGE C – 2
Leakage .....	PAGE C – 2
Pump Vacuum Check .....	PAGE C – 2
Liquid Temperature And Overheating .....	PAGE C – 3
Strainer Check .....	PAGE C – 3
<b>STOPPING</b> .....	PAGE C – 3
Manual Stopping .....	PAGE C – 3
Automatic Stopping .....	PAGE C – 3
Safety Shutdown System .....	PAGE C – 3
<b>PERIODIC CHECKS</b> .....	PAGE C – 4

**TABLE OF CONTENTS**  
**(continued)**

Seal Cavity and Bearing Lubrication .....	PAGE C – 4
Bearing Temperature Check .....	PAGE C – 4
Engine Fuel Filter .....	PAGE C – 4
Engine Oil .....	PAGE C – 4
COLD WEATHER PRESERVATION .....	PAGE C – 4
<b>TROUBLESHOOTING – SECTION D .....</b>	<b>PAGE D – 1</b>
PREVENTIVE MAINTENANCE .....	PAGE D – 3
<b>PUMP MAINTENANCE AND REPAIR - SECTION E .....</b>	<b>PAGE E – 1</b>
STANDARD PERFORMANCE CURVE .....	PAGE E – 1
PARTS LISTS:	
Pump Model .....	PAGE E – 3
Power Unit .....	PAGE E – 5
Power Unit .....	PAGE E – 7
Pump Assembly .....	PAGE E – 9
Pump End Assembly .....	PAGE E – 11
Repair Rotating Assembly .....	PAGE E – 13
Air Compressor Assembly .....	PAGE E – 15
Priming Chamber Kit .....	PAGE E – 16
Priming Chamber Assembly .....	PAGE E – 17
PUMP AND SEAL DISASSEMBLY AND REASSEMBLY .....	PAGE E – 18
Priming Chamber Removal And Disassembly .....	PAGE E – 19
Discharge Check Valve Removal and Disassembly .....	PAGE E – 19
Pump Casing and Wear Ring Removal .....	PAGE E – 19
Removing Air Compressor .....	PAGE E – 20
Impeller Removal .....	PAGE E – 20
Seal Removal .....	PAGE E – 20
Shaft and Bearing Removal and Disassembly .....	PAGE E – 21
Shaft and Bearing Reassembly and Installation .....	PAGE E – 22
Securing Rotating Assembly to Gear Reducer .....	PAGE E – 23
Seal Reassembly and Installation .....	PAGE E – 24
Impeller Installation .....	PAGE E – 26
Pump Casing and Wear Ring Installation .....	PAGE E – 26
Discharge Check Valve Reassembly and Installation .....	PAGE E – 26
Priming Chamber Assembly and Installation .....	PAGE E – 26
LUBRICATION .....	PAGE E – 27
Seal Assembly .....	PAGE E – 27
Bearings .....	PAGE E – 27
Engine .....	PAGE E – 27

## INTRODUCTION

**Thank You** for purchasing a Gorman-Rupp pump. **Read this manual** carefully to learn how to safely install and operate your pump. Failure to do so could result in personal injury or damage to the pump.

Because pump installations are seldom identical, this manual cannot possibly provide detailed instructions and precautions for every aspect of each specific application. Therefore, it is the responsibility of the owner/installer of the pump to ensure that applications not addressed in this manual are performed **only** after establishing that neither operator safety nor pump integrity are compromised by the installation. Pumps and related equipment **must** be installed and operated according to all national, local and industry standards.

If there are any questions regarding the pump or its application which are not covered in this manual or in other literature accompanying this unit, please contact your Gorman-Rupp distributor, or The Gorman-Rupp Company:

**The Gorman-Rupp Company**  
**P.O. Box 1217**  
**Mansfield, Ohio 44901—1217**  
**Phone: (419) 755—1011**  
 or:  
**Gorman-Rupp of Canada Limited**  
**70 Burwell Road**  
**St. Thomas, Ontario N5P 3R7**  
**Phone: (519) 631—2870**

For information or technical assistance on the power source, contact the power source manufacturer's local dealer or representative.

## HAZARD AND INSTRUCTION DEFINITIONS

The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:



**Immediate hazards which WILL result in severe personal injury or death. These instructions describe the procedure required and the injury which will result from failure to follow the procedure.**



**Hazards or unsafe practices which COULD result in severe personal injury or death. These instructions describe the procedure required and the injury which could result from failure to follow the procedure.**



Hazards or unsafe practices which COULD result in minor personal injury or product or property damage. These instructions describe the requirements and the possible damage which could result from failure to follow the procedure.

### NOTE

*Instructions to aid in installation, operation, and maintenance or which clarify a procedure.*

## SAFETY - SECTION A

This information applies to Prime Aire® Series pumps. Refer to the manual accompanying the engine or power source before attempting to begin operation.

Because pump installations are seldom identical, this manual cannot possibly provide detailed instructions and precautions for each specific application. Therefore, it is the owner/installer's responsibility to ensure that applications not addressed in this manual are performed only after establishing that neither operator safety nor pump integrity are compromised by the installation.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Shut down the engine and disconnect the positive battery cable to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure the pump is cool before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.



This pump is equipped with an automatic starting system, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect

the positive battery cable before performing any maintenance. Failure to do so may result in serious personal injury.



Do not attempt to disengage any part of an overheated pump unit. Vapor pressure within the pump casing can eject these parts with great force when they are disengaged. Allow the pump to completely cool before servicing it.



This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids. Do not attempt to pump volatile, corrosive, or flammable liquids which may damage the pump or endanger personnel as a result of pump failure.



Death or serious personal injury and damage to the pump or components can occur if proper lifting procedures are not observed. Make certain that hoists, chains, slings or cables are in good working condition and of sufficient capacity and that they are positioned so that loads will be balanced and the pump or components will not be damaged when lifting. Suction and discharge hoses and piping must be removed from the pump before lifting. Lift the pump or component only as high as necessary and keep personnel away from suspended objects.



After the pump has been installed, make

certain that the pump and all piping or hose connections are tight, properly supported and secure before operation.



Do not operate the pump against a closed discharge valve. If operated against a closed discharge valve, pump components will deteriorate, and the liquid could come to a boil, build pressure, and cause the pump casing to rupture or explode. Momentary closure of a discharge valve is acceptable only when required for startup or shutdown procedures.



Do not remove plates, covers, gauges, pipe plugs, or fittings from an overheated pump. Vapor pressure within the pump can cause parts being disengaged to be ejected with great force. Allow the pump to cool completely before servicing.




This pump may be used to handle materials which could cause illness through direct exposure or emitted fumes. Wear adequate protective clothing when working on the pump or piping.



Do not operate the pump without guards in place over the rotating parts. Exposed rotating parts can catch clothing,

fingers or tools, causing severe injury to personnel.

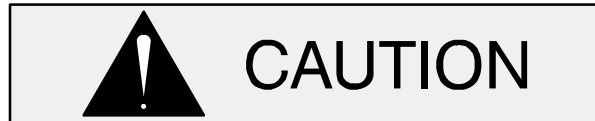

Make sure the pump is level. Lower jack stands and chock the wheels, if so equipped. Use caution when positioning the skid-mounted unit to prevent damage to the fuel tank.



Do not operate an internal combustion engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.



Fuel used by internal combustion engines presents an extreme explosion and fire hazard. Make certain that all fuel lines are securely connected and free of leaks. Never refuel a hot or running engine. Avoid overfilling the fuel tank. Always use the correct type of fuel.



Never tamper with the governor to gain more power. The governor establishes safe operating limits that should not be exceeded. Refer to the performance curve, page E-1, for the maximum continuous operating speed for this pump.

## INSTALLATION – SECTION B

### Review all SAFETY information in Section A.

Since pump installations are seldom identical, this section offers only general recommendations and practices required to inspect, position, and arrange the pump and piping.

Most of the information pertains to a standard **static lift** application where the pump is positioned above the free level of liquid to be pumped.

If installed in a **flooded suction application** where the liquid is supplied to the pump under pressure, some of the information such as mounting, line

configuration, and priming must be tailored to the specific application. Since the pressure supplied to the pump is critical to performance and safety, **be sure** to limit the incoming pressure to 50% of the maximum permissible operating pressure as shown on the pump performance curve.

For further assistance, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

### Pump Dimensions

See Figure 1 for the approximate physical dimensions of this pump.

### OUTLINE DRAWING

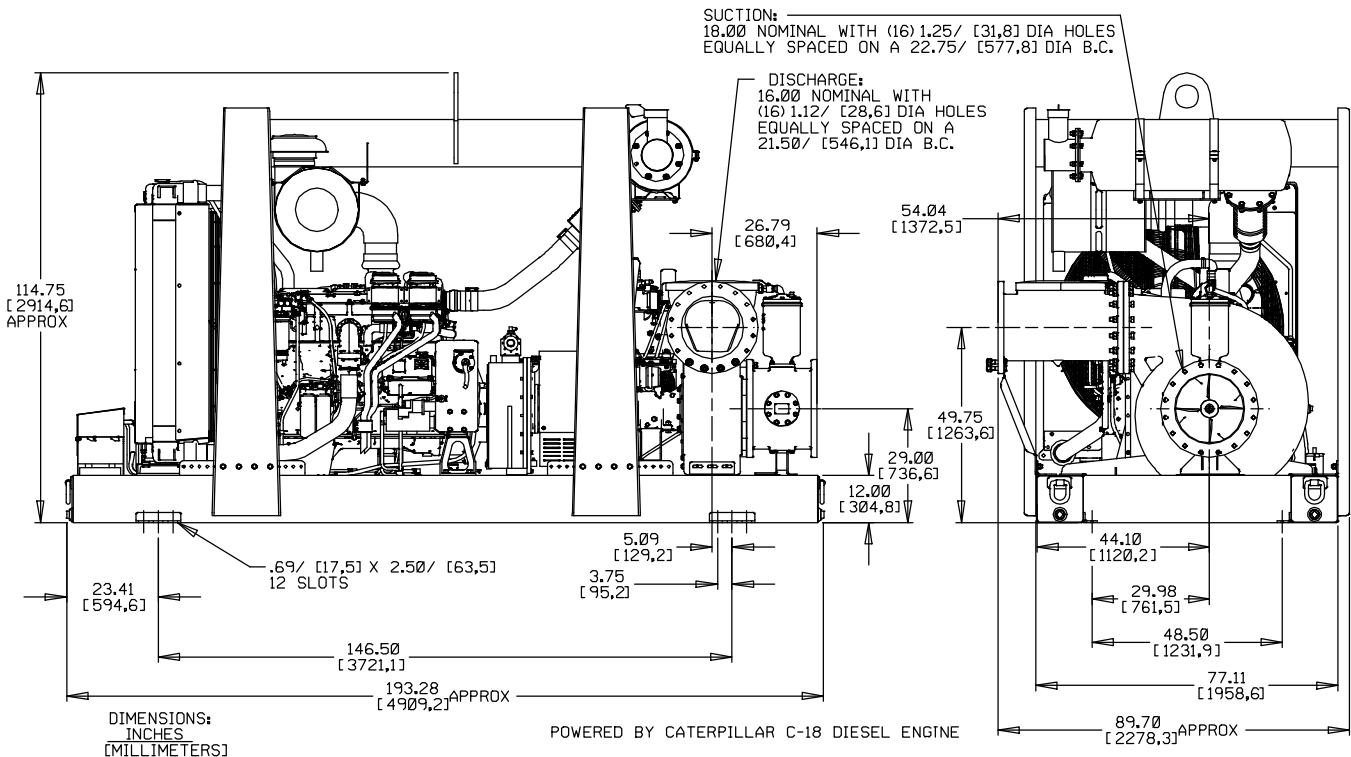


Figure 1. Pump Model PAH16A60C-B-C18

### PREINSTALLATION INSPECTION

The pump assembly was inspected and tested before shipment from the factory. Before installation, inspect the pump for damage which may have occurred during shipment. Check as follows:

- Inspect the pump for cracks, dents, damaged threads, and other obvious damage.
- Check for and tighten loose attaching hardware. Since gaskets tend to shrink after drying, check for loose hardware at mating surfaces.



- c. Carefully read all tags, decals, and markings on the pump assembly, and perform all duties indicated. Note that the pump shaft rotates in the required direction.



Only operate this pump in the direction indicated by the arrow on the pump body and on the accompanying decal. Otherwise, the impeller could become loosened from the shaft and seriously damage the pump.

- d. Check levels and lubricate as necessary. Refer to **LUBRICATION** in the **Maintenance and Repair Manual** and perform duties as instructed.
- e. If the pump has been stored for more than 12 months, some of the components or lubricants may have exceeded their maximum shelf life. These **must be inspected or replaced** to ensure maximum pump service.

If the maximum shelf life has been exceeded, or if anything appears to be abnormal, contact your Gorman-Rupp distributor or the factory to determine the repair or updating policy. **Do not** put the pump into service until appropriate action has been taken.

### Battery Installation

Unless otherwise specified on the pump order, the engine battery is **not** included with engine driven units.

Refer to the information accompanying the battery and/or electrolyte solution for activation and charging instructions.

Before installing the battery, clean the positive and negative cable connectors, and the battery terminals. Secure the battery by tightening the holddown brackets. The terminals and clamps may be coated with petroleum jelly to retard corrosion. Connect and tighten the positive cable first, then the negative cable.

## POSITIONING PUMP

### Lifting

Pump unit weights will vary depending on the mounting and drive provided. Check the shipping tag on the unit packaging for the actual weight, and use lifting equipment with appropriate capacity. Drain the pump and remove all customer-installed equipment such as suction and discharge hoses or piping before attempting to lift existing, installed units.



**Death or serious personal injury and damage to the pump or components can occur if proper lifting procedures are not observed. Make certain that hoists, chains, slings or cables are in good working condition and of sufficient capacity and that they are positioned so that loads will be balanced and the pump or components will not be damaged when lifting. Suction and discharge hoses and piping must be removed from the pump before lifting. Lift the pump or component only as high as necessary and keep personnel away from suspended objects.**

### Mounting

Locate the pump in an accessible place as close as practical to the liquid being pumped. Level mounting is essential for proper operation. The pump may have to be supported or shimmed to provide for level operation and eliminate vibration.

For engine driven units, the pump **must** be positioned as level as possible to ensure sufficient lubrication and fuel supply to the engine.

If the pump has been mounted on a moveable base, make certain the base is stationary by setting the brake and blocking the wheels before attempting to operate the pump.



**If the pump has been mounted on a movable base, do not attempt to operate the pump unless the unit is level. Be sure the leveling stands are positioned on a solid surface, and the wheels are chocked.**

## SUCTION AND DISCHARGE PIPING

Pump performance is adversely effected by increased suction lift, discharge elevation, and friction losses. See the performance curve and operating range shown on Page E-1 to be sure your overall application allows pump to operate within the safe operation range.

### Materials

Either pipe or hose may be used for suction and discharge lines; however, the materials must be compatible with the liquid being pumped. If hose is used in suction lines, it must be the rigid-wall, reinforced type to prevent collapse under suction. Using piping couplings in suction lines is not recommended.

### Line Configuration

Keep suction and discharge lines as straight as possible to minimize friction losses. Make minimum use of elbows and fittings, which substantially increase friction loss. If elbows are necessary, use the long-radius type to minimize friction loss.

### Connections to Pump

Before tightening a connecting flange, align it exactly with the pump port. Never pull a pipe line into place by tightening the flange bolts and/or couplings.

Lines near the pump must be independently supported to avoid strain on the pump which could cause excessive vibration, decreased bearing life, and increased shaft and seal wear. If hose-type lines are used, they should have adequate support

to secure them when filled with liquid and under pressure.

### Gauges

The pump is drilled and tapped for installing discharge pressure and vacuum suction gauges. It is recommended that gauges be installed to monitor pump performance. Seal the gauge threads with pipe dope to ensure an airtight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

## SUCTION LINES

To avoid air pockets which could affect pump priming, the suction line must be as short and direct as possible. When operation involves a suction lift, the line must always slope upward to the pump from the source of the liquid being pumped; if the line slopes down to the pump at any point along the suction run, air pockets will be created.

### Fittings

Suction lines should be the same size as the pump inlet. If reducers are used in suction lines, they should be the eccentric type, and should be installed with the flat part of the reducers uppermost to avoid creating air pockets. Valves are not normally used in suction lines, but if a valve is used, install it with the stem horizontal to avoid air pockets.

### Strainers

Be certain to use the strainer furnished with the pump; any spherical solids which pass through the strainer will also pass through the pump itself.

If a strainer not furnished with the pump is installed by the pump user, make certain that the total area of the openings in the strainer is at least three or four times the cross section of the suction line, and that the openings will not permit passage of solids larger than the solids handling capability of the pump.

This pump is designed to handle up to 4 inch (101,6 mm) diameter spherical solids.

## Sealing

Since even a slight leak will affect priming, head, and capacity, especially when operating with a high suction lift, all connections in the suction line should be sealed with pipe dope to ensure an airtight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

## Suction Lines In Sumps

If a single suction line is installed in a sump, it should be positioned away from the wall of the sump at a distance equal to 1 1/2 times the diameter of the suction line.

If there is a liquid flow from an open pipe into the sump, the flow should be kept away from the suction inlet because the inflow will carry air down into the sump, and air entering the suction line will reduce pump efficiency.

If it is necessary to position inflow close to the suction inlet, install a baffle between the inflow and the suction inlet at a distance 1-1/2 times the diameter of the suction pipe. The baffle will allow entrained

air to escape from the liquid before it is drawn into the suction inlet.

If two suction lines are installed in a single sump, the flow paths may interact, reducing the efficiency of one or both pumps. To avoid this, position the suction inlets so that they are separated by a distance equal to at least 3 times the diameter of the suction pipe.

## Suction Line Positioning

The depth of submergence of the suction line is critical to **efficient** pump operation. Figure 2 shows recommended minimum submergence vs. velocity.

Although not recommended, the vacuum assisted priming feature allows the pump to be operated temporarily in a "slurping" application with varying water levels.

### NOTE

*The pipe submergence required may be reduced by installing a standard pipe increaser fitting at the end of the suction line. The larger opening size will reduce the inlet velocity. Calculate the required submergence using the following formula based on the increased opening size (area or diameter).*

---



Figure 2. Recommended Minimum Suction Line Submergence vs. Velocity

**DISCHARGE LINES**

**Siphoning**

Do not terminate the discharge line at a level lower than that of the liquid being pumped unless a siphon breaker is used in the line. Otherwise, a siphoning action causing damage to the pump could result.

**Valves**

This pump is designed with a check valve in the discharge line.

If a throttling valve is desired in the discharge line, use a valve as large as the largest pipe to minimize friction losses. Never install a throttling valve in a suction line.

With high discharge heads, it is recommended that a throttling valve be installed in the discharge line to protect the pump from excessive shock pressure and reverse rotation when it is stopped.



If the application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

**ALIGNMENT**

The alignment of the pump and gear reducer is critical for trouble-free mechanical operation. The gear reducer and pump must be mounted so that their shafts are aligned with and parallel to each other. It is imperative that alignment be checked after the pump and piping are installed, and before operation.

**NOTE**


Check **Rotation**, Section C, before final alignment of the pump.

When mounted at the Gorman-Rupp factory, the gear reducer and pump shafts are aligned before shipment. Misalignment will occur in transit and

handling. Pumps **must** be checked and realigned before operation. Before checking alignment, tighten the pump casing feet and/or pedestal feet.



**When checking alignment, shut down the engine and disconnect the positive battery cable to ensure that the pump will remain inoperative.**

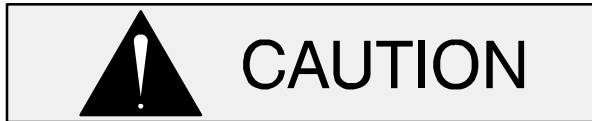


Adjusting the alignment in one direction may alter the alignment in another direction. check each procedure after altering alignment.


**Coupled Drives**

When using couplings, the axis of the power source must be aligned to the axis of the pump shaft in both the horizontal and vertical planes. Most couplings require a specific gap or clearance between the driving and the driven shafts. Refer to the coupling manufacturer’s service literature.

Align spider insert type couplings by using calipers to measure the dimensions on the circumference of the outer ends of the coupling hub every 90°. The coupling is in alignment when the hub ends are the same distance apart at all points (see Figure 3).

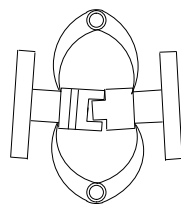

**Figure 3. Aligning Spider-Type Couplings**

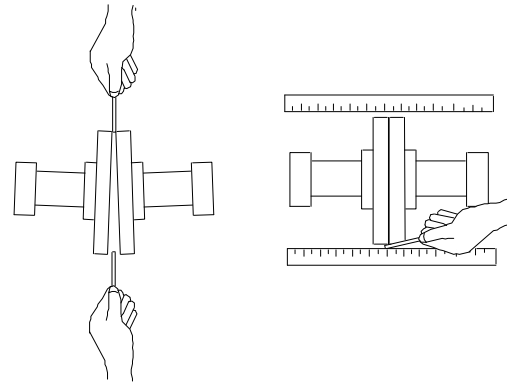

**Figure 4. Aligning Non-Spider Type Couplings**

Align non-spider type couplings by using a feeler gauge or taper gauge between the coupling halves every 90°. The coupling is in alignment when the hubs are the same distance apart at all points (see Figure 4).

Check parallel adjustment by laying a straightedge across both coupling rims at the top, bottom, and side. When the straightedge rests evenly on both halves of the coupling, the coupling is in horizontal parallel alignment. If the coupling is misaligned, use a feeler gauge between the coupling and the straightedge to measure the amount of misalignment.



**Do not operate the pump without the guard in place over the rotating parts. exposed rotating parts can catch clothing, fingers, or tools, causing severe injury to personnel.**

**AUTO-START**

The standard pump is equipped with an auto-start control system which allows the pump to start and stop as the liquid level in the wet well or sump rises and falls.

Refer to the information which follows for installation details for the liquid level sensing system provided with your pump.

**Float Switch Installation**

The Float Switch autostart system employs either a single or double float switch, where a bulb raises or

lowers (floats) with the liquid level, thus activating an enclosed miniature switch. The floats are equipped with a socket type connector that plugs into a matching receptacle on the auto-start control box.

Standard floats are equipped with 50 feet (15,2 m) of cable.

When installing the floats, note the following:

- a. **Be sure** to provide sufficient room in the wet well or sump so that floats do not get obstructed or drawn into the suction line. If a flexible suction hose is used, it may be extended to lay along the bottom of the wet well or sump and the float can be attached to the hose above the point where it bends along the bottom. Direct the suction line toward the flow, and the float(s) away from the flow. If a standpipe is available, attach the float switch cable

to the standpipe in the sump at the approximate desired liquid level.

- b. In a single float system, the cable can be tethered to the suction line or standpipe approximately 6 inches (152 mm) above the float. This setting allows approximately 9 inches (229 mm) of liquid rise between pump start/stop. The start/stop interval may be increased by extending the float end of the cable. The liquid level in the sump will increase approximately 8 inches (203 mm) between start/stop intervals for every 6 inches (152 mm) of cable increase.
- c. If a double float switch system is used, position the "Start" float at the desired high water level in the sump, and the "Stop" float at the desired low water level in the pump.
- d. Refer to Figure 5 for additional float switch data.

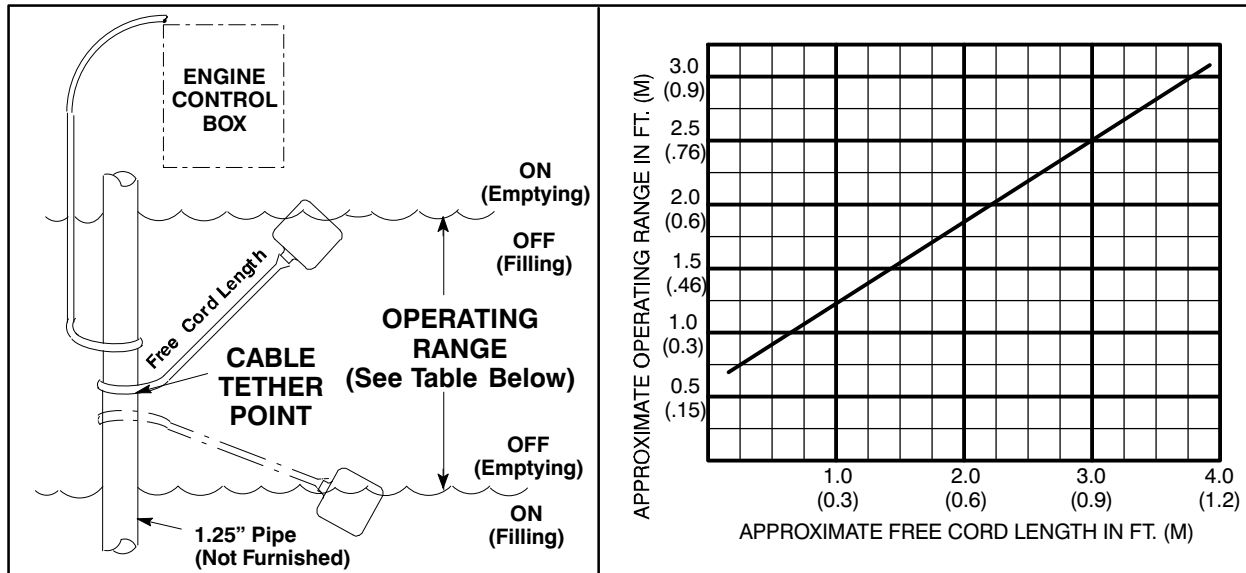


Figure 5. Float Switch Data

## OPERATION – SECTION C

### OPERATION



**This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids and corrosives. Do not attempt to pump volatile, corrosive, or flammable liquids which may damage the pump or endanger personnel as a result of pump failure.**



Pump speed and operating condition points must be within the continuous performance range shown on the performance curve in Section E on page E-1.

### STARTING

Check the fuel level and oil levels in the engine, air compressor, pump bearings and seal housing.

Make sure the pump is level. Lower the jack stands and chock the wheels, if so equipped.



Make sure the pump is level. Lower jack stands and chock the wheels, if so equipped. Use caution when positioning the skid-mounted unit to prevent damage to the fuel tank.



**This pump is equipped with automatic liquid level controls, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent**

**injury during automatic operation. Disconnect the positive battery cable before performing any maintenance. Failure to do so may result in serious personal injury.**

Consult the engine operations manual before attempting to start the unit.

### Manual Starting

On initial start-up, set the engine speed at in the half-throttle position. Turn the keyswitch to 'MANUAL'. After the engine starts and the unit is fully primed, adjust the engine RPM until the desired flow rate is achieved.



Pump speed and operating condition points must be within the continuous performance range shown on the curve on Page E-1.

### Automatic Starting

With the float system installed, follow the procedures outlined for manual starting and throttle adjustment. Switch the keyswitch to 'OFF' until the water level rises above the on point for the float system, then turn the keyswitch to the 'AUTO' setting. The unit will run until the float signals the control that the water in the wet well is at the float off point, at which time the unit will shut down automatically. When the float signals the control that the water in the wet well is at the float on point, the unit will restart automatically, repeating the cycle.

**Review all SAFETY information in Section A.**

**Follow the instructions on all tags, labels and decals attached to the pump.**



**Do not operate an internal combustion**

engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.

## PRIMING

The pump will begin to prime upon startup. The air in the suction line will be discharged from the educator discharge line. Complete priming is indicated by a positive discharge pressure reading.

If full priming is not achieved, the discharge check valve may be malfunctioning. If this occurs, shut down the pump and consult **Maintenance and Repair**, Section E for further details.

## ROUTINE OPERATION



Do not operate an internal combustion engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.

Adjust the engine speed to achieve the desired output. Do not exceed the factory set engine speed and system operating pressure. Do not operate below the recommended operating speed (if applicable).



Never tamper with the governor to gain more power. The governor establishes safe operating limits that should not be exceeded. Refer to the Performance Curve in Section E for the maximum continuous operating speed for this pump.

## OPERATION IN EXTREME HEAT

The safety shutdown system will automatically stop the unit if engine operating temperature exceeds design limits. If engine over-temperature shutdown occurs, allow the unit to cool before re-starting.

If engine overheating continues, check the engine lubricant level and viscosity. Consult the engine operation manual for the recommended lubricant for operation in extreme heat.

If the unit is being operated in the **automatic** mode, adjust the float(s) to allow shorter run and longer cooling periods, if possible.



This pump is equipped with automatic liquid level controls, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect the battery before performing any maintenance. Failure to do so may result in serious personal injury.

## OPERATIONAL CHECKS

### Leakage

Once the pump is fully primed, no leakage should be visible at pump mating surfaces, or at pump connections or fittings. Keep all line connections and fittings tight to maintain maximum pump efficiency.

### Pump Vacuum Check

Read the vacuum gauge with the pump primed and at operation speed. Shut off the pump. The vacuum gauge reading will immediately drop proportionate to static suction lift, and should then stabilize. If the vacuum reading falls off rapidly after stabilization, an air leak exists. Before checking for the source of the leak, check the point of installation of the vacuum gauge.

### Liquid Temperature And Overheating

The **maximum** liquid temperature for this pump is 160°F (71°C). Do not apply it at a higher operating temperature.



Overheating can occur if operated with the valves in the suction or discharge lines closed. Operating against closed valves could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode. If overheating occurs, stop the pump immediately and allow it to completely cool before servicing it. **Approach any over-heated pump cautiously.**



**Allow an over-heated pump to completely cool before servicing. Do not remove plates, covers, gauges, or fittings from an overheated pump. Liquid within the pump can reach boiling temperatures, and vapor pressure within the pump can cause parts being disengaged to be ejected with great force. After the pump cools, drain the liquid from the pump by removing the casing drain plug. Use caution when removing the plug to prevent injury to personnel from hot liquid.**

#### Strainer Check

Check the strainer regularly, and clean it as necessary. The strainer should also be checked if pump flow rate begins to drop. Monitor and record the vacuum suction gauge readings regularly to detect strainer blockage.

**Never** introduce air or steam pressure into the pump casing or piping to remove a blockage. This could result in personal injury or damage to the equipment. If backflushing is absolutely necessary, **liquid pressure** must be limited to 50% of the maximum permissible operating pressure shown on the pump performance curve.

## STOPPING

#### Manual Stopping

Never halt the flow of liquid suddenly. If the liquid being pumped is stopped abruptly, damaging shock waves can be transmitted to the pump and piping system. Close all connecting valves slowly.

Reduce the throttle speed slowly and allow the engine to idle briefly before stopping.

In the manual mode, reduce the throttle speed slowly, and allow the engine to idle briefly before switching the HAND-OFF-AUTO switch to 'OFF'.



If the application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

After stopping the pump, switch off the engine ignition and remove the key to ensure that the pump will remain inoperative.

#### Automatic Stopping

In the automatic mode, the pump will stop when the liquid in the wet well or sump lowers and activates the "Off" float switch(s). The pump will restart automatically when the liquid rises and activates the "On" float switch(s).

#### Safety Shutdown System

The unit is equipped with a safety system to automatically shut down the engine under certain conditions. The engine will automatically shut down:

1. If the engine exceeds its safe operating temperature.
2. If the engine oil pressure drops below design limits.
3. If the engine fails to start within a pre-set period of time.
4. If the engine speed exceeds the safe operating range.
5. If the engine fan belt breaks.

Lights on the control panel will indicate which of the safety features has caused the engine to shut down.

Should any of the safety features cause the engine to shut down, **the cause must be determined and corrected** before putting the unit back into service. The engine **will not restart** until the key switch has

been returned to the 'OFF' position for at least 10 seconds.

All safety shutdown features are pre-set at the factory for optimum performance and safety; **do not** attempt to adjust these settings.



**Never disconnect any of the safety shutdown features; this will void the warranty and could result in serious damage to the unit and/or injury to personnel. Safety shutdown features are pre-set at the factory; do not attempt to adjust any of the settings. Determine the cause of shutdown before putting the unit back into service. Consult the factory for additional information.**

## PERIODIC CHECKS

### Seal Cavity And Bearing Lubrication

Both the seal and bearing cavities were fully lubricated at the factory. Check the lubrication levels before startup, and regularly thereafter as indicated in Section E, **Maintenance and Repair**. When lubrication is required, use **only** SAE No. 30 non-detergent oil.

### Bearing Temperature Check

Bearings normally run at higher than ambient temperatures because of heat generated by friction. Temperatures up to 160°F (71°C) are considered normal for bearings, and they can operate safely to at least 180°F (82°C).

Checking bearing temperatures by hand is inaccurate. Bearing temperatures can be measured accurately by placing a contact-type thermometer against the housing. Record this temperature for future reference.

A sudden increase in bearing temperatures is a warning that the bearings are at the point of failing

to operate properly. Make certain that the bearing lubricant is of the proper viscosity and at the correct level (see **LUBRICATION** in Section E, **Maintenance and Repair**). Bearing overheating can also be caused by shaft misalignment and/or excessive vibration.

When pumps are first started, the bearings may seem to run at temperatures above normal. Continued operation should bring the temperatures down to normal levels.

### Engine Fuel Filter

Consult the manual accompanying the engine, and change the fuel filter periodically as indicated. If operated under extremely dusty and/or humid conditions, change the filter more frequently. Irregular performance and loss of power usually indicate a dirty fuel filter.

### Engine Oil

The engine was lubricated for test at the factory. However, **always** check the lubrication level before startup.

Consult the manual accompanying the engine, and change the oil filter periodically as indicated. If operated under extremely dusty conditions, change the filter more frequently.

## COLD WEATHER PRESERVATION

In below freezing conditions, drain the pump to prevent damage from freezing. Also, clean out any solids by flushing with a hose. Operate the pump for approximately one minute; this will remove any remaining liquid that could freeze the pump rotating parts. If the pump will be idle for more than a few hours, or if it has been pumping liquids containing a large amount of solids, drain the pump, and flush it thoroughly with clean water. To prevent large solids from clogging the drain port and preventing the pump from completely draining, insert a rod or stiff wire in the drain port, and agitate the liquid during the draining process. Clean out any remaining solids by flushing with a hose.

## TROUBLESHOOTING – SECTION D

Review all SAFETY information in Section A.



**Before attempting to open or service the pump:**

1. Familiarize yourself with this manual.
2. Shut down the engine and disconnect the positive battery cable to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure pump is cool before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP FAILS TO PRIME	Discharge check valve contaminated, damaged, or unable to seat. Air compressor head 180° out. Air leak in suction line. Lining of suction hose collapsed. Leaking or worn seal or pump gasket.  Suction lift or discharge head too high.  Air compressor damaged or belts broken. Strainer clogged.	Clean or replace check valve.  Consult factory. Correct leak. Replace suction hose. Check pump vacuum. Replace leaking or worn seal or gasket. Check piping installation and install bypass line if needed. See <b>INSTALLATION</b> . Check and repair/replace.  Check strainer and clean if necessary.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Eductor clogged. Air leak in suction line. Lining of suction hose collapsed. Leaking or worn seal or pump gasket.	Check and clean eductor. Correct leak. Replace suction hose. Check pump vacuum. Replace leaking or worn seal or gasket.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE (cont.)	<p>Strainer clogged.</p> <p>Discharge check valve clogged.</p> <p>Suction intake not submerged at proper level or sump too small.</p> <p>Impeller or other wearing parts worn or damaged.</p> <p>Impeller clogged.</p> <p>Discharge head too high.</p> <p>Suction lift too high.</p> <p>Pump speed too slow.</p> <p>Belt or flexible coupling broken.</p>	<p>Check strainer and clean if necessary.</p> <p>Check and clean check valve.</p> <p>Check installation and correct submergence as needed.</p> <p>Replace worn or damaged parts. Check that impeller is properly centered and rotates freely.</p> <p>Free impeller of debris.</p> <p>Install bypass line.</p> <p>Measure lift w/vacuum gauge. Reduce lift and/or friction losses in suction line.</p> <p>Check engine output; consult engine operation manual.</p> <p>Check and replace as necessary.</p>
PUMP REQUIRES TOO MUCH POWER	<p>Pump speed too high.</p> <p>Extreme ambient temperature.</p> <p>Discharge head too low.</p> <p>Fuel filter clogged.</p> <p>Liquid solution too thick.</p> <p>Fuel contaminated.</p> <p>Pump or jack shaft bearing(s) frozen.</p>	<p>Check engine output.</p> <p>Reduce pump output.</p> <p>Adjust discharge valve.</p> <p>Check &amp; replace often in extreme operating conditions.</p> <p>Dilute if possible.</p> <p>Check and replace as required.</p> <p>Disassemble, check and replace bearing(s) as required..</p>
PUMP CLOGS FREQUENTLY	<p>Discharge flow too slow.</p> <p>Suction check valve or foot valve clogged or binding.</p> <p>Liquid solution too thick.</p>	<p>Open discharge valve fully to increase flow rate, and run engine at maximum governed speed.</p> <p>Clean valve.</p> <p>Dilute if possible.</p>
EXCESSIVE NOISE	<p>Cavitation in pump.</p> <p>Pumping entrained air.</p> <p>Pump or drive not securely mounted.</p> <p>Impeller clogged or damaged.</p>	<p>Reduce suction lift and/or friction losses in suction line. Record vacuum and pressure gauge readings and consult local representative or factory.</p> <p>Locate and eliminate source of air bubble.</p> <p>Secure mounting hardware.</p> <p>Clean out debris; replace damaged parts.</p>

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
BEARINGS RUN TOO HOT	<p>Bearing temperature is high, but within limits.</p> <p>Low or incorrect lubricant.</p> <p>Suction and discharge lines not properly supported.</p> <p>Drive misaligned.</p> <p>Excessive tension on drive belt.</p>	<p>Check bearing temperature regularly to monitor any increase.</p> <p>Check for proper type and level of lubricant.</p> <p>Check piping installation for proper support.</p> <p>Align drive properly.</p> <p>Check belt tension. Adjust as required.</p>

## PREVENTIVE MAINTENANCE

Since pump applications are seldom identical, and pump wear is directly affected by such things as the abrasive qualities, pressure and temperature of the liquid being pumped, this section is intended only to provide general recommendations and practices for preventive maintenance. Regardless of the application however, following a routine preventive maintenance schedule will help assure trouble-free performance and long life from your Gorman-Rupp pump. For specific questions concerning your application, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

Record keeping is an essential component of a good preventive maintenance program. Changes in suction and discharge gauge readings (if so

equipped) between regularly scheduled inspections can indicate problems that can be corrected before system damage or catastrophic failure occurs. The appearance of wearing parts should also be documented at each inspection for comparison as well. Also, if records indicate that a certain part (such as the seal) fails at approximately the same duty cycle, the part can be checked and replaced before failure occurs, reducing unscheduled down time.

For new applications, a first inspection of wearing parts at 250 hours will give insight into the wear rate for your particular application. Subsequent inspections should be performed at the intervals shown on the chart below. Critical applications should be inspected more frequently.


<b>Preventive Maintenance Schedule</b>					
Item	Service Interval*				
	Daily	Weekly	Monthly	Semi-Annually	Annually
General Condition (Temperature, Unusual Noises or Vibrations, Cracks, Leaks, Loose Hardware, Etc.)	I				
Pump Performance (Gauges, Speed, Flow)	I				
Bearing Lubrication		I			R
Seal Lubrication (And Packing Adjustment, If So Equipped)		I			R
V-Belts (If So Equipped)			I		
Air Release Valve Plunger Rod (If So Equipped)			I	C	
Front Impeller Clearance (Wear Plate)				I	
Rear Impeller Clearance (Seal Plate)				I	
Check Valve					I
Pressure Relief Valve (If So Equipped)					C
Pump and Driver Alignment					I
Shaft Deflection					I
Bearings					I
Bearing Housing					I
Piping					I
Driver Lubrication – See Mfgr’s Literature					I

Legend:  
 I = Inspect, Clean, Adjust, Repair or Replace as Necessary  
 C = Clean  
 R = Replace

\* Service interval based on an intermittent duty cycle equal to approximately 4000 hours annually. Adjust schedule as required for lower or higher duty cycles or extreme operating conditions.

## PUMP MAINTENANCE AND REPAIR – SECTION E

**MAINTENANCE AND REPAIR OF THE WEARING PARTS OF THE PUMP WILL MAINTAIN PEAK OPERATING PERFORMANCE.**

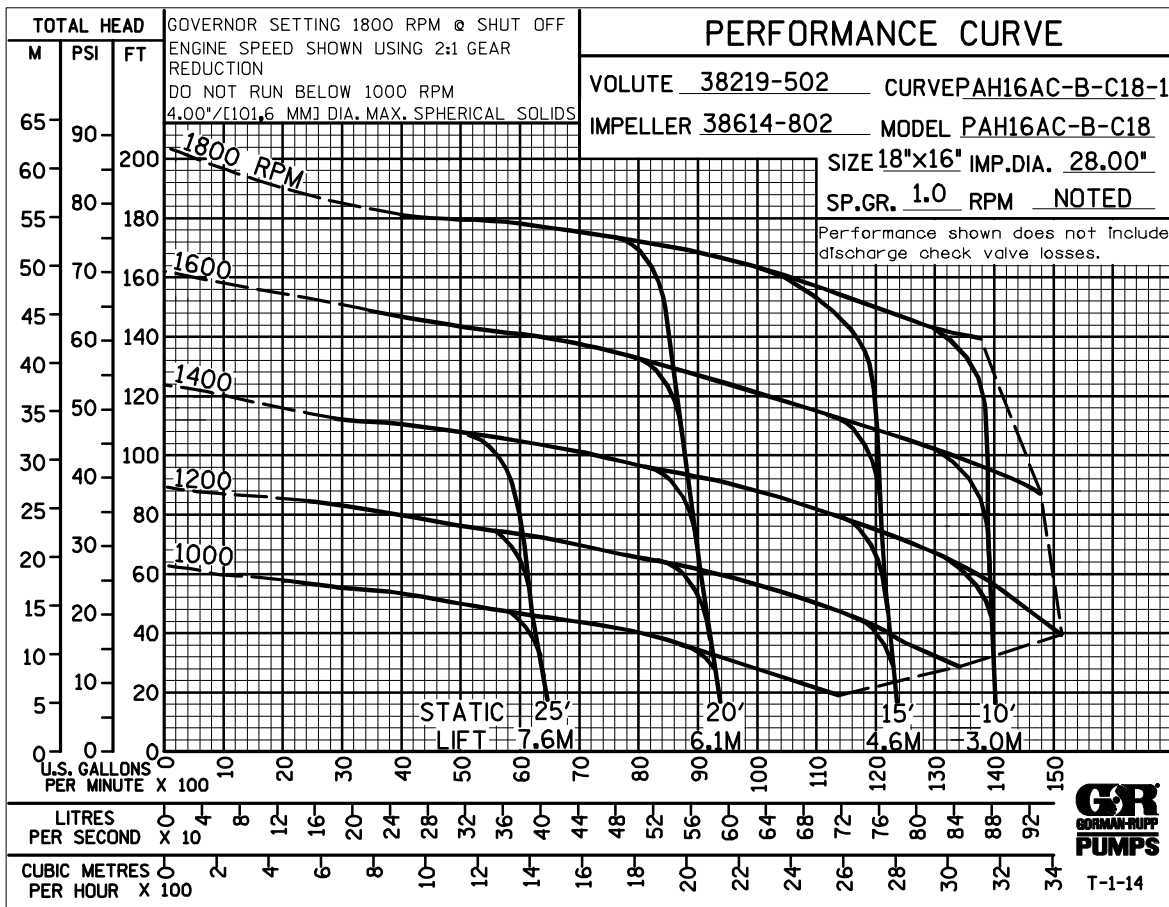

**\* STANDARD PERFORMANCE FOR PUMP MODEL PAH16A60C-B-C18**

\* Based on 70°F (21°C) clear water at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve.

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model.

ILLUSTRATION

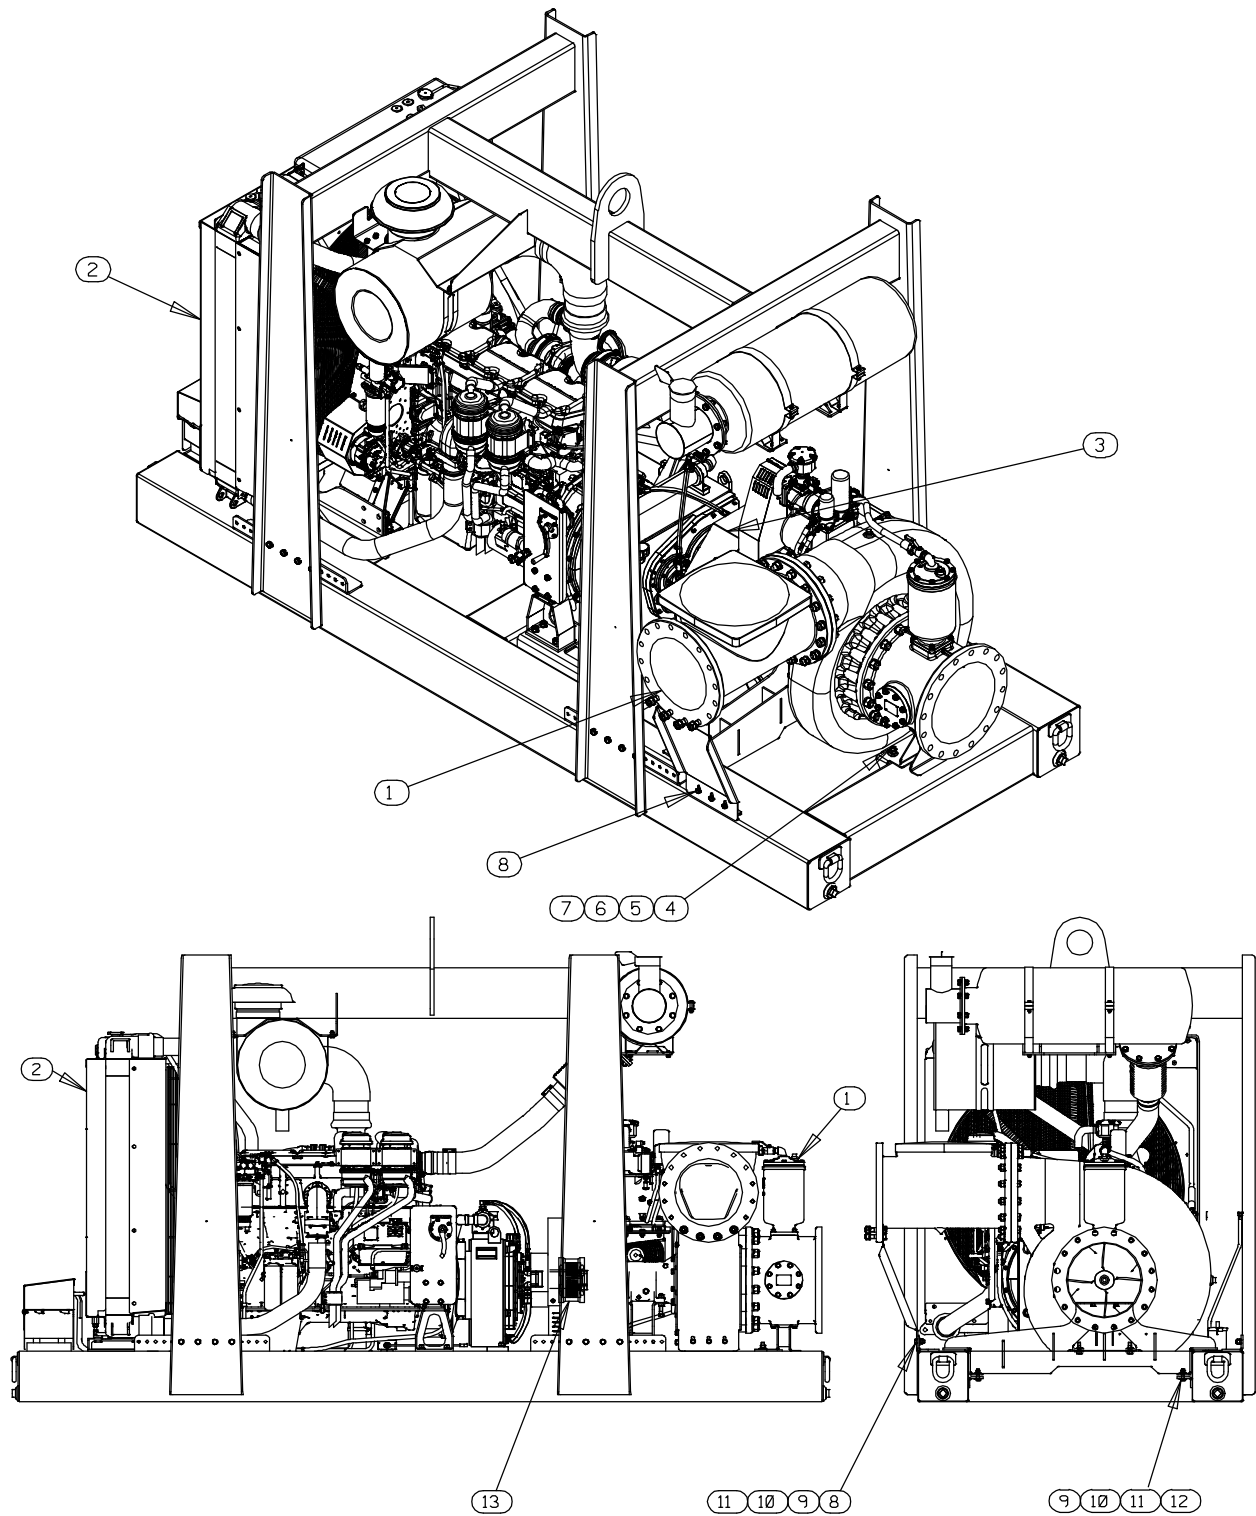


Figure 1. Pump Model PAH16A60C-B-C18



**PARTS LIST****Pump Model PAH16A60C-B-C18**

(From S/N 1565911 Up)

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP END ASSY	46133-435		1
2	CAT C18 POWER UNIT	46143-174		1
3	COUPLING GUARD ASSY	42341-057		1
4	HEX HEAD CAP SCREW	B1209	15991	2
5	HEX NUT	D12	15991	2
6	LOCK WASHER	J12	15991	2
7	FLAT WASHER	K12	15991	4
8	HEX HEAD CAP SCREW	B1008	15991	3
9	FLAT WASHER	K10	15991	7
10	LOCK WASHER	J10	15991	5
11	HEX NUT	D10	15991	5
12	HEX HEAD CAP SCREW	B1010	15991	2
13	COUPLING ASSY	24360-301		1
NOT SHOWN:				
	PRIME AIRE PLUS DECAL	38812-110		2
	G-R DECAL	GR-06		2
	CAUTION DECAL	2613FJ		1

ILLUSTRATION

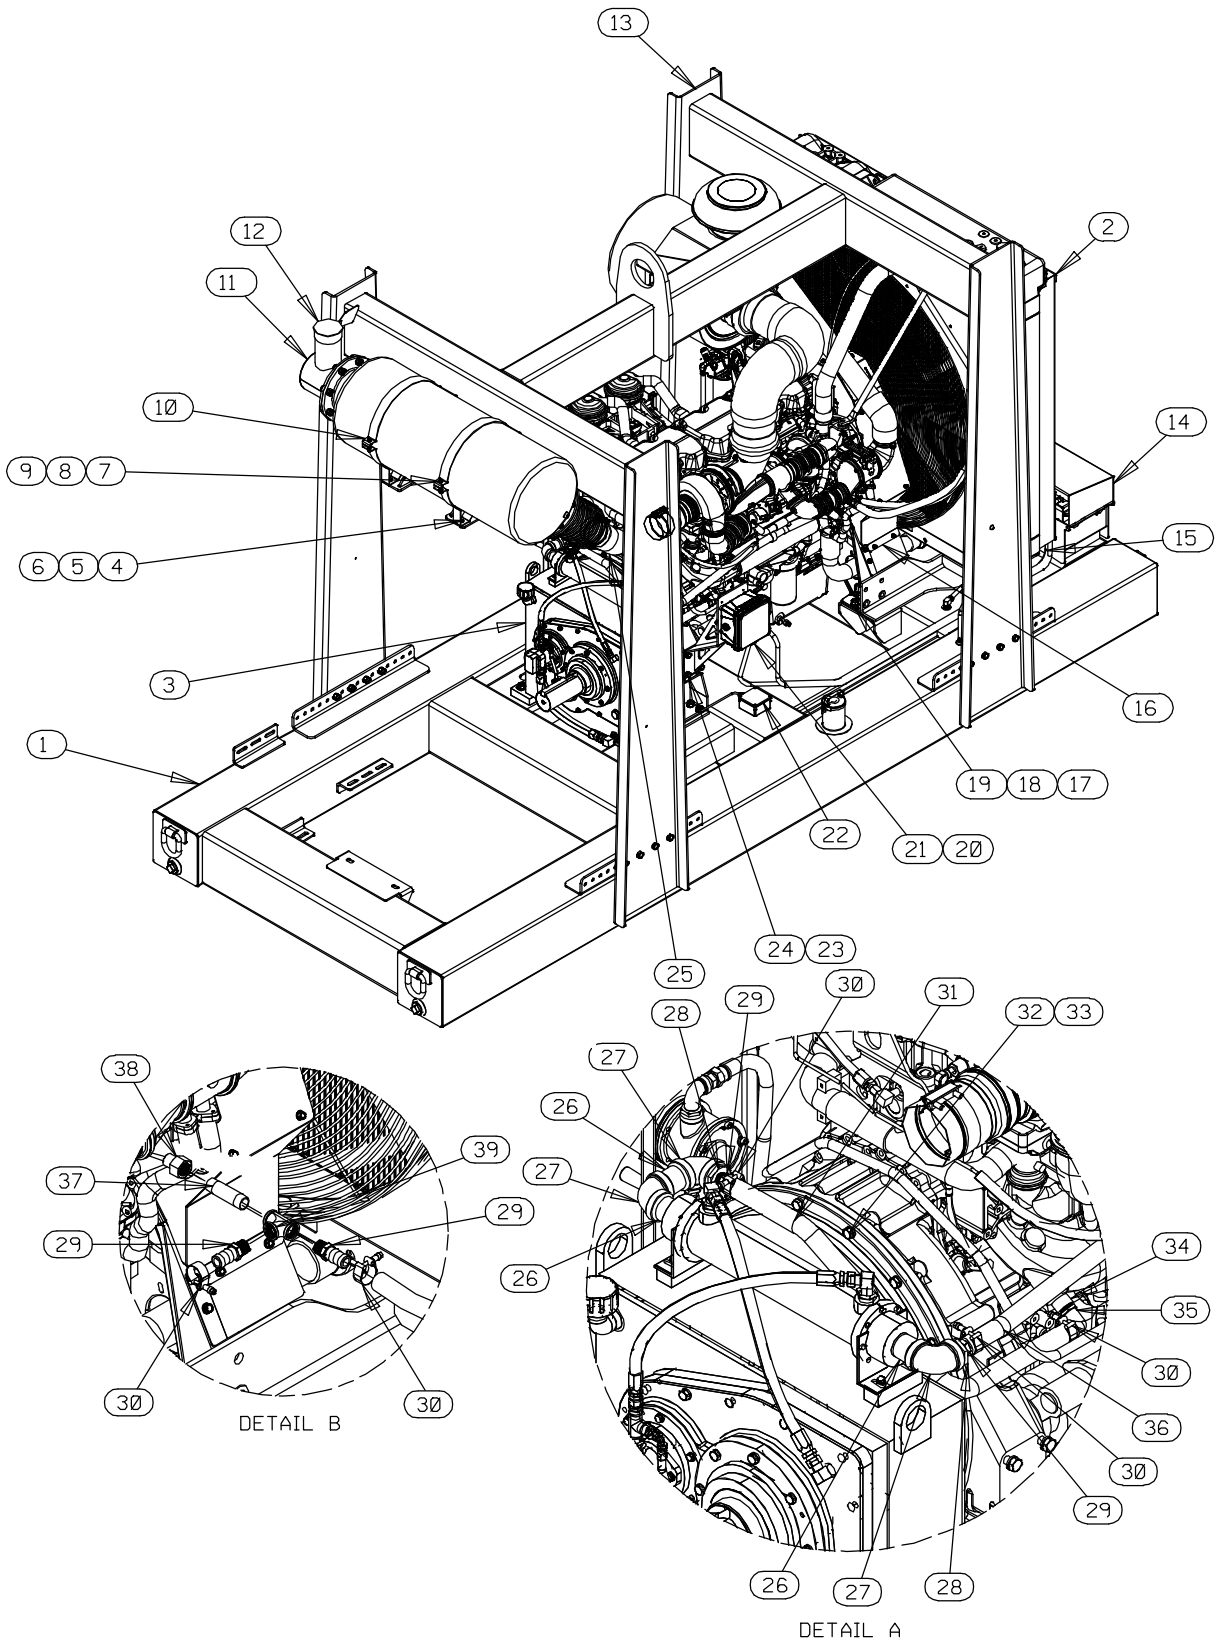


Figure 2. 46143-174 Power Unit

**PARTS LIST**  
**46143-174 Power Unit**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	BASE/FUEL TANK ASSY	41553-049	24150	1	44	ENGINE OIL DRAIN KIT	46346-389	----	1
2	CAT ENGINE	29236-481	----	1	45	HEX HEAD CAP SCREW	B1210	15991	11
3	GEAR BOX	24572-210	----	1	46	48" LG POS CBL ASSY	47311-700	----	1
4	HEX HEAD CAP SCREW	B0705	15991	4	47	54" LG NEG CBL ASSY	47311-703	----	1
5	LOCK WASHER	J07	15991	4	48	NYLON PROT SLEEVE	25141-263	----	2
6	HEX NUT	D07	15991	4	49	8D BATTERY	29331-541	----	2
7	HEX HEAD CAP SCREW	B0610	15991	2	50	114" LG POS BATT CBL	47311-701	----	1
8	HEX NUT	D06	15991	2	51	96" LG NEG BATT CBL	47311-704	----	1
9	LOCK WASHER	J06	15991	2	52	CLAMP	27111-348	----	1
10	MUFF STRAP BRKT ASSY	41121-408	24150	2	53	KEY	N1624	15990	1
11	EXHAUST OUTLET ASSY	46281-008	24150	1	54	HEX HEAD CAP SCREW	B1212	15991	2
12	WEATHER CAP	29334-317	----	1	55	CLAMP W/CUSHION	27111-347	----	1
13	LIFTING ASSEY	44715-052	----	1	56	1/2" ID X 72" LG HOSE	18513-303	----	1
14	BATTERY BOX ASSY	42432-011	----	2	57	HOSE BARB FTG	26523-047	----	2
15	NYLON PROT SLEEVE	25141-263	----	1	58	90° ELBOW ADAPTER	26571-071	----	1
16	GUARD ASSY	42354-519	----	1	59	90° ADAPTER ELBOW	26571-053	----	1
17	HEX NUT	D12	15991	16	60	ADAPTER	26571-091	----	1
18	HEX HEAD CAP SCREW	B1208	15991	3	61	ADAPTER	26345-001	----	1
19	LOCK WASHER	J12	15991	16	62	AIR VENT	S1703	----	1
20	CONT BOX MTG BRKT	41888-305	24150	1	63	HOSE BARB FITTING	26523-447	----	1
21	CONTROL BOX	29284-084	----	1	64	CABLE TIE	27111-218	----	1
22	FUEL SENDING UNIT	48122-939	----	1	65	1/2" ID X 48" LG HOSE	18513-303	----	1
23	LOCK WASHER	J10	15991	4	66	1/2" ID X 24" LG HOSE	18513-303	----	1
24	HEX HEAD CAP SCREW	B1006	15991	4	67	REDU PIPE BUSHING	AP0806	15079	1
25	EXHAUST PIPE	31962-002	----	1	68	HOSE BARB FITTING	26523-389	----	1
26	PIPE NIPPLE	T2412	15079	3	69	HOSE BARB	26525-020	----	2
27	PIPE ELBOW	R24	11999	3	70	FUEL PICKUP	29332-149	----	2
28	RED PIPE BUSHING	AP2412	11999	2	71	WING NUT	BB06	15991	4
29	HOSE BARB FITTING	26523-397	----	4	NOT SHOWN:				
30	T-BOLT CLAMP	26518-181	----	5		INSTRUCTION DECAL	38818-144	----	2
31	1" ID X 26" LG HOSE	18513-321	----	1		ENG OPERATING DECAL	38816-347	----	1
32	HEX HEAD CAP SCREW	B0808	15991	16		WARNING DECAL	2613FE	----	2
33	LOCK WASHER	J08	15991	20		WARNING DECAL	38816-345	----	2
34	ADAPTOR	26525-181	----	1		CAUTION DECAL	2613FJ	----	1
35	HOSE BARB ELBOW	26523-513	----	1		WARNING DECAL	38816-203	----	4
36	1" ID X 48" LG HOSE	18513-321	----	1		WARNING DECAL	38816-132	----	2
37	PIPE NIPPLE	T1214	14990	1		ULTRA LOW SULFUR			
38	ADAPTER	26525-182	----	1		FUEL DECAL	38816-196	----	1
39	TEE	U12	14990	1		INSTRUCTION TAG	38817-085	----	1
40	BAND CLAMP ASSY	29334-422	----	2		ENGINE START-UP TAG	38816-269	----	1
41	HEX NUT	D08	15991	4		G-R DECAL	GR-06	----	2
42	HEX HEAD CAP SCREW	B0805	15991	4		FLOAT SWITCH	48312-980	----	1
43	MOUNTING BRACKET	34613-116	15120	1					

ILLUSTRATION

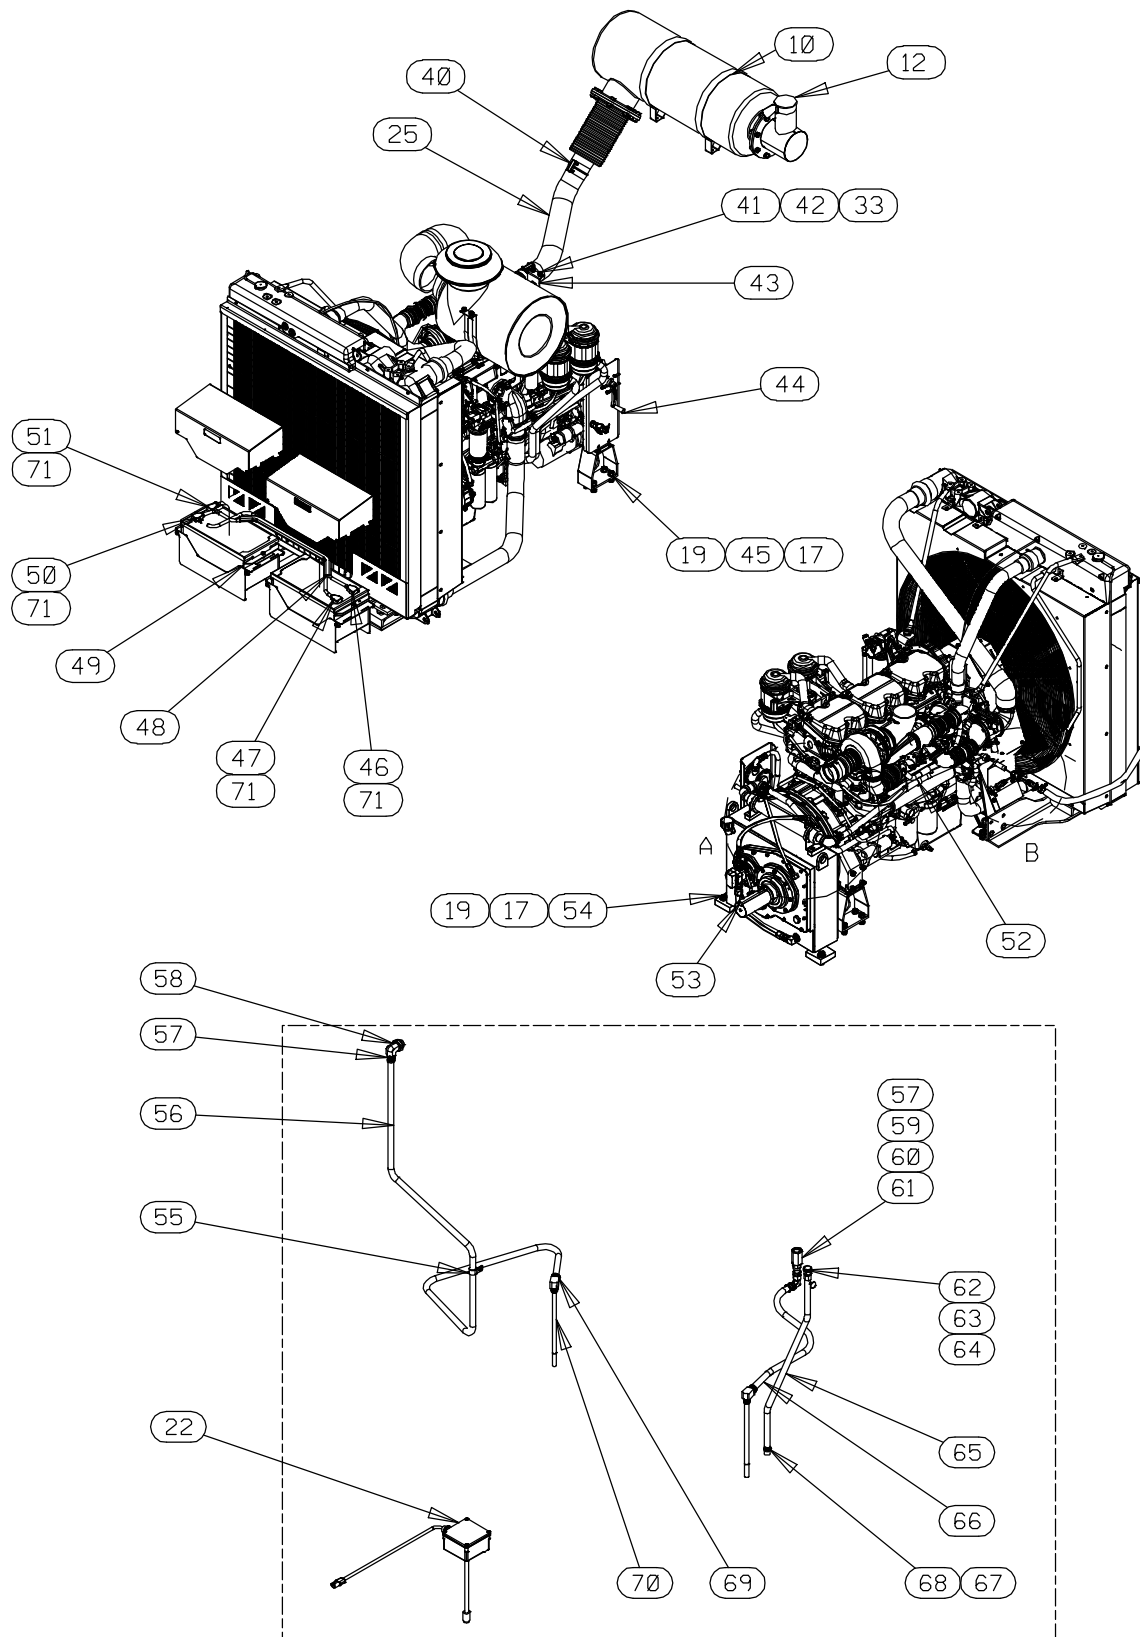


Figure 3. 46143-174 Power Unit

**PARTS LIST**  
**46143-174 Power Unit**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	BASE/FUEL TANK ASSY	41553-049	24150	1	44	ENGINE OIL DRAIN KIT	46346-389	----	1
2	CAT ENGINE	29236-481	----	1	45	HEX HEAD CAP SCREW	B1210	15991	11
3	GEAR BOX	24572-210	----	1	46	48" LG POS CBL ASSY	47311-700	----	1
4	HEX HEAD CAP SCREW	B0705	15991	4	47	54" LG NEG CBL ASSY	47311-703	----	1
5	LOCK WASHER	J07	15991	4	48	NYLON PROT SLEEVE	25141-263	----	2
6	HEX NUT	D07	15991	4	49	8D BATTERY	29331-541	----	2
7	HEX HEAD CAP SCREW	B0610	15991	2	50	114" LG POS BATT CBL	47311-701	----	1
8	HEX NUT	D06	15991	2	51	96" LG NEG BATT CBL	47311-704	----	1
9	LOCK WASHER	J06	15991	2	52	CLAMP	27111-348	----	1
10	MUFF STRAP BRKT ASSY	41121-408	24150	2	53	KEY	N1624	15990	1
11	EXHAUST OUTLET ASSY	46281-008	24150	1	54	HEX HEAD CAP SCREW	B1212	15991	2
12	WEATHER CAP	29334-317	----	1	55	CLAMP W/CUSHION	27111-347	----	1
13	LIFTING ASSEY	44715-052	----	1	56	1/2" ID X 72" LG HOSE	18513-303	----	1
14	BATTERY BOX ASSY	42432-011	----	2	57	HOSE BARB FTG	26523-047	----	2
15	NYLON PROT SLEEVE	25141-263	----	1	58	90° ELBOW ADAPTER	26571-071	----	1
16	GUARD ASSY	42354-519	----	1	59	90° ADAPTER ELBOW	26571-053	----	1
17	HEX NUT	D12	15991	16	60	ADAPTER	26571-091	----	1
18	HEX HEAD CAP SCREW	B1208	15991	3	61	ADAPTER	26345-001	----	1
19	LOCK WASHER	J12	15991	16	62	AIR VENT	S1703	----	1
20	CONT BOX MTG BRKT	41888-305	24150	1	63	HOSE BARB FITTING	26523-447	----	1
21	CONTROL BOX	29284-084	----	1	64	CABLE TIE	27111-218	----	1
22	FUEL SENDING UNIT	48122-939	----	1	65	1/2" ID X 48" LG HOSE	18513-303	----	1
23	LOCK WASHER	J10	15991	4	66	1/2" ID X 24" LG HOSE	18513-303	----	1
24	HEX HEAD CAP SCREW	B1006	15991	4	67	REDU PIPE BUSHING	AP0806	15079	1
25	EXHAUST PIPE	31962-002	----	1	68	HOSE BARB FITTING	26523-389	----	1
26	PIPE NIPPLE	T2412	15079	3	69	HOSE BARB	26525-020	----	2
27	PIPE ELBOW	R24	11999	3	70	FUEL PICKUP	29332-149	----	2
28	RED PIPE BUSHING	AP2412	11999	2	71	WING NUT	BB06	15991	4
29	HOSE BARB FITTING	26523-397	----	4	NOT SHOWN:				
30	T-BOLT CLAMP	26518-181	----	5		INSTRUCTION DECAL	38818-144	----	2
31	1" ID X 26" LG HOSE	18513-321	----	1		ENG OPERATING DECAL	38816-347	----	1
32	HEX HEAD CAP SCREW	B0808	15991	16		WARNING DECAL	2613FE	----	2
33	LOCK WASHER	J08	15991	20		WARNING DECAL	38816-345	----	2
34	ADAPTOR	26525-181	----	1		CAUTION DECAL	2613FJ	----	1
35	HOSE BARB ELBOW	26523-513	----	1		WARNING DECAL	38816-203	----	4
36	1" ID X 48" LG HOSE	18513-321	----	1		WARNING DECAL	38816-132	----	2
37	PIPE NIPPLE	T1214	14990	1		ULTRA LOW SULFUR			
38	ADAPTER	26525-182	----	1		FUEL DECAL	38816-196	----	1
39	TEE	U12	14990	1		INSTRUCTION TAG	38817-085	----	1
40	BAND CLAMP ASSY	29334-422	----	2		ENGINE START-UP TAG	38816-269	----	1
41	HEX NUT	D08	15991	4		G-R DECAL	GR-06	----	2
42	HEX HEAD CAP SCREW	B0805	15991	4		FLOAT SWITCH	48312-980	----	1
43	MOUNTING BRACKET	34613-116	15120	1					

ILLUSTRATION

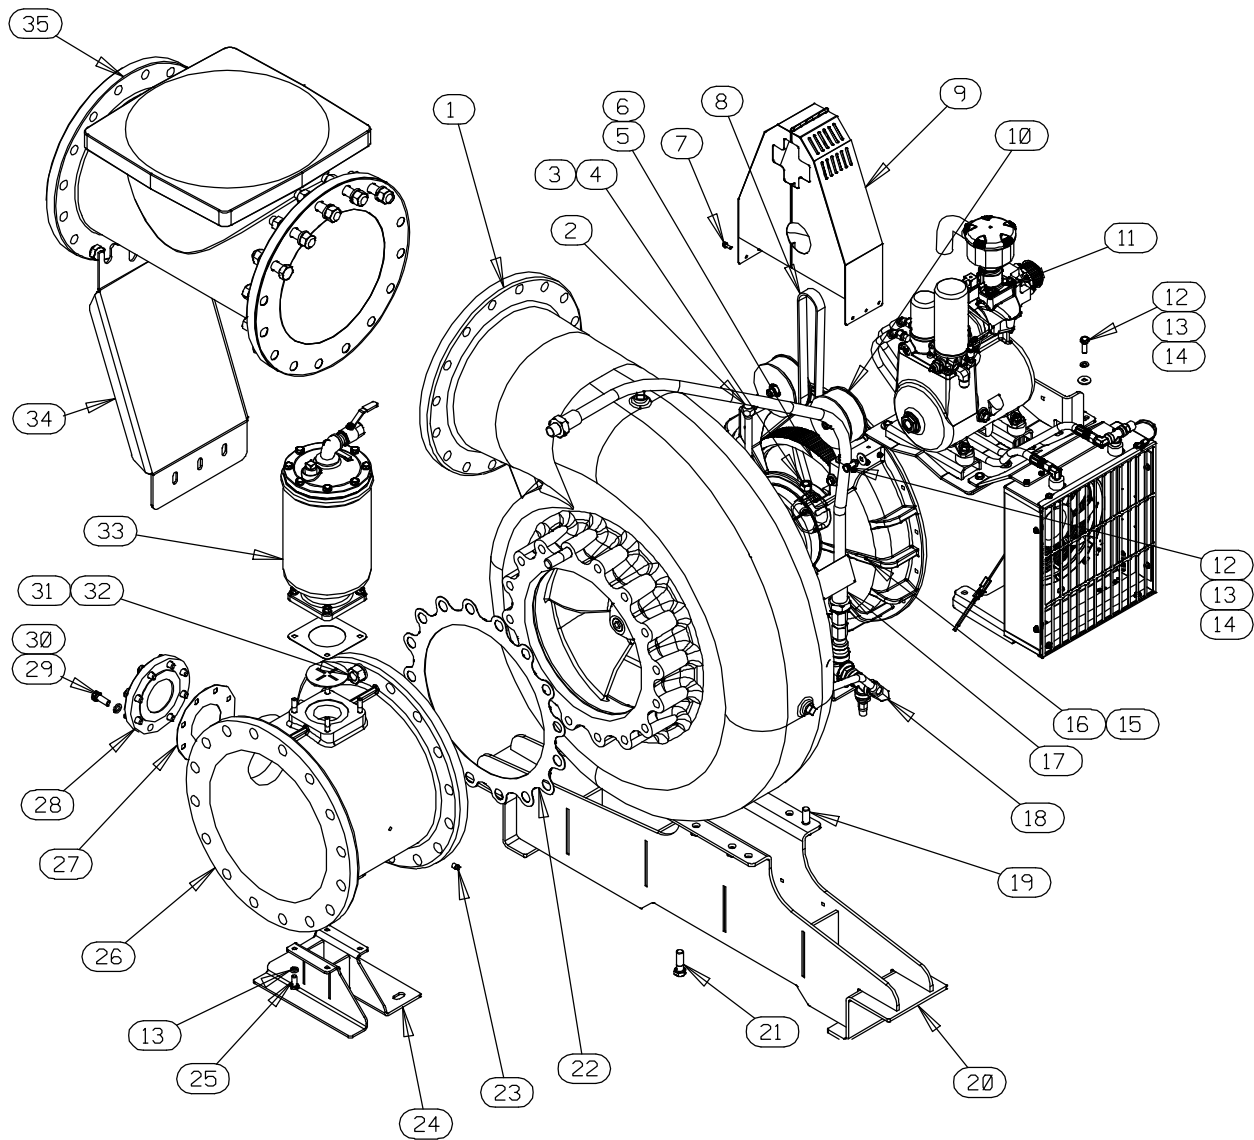


Figure 4. PAH16A60C-B-(C18) Pump Assembly

**PARTS LIST**  
**PAH16A60C-B-(C18) Pump Assembly**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP ASSY	46133-434	----	1	28	BLIND FLANGE ASSY	42111-358	----	1
2	HOSE ASSY	46341-035	----	1	29	LOCK WASHER	J10	15991	8
3	LOCK WASHER	J12	15991	4	30	HEX HD CAP SCREW	B1007	15991	8
4	HEX NUT	D12	15991	4	31	LOCK WASHER	J18	15991	16
5	SPROCKET	24271-126	----	1	32	HEX NUT	D18	15991	16
6	BUSHING	24131-440	----	1	33	PRIMING CHAMBER KIT	48275-006	----	1
7	FLANGED CAP SCREW	21634-505	----	6	34	SUPPORT BRACKET	34837-005	15080	1
8 *	BELT	24186-019	----	1	35	CHECK VALVE KIT	48274-010	----	1
9	BELT GUARD ASSY	42351-523	----	1		-CHECK VALVE	26642-131	----	1
10	TENSIONER	24211-001	----	2	*	-FLAPPER	26688-017	----	1
11	AIR COMPRESSOR ASSY	46181-914	----	1	*	-COVER GASKET	26688-018	----	1
12	HEX HD CAP SCREW	B0806	15991	6	*	-FLANGE GASKET	25113-043	----	1
13	LOCK WASHER	J08	15991	10		-HEX NUT	D16	15991	24
14	FLAT WASHER	K08	15991	6		-LOCK WASHER	J16	15991	24
15	NAMEPLATE	38818-156	13000	1		-6 IN LG THREADED ROD	31345-018	15991	4
16	DRIVE SCREW	BM#04-03	17000	4		-HEX HD CAP SCREW	B1622	15991	12
17	VACUUM HOSE ASSY	46341-021	----	1		-HEX HD CAP SCREW	B1618	15991	4
18	VENTURI ASSY	48227-403	----	1					
19	HEX HD CAP SCREW	B1211	15991	2		NOT SHOWN:			
20	SUPPORT ASSY	41888-328	24150	1		OIL LEVEL DECAL	38816-123	----	1
21	HEX HD CAP SCREW	B1210	15991	2		DISCHARGE STICKER	6588BJ	----	1
22 *	GASKET	38685-809	18000	1		WARNING DECAL	2613FE	----	1
23	PIPE PLUG	P04	15079	1		PRIME AIRE PLUS DECAL	38812-099	----	1
24	SUCT SUPPORT ASSY	41888-327	24150	1		SUCTION STICKER	6588AG	----	1
25	HEX HD CAP SCREW	B0805	15991	4		INSTRUCTION TAG	38817-085	----	1
26	SPOOL FLANGE	38642-624	10000	1		LUBRICATION DECAL	11421A	----	1
27 *	GASKET	25113-034	----	1		G-R DECAL	GR-06	----	1
						STRAINER	46641-025	24150	1

\* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

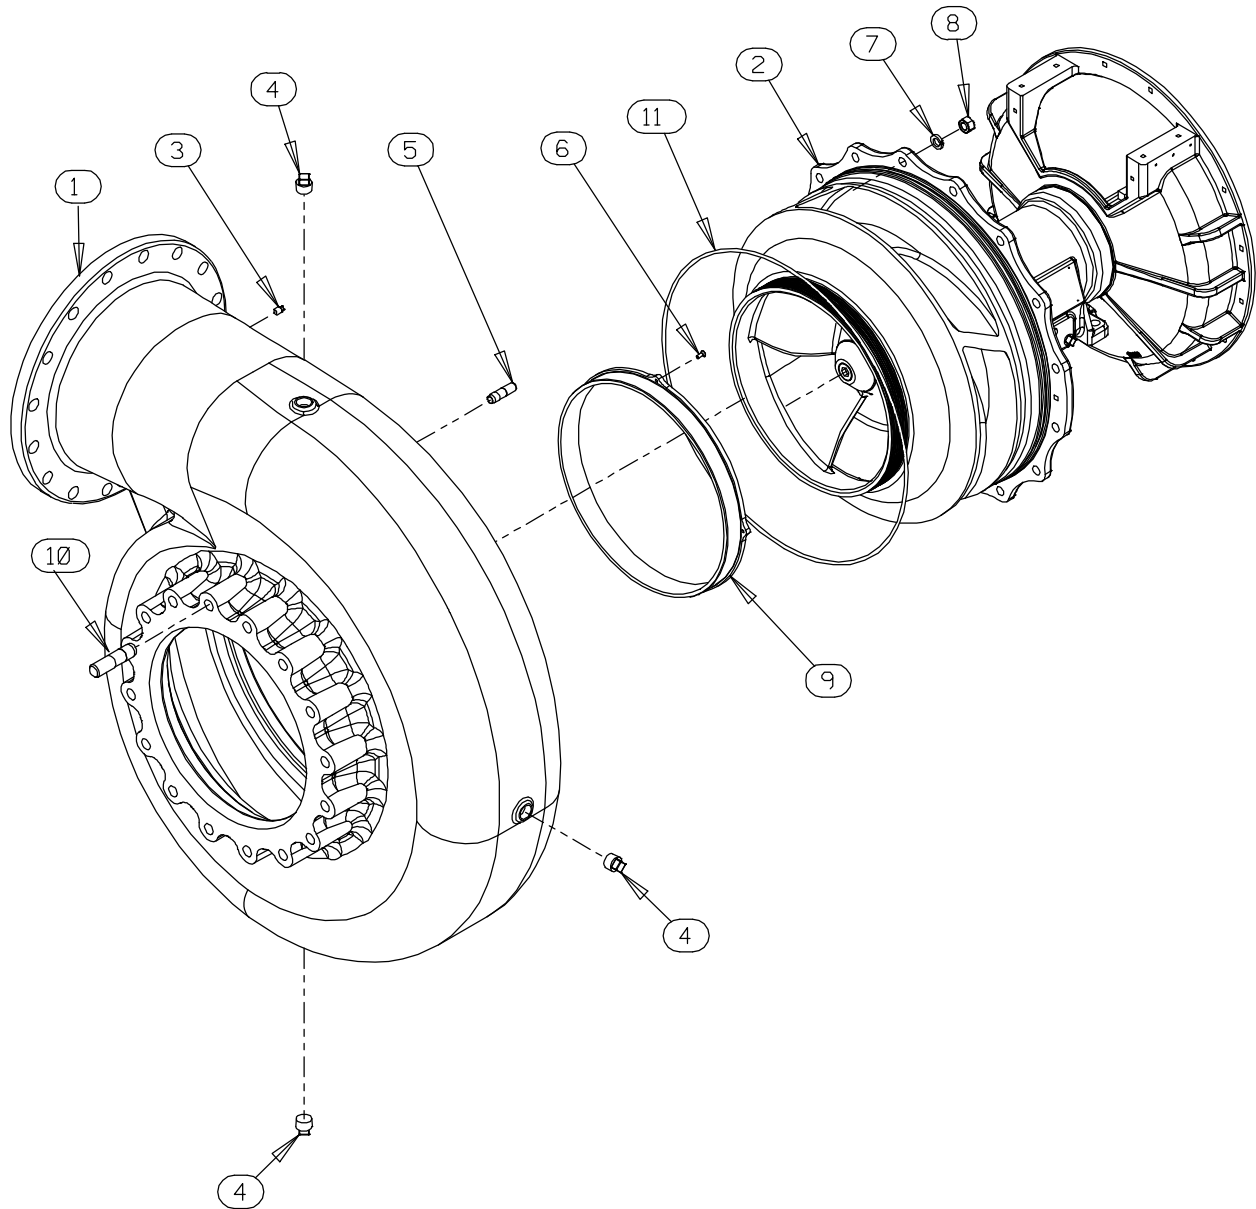


Figure 5. 46133-434 Pump End Assembly



**PARTS LIST**  
**46133-434 Pump End Assembly**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
☞ 1	PUMP CASING	SEE NOTE BELOW	---	1
2	REPAIR ROTATING ASSY	44163-580	---	1
☞ 3	PIPE PLUG	P04	15079	1
☞ 4	PIPE PLUG	P16	15079	3
☞ 5	STUD	C1211	15991	16
☞ 6	FLAT HEAD CAP SCREW	F0403	17090	4
7	LOCK WASHER	J12	15991	16
8	HEX NUT	D12	15991	16
☞ 9 *	WEAR RING	38691-370	11010	1
☞ 10	STUD	C1818	15991	16
11 *	O-RING	25152-478	---	1
NOT SHOWN:				
	SUCTION STICKER	6588AG	---	1
	LUBRICATION STICKER	11421A	---	1
	DISCHARGE STICKER	6588BJ	---	1
☞	INCLUDED W/REPAIR PUMP CASING ASSY	46474-359	---	1

\* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

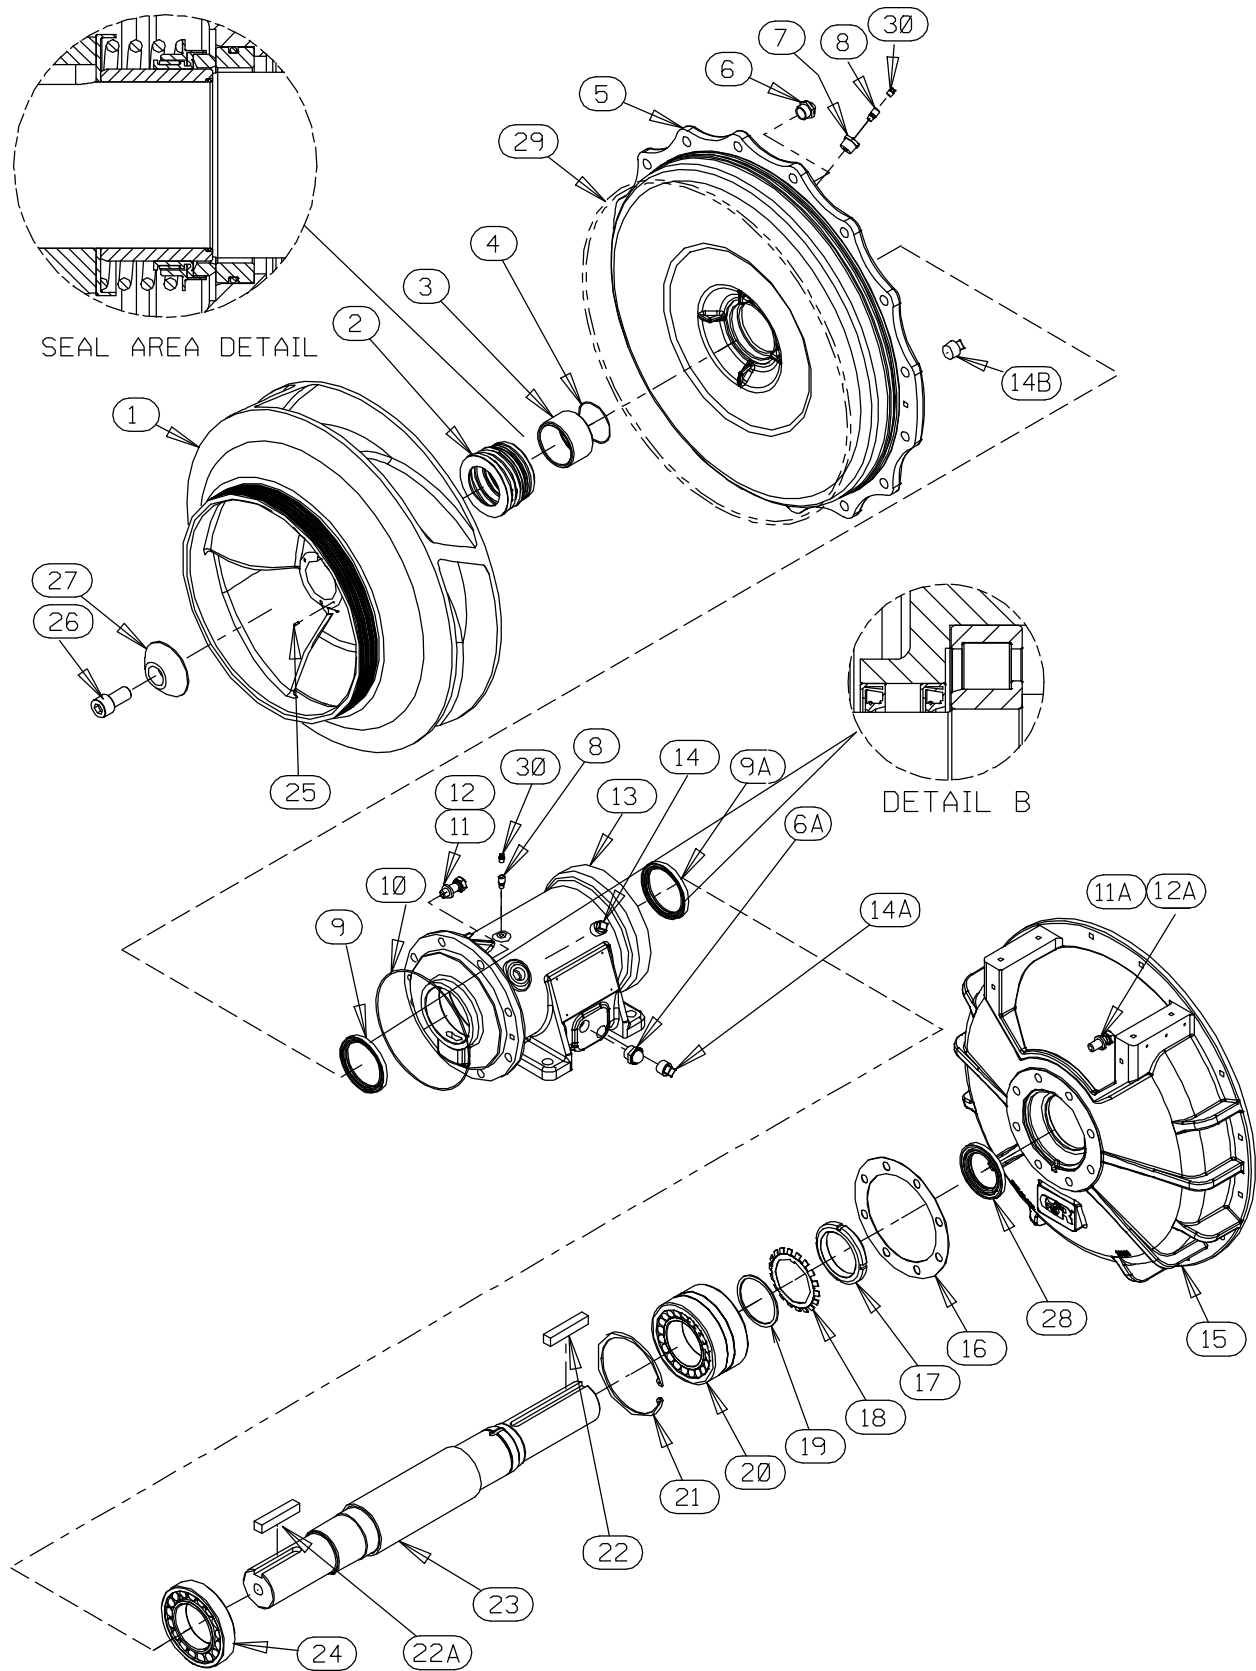


Figure 6. 44163-580 Repair Rotating Assembly

**PARTS LIST**  
**44163-580 Repair Rotating Assembly**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	IMPELLER	38614-802	11010	1
2	* MECH SEAL	25285-825	----	1
3	* SHAFT SLEEVE	31163-025	17000	1
4	* SHAFT SLEEVE O-RING	25154-042	----	1
5	SEAL PLATE	38272-721	11010	1
6	SEAL CAVITY SIGHT GAUGE	S1471	----	2
6A	BEARING CAVITY SIGHT GAUGE	S1471	----	2
7	REDUCER PIPE BUSHING	AP1202	15079	1
8	AIR VENT	S1530	----	2
9	* OIL SEAL	25227-936	----	1
9A	* OIL SEAL	25227-936	----	1
10	* O-RING	25152-177	----	1
11	LOCK WASHER	J10	15991	8
11A	LOCK WASHER	J10	15991	8
12	HEX HEAD CAP SCREW	B1007	15991	8
12A	HEX HEAD CAP SCREW	B1007	15991	8
13	PEDESTAL	38257-315	10000	1
14	PIPE PLUG	P12	15079	2
14A	BEARING CAVITY DRAIN PLUG	P12	15079	2
14B	SEAL CAVITY DRAIN PLUG	P12	15079	1
15	DRIVE FLANGE	38545-022	10000	1
16	* GASKET	38683-668	19060	1
17	BEARING LOCK NUT	23962-022	----	1
18	BEARING LOCKWASHER	23962-522	----	1
19	BEARING SPACER	31131-105	15120	1
20	* BEARING	23761-001	----	1
21	RETAINING RING	24121-088	----	1
22	* DRIVE KEY	N1216	15990	1
22A	* IMPELLER KEY	N1216	15990	1
23	* IMPELLER SHAFT	38512-536	16000	1
24	* BEARING	23529-010	----	1
25	ROLL PIN	S2197	----	1
26	SOCKET HEAD CAP SCREW	DM1608S	15991	1
27	IMPELLER WASHER	31167-043	15030	1
28	* OIL SEAL	25227-934	----	1
29	* O-RING	25152-478	----	1
30	SHIPPING PLUG	11495C	15079	2
NOT SHOWN:				
	INSTRUCTION TAG	6588U	----	1

\* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

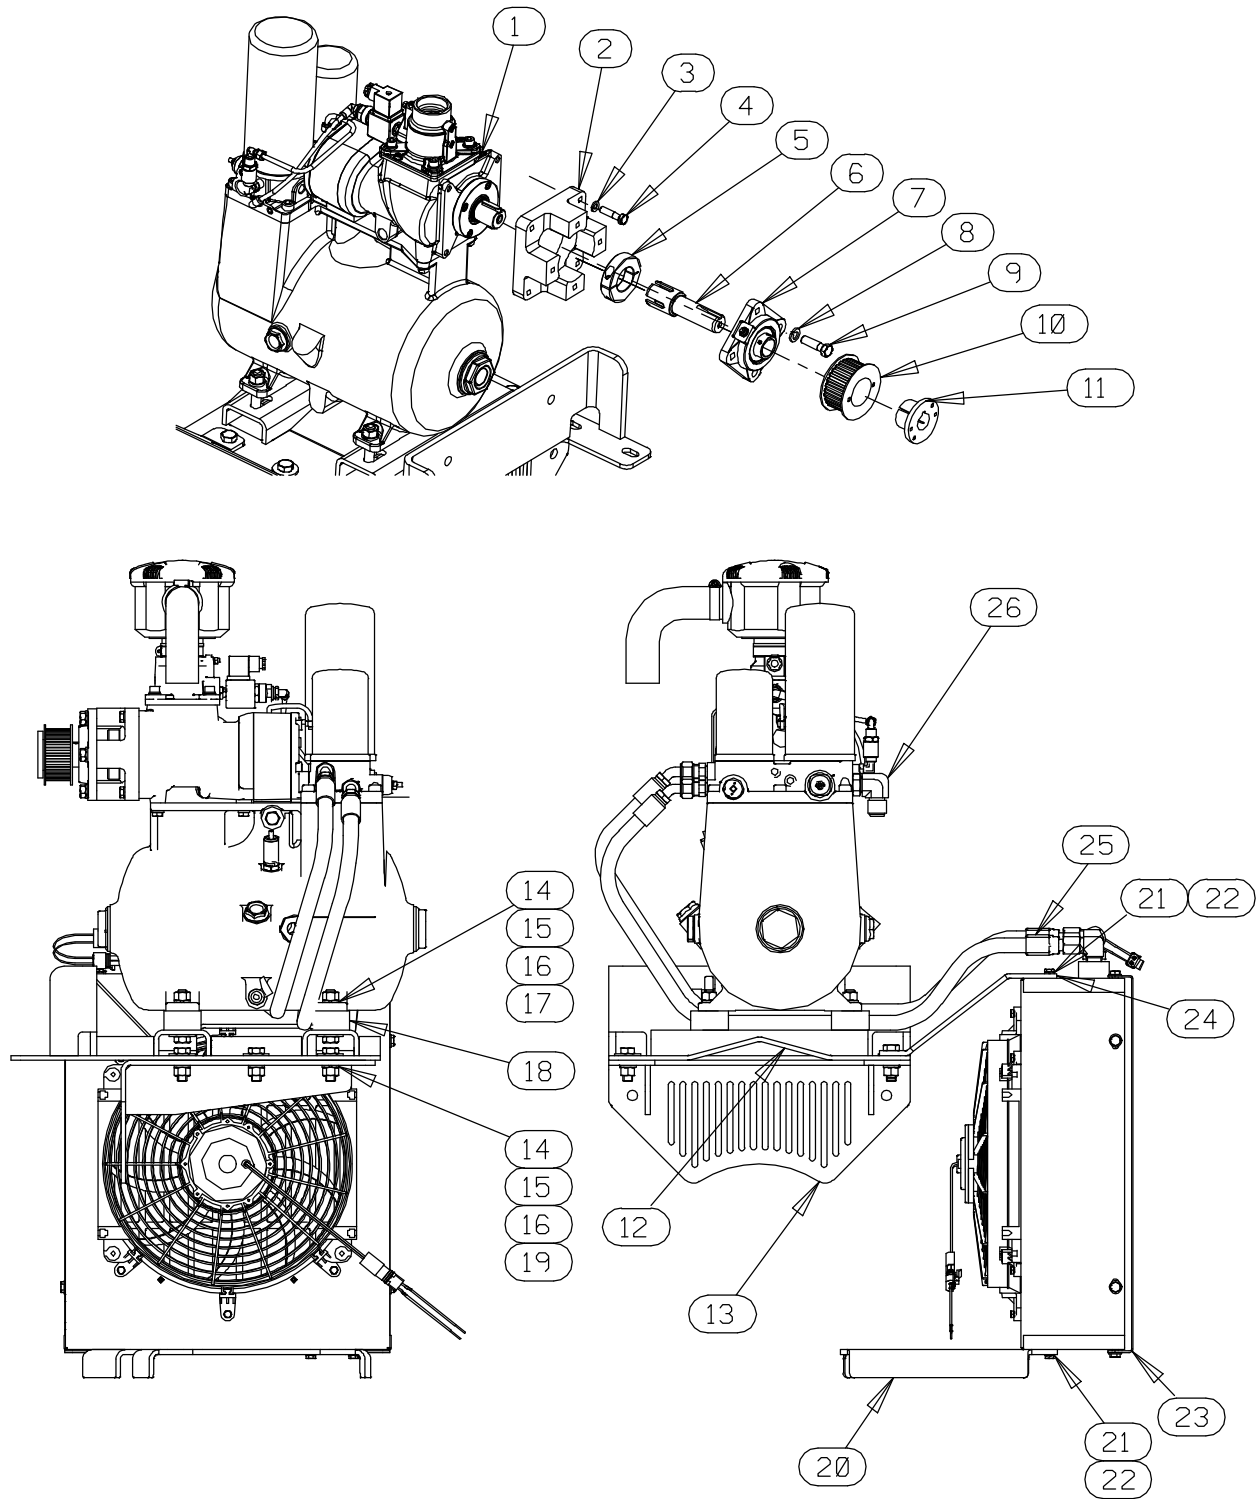


Figure 7. 46181-914 Air Compressor Assembly

**PARTS LIST**  
**46181-914 Air Compressor Assembly**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	VANAIR 60 CFM AIR COMPRESSOR	26813-114	---	1
2	MOUNTING BRACKET	38138-090	13000	1
3	LOCK WASHER	21171-510	---	4
4	HEX HEAD CAP SCREW	22645-136	---	4
5	SHAFT COLLAR	24118-035	---	1
6	ADAPTER SHAFT	38513-420	16040	1
7	FLANGE BEARING	23918-101	---	1
8	LOCK WASHER	J07	15991	4
9	HEX HEAD CAP SCREW	B0706	15991	4
10	SPROCKET	24271-125	---	1
11	BUSHING	24131-621	---	1
12	BRACKET ASSEMBLY	41888-312	24150	1
13	BRACKET ASSEMBLY	41888-313	24150	1
14	LOCK WASHER	J08	15991	10
15	FLAT WASHER	K08	15991	8
16	HEX NUT	D08	15991	10
17	HEX HEAD CAP SCREW	B0810	15991	4
18	SPACER	31131-104	15000	4
19	HEX HEAD CAP SCREW	B0806	15991	6
20	MOUNTING BRACKET	34455-025	15080	1
21	LOCK WASHER	J04	15991	8
22	HEX HEAD CAP SCREW	B0402-1/2	15991	8
23	GUARD BRACKET	34316-039	17000	1
24	MOUNTING BRACKET	34535-029	15080	1
25	HOSE ASSEMBLY	46341-034	---	2
26	90° ELBOW	26525-151	---	1

\* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

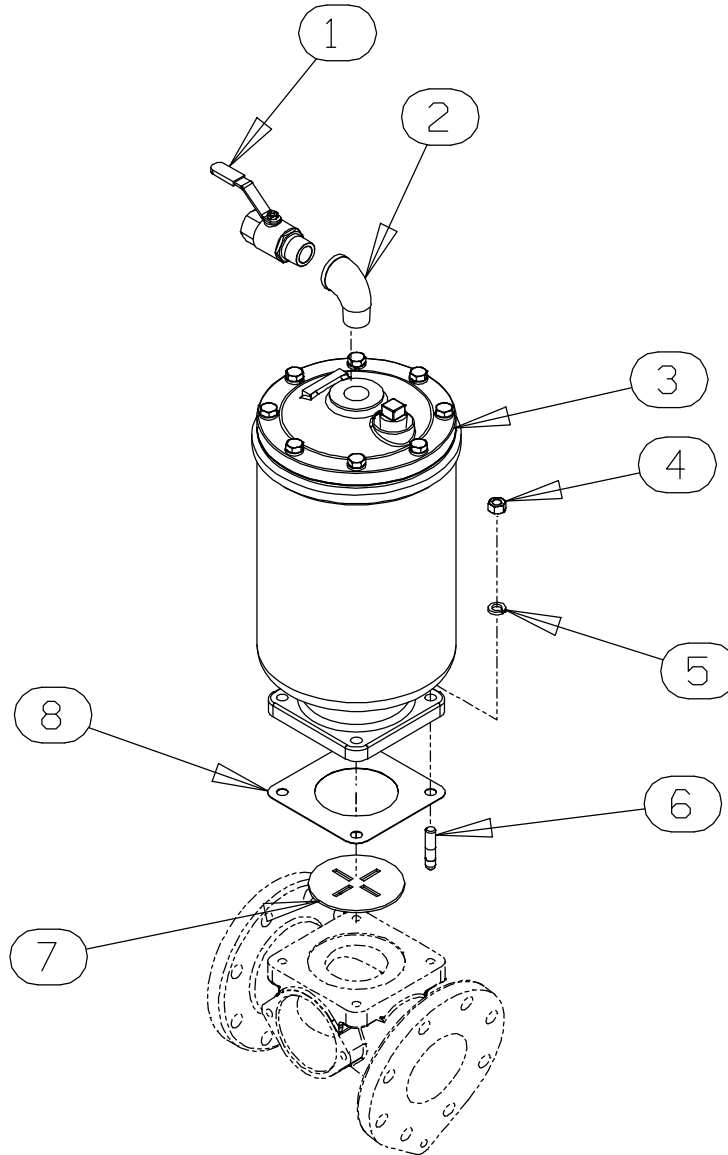


Figure 8. 48275-006 Priming Chamber Kit

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	BALL VALVE	26631-054	---	1
2	STREET ELBOW	RS16	11999	1
3	PRIMING CHAMBER ASSEMBLY	46112-709	---	1
4	HEX NUT	D08	15991	4
5	LOCK WASHER	J08	15991	4
6	STUD	C0809	15991	4
7	BAFFLE	31113-011	17000	1
8	* GASKET	38687-053	19060	1

\* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

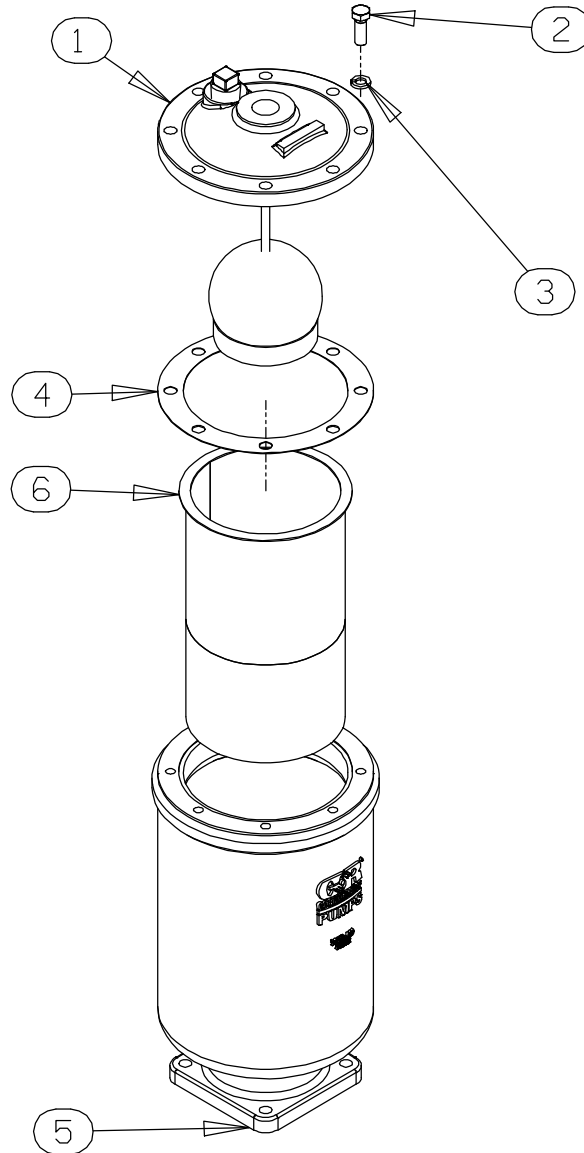


Figure 9. 46112-709 Priming Chamber Assembly

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PRIMING VALVE -ORIFICE BUTTON	26664-007 26688-021	--- ---	1 1
2	HEX HD CAPSCREW	B0806	15991	8
3	LOCKWASHER	J08	15991	8
4	* PRIMING VALVE GASKET	38683-657	19060	1
5	PRIMING CHAMBER	38343-020	10000	1
6	STRAINER ASSY	46641-222	17000	1

\* INDICATES PARTS RECOMMENDED FOR STOCK

## PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

Review all SAFETY information in Section A.

Follow the instructions on all tags, label and decals attached to the pump.

This pump requires little service due to its rugged, minimum-maintenance design. However, if it becomes necessary to inspect or replace the wearing parts, follow these instructions which are keyed to the illustrations (see Figures 1 through 9) and the corresponding parts lists. Instructions for the air compressor are covered separately in specific literature available from the manufacturer.

Some pump service functions may be performed without separating the pump end assembly from the power source. However, the priming chamber (33, Figure 4) and discharge check valve assembly (35, Figure 4) must be removed to service most pump components. The following instructions assume complete disassembly of the pump is required.

Before attempting to service the pump, lock out or disconnect the power source and take precautions to ensure that it will remain inoperative. Close all valves in the suction and discharge lines and drain the pump casing by removing the lowermost pipe plug (4, Figure 5). Clean and reinstall the pipe plug.



This manual will alert personnel to known procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel. However, this manual cannot possibly anticipate and provide detailed instructions and precautions for every situation that might occur during maintenance of the unit. Therefore, it is the responsibility of the owner/maintenance personnel to ensure that only safe, established maintenance procedures are used, and that any procedures not addressed in this manual are performed only after estab-

lishing that neither personal safety nor pump integrity are compromised by such practices.



This pump is equipped with an automatic starting system, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect the positive battery cable before performing any maintenance. Failure to do so may result in serious personal injury.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Lock out or disconnect the power source to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure it is cool before opening any covers, plates, gauges, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.



Death or serious personal injury and damage to the pump or components can occur if proper lifting procedures are not observed. Make certain that hoists, chains, slings or cables are in good working condition and of sufficient capacity and that they are positioned so that loads will be balanced and the pump or components will not be



**damaged when lifting. Suction and discharge hoses and piping must be removed from the pump before lifting. Lift the pump or component only as high as necessary and keep personnel away from suspended objects.**



Use **only** replacement parts provided or approved by Gorman-Rupp. Use of non-authorized parts may result in damage to the equipment and/or injury to personnel and **will** invalidate the warranty.

### Priming Chamber Removal and Disassembly

#### (Figure 8)

Disconnect both the suction piping and the air discharge tubing from the priming chamber assembly (1). Support the priming chamber assembly using a sling and a suitable lifting device. Remove the hardware (4 and 5) and separate the priming chamber assembly, gasket (8) and baffle (7) from the suction spool (26).

#### (Figure 9)

Remove the hardware (2 and 3) securing the priming valve (1) to the priming chamber (5). Carefully lift the valve components from the priming chamber. Remove the gasket (4) and clean the mating surfaces.

If the priming valve float is stuck or the strainer (6) is clogged, it can usually be cleaned without further disassembly.

The only serviceable part of the priming valve is the orifice button (not shown). If liquid continues to bypass through the priming chamber after adjusting the orifice button (see **Priming Chamber Reassembly and Installation** for adjustment), the button may require replacement. To replace the orifice button, remove one of the “e-clips” from the pivot pin closest to the orifice button and remove the pivot pin. This will allow the linkage to be raised high enough to access the orifice button.

Remove the hex nut and lock washer securing the orifice button to the linkage bar and unscrew the orifice button from the linkage bar.

### Discharge Check Valve Removal and Disassembly

#### (Figure 4)

Support the discharge check valve assembly (35) using a sling and a suitable lifting device. Remove the mounting hardware (not shown) and separate the discharge check valve assembly and gasket from the pump assembly (1).

The flapper and cover O-ring are the only serviceable parts of the check valve. If the flapper requires replacement, remove the hardware securing the cover. Separate the cover and O-ring and remove the flapper.

### Pump Casing and Wear Ring Removal

#### (Figure 4)

The wear ring (9, Figure 5) may be serviced by removing the pump casing (1).

It is not necessary to remove the suction spool (26) from the pump casing unless replacement of the spool or gasket (22) is required. To remove the suction spool, disengage the hardware (31 and 32) securing it to the pump casing. Disengage the hardware (13 and 25) securing the suction spool to the suction support (24). Use a sling and suitable lifting device to remove the suction spool. Remove the gasket and clean the mating surfaces.

#### (Figure 5)

Disengage the hardware (7 and 8) and use a suitable lifting device to separate the pump casing from the rotating assembly (2).

Inspect the wear ring for excessive wear or damage. The wear ring is secured in the pump casing by a press fit. If replacement is required, remove the screws (6) and install four 3/8–16 UNC–2B capscrews (not supplied) at least 2 inches long in the holes in the wear ring. Tighten the capscrews in an alternating sequence to “jack” the wear ring from the pump casing.

## Removing Air Compressor

### (Figure 4)

Further disassembly of the pump requires removing the air compressor assembly (11) from the rotating assembly (2, Figure 5).

Disengage the hardware (7) and remove the belt guard assembly (9).

### (Figure 7)

Remove the hardware (14, 15, 16 and 17) securing the air compressor assembly to the bracket (12). Use a pry bar to raise the air compressor high enough to remove the spacers (18). Remove the belt (20, Figure 4) from the air compressor sprocket (10) and drive sprocket (5, Figure 4).

Disconnect all hoses and fittings from the air compressor and use a suitable hoist and sling to remove the air compressor assembly.


## Impeller Removal

### (Figure 6)

The rotating assembly (2, Figure 2) must be separated from the gear reducer (3, Figure 2) in order to remove the impeller (1). Separate the halves of the coupling (13, Figure 1) and remove the coupling half from the impeller shaft (23, Figure 3).

Before attempting to remove the impeller (1) position a **clean** container (2 gallons [8 liters] minimum capacity) under the seal cavity drain plug (14B). Remove the plug and drain the oil from the seal cavity into the container. For shorter drain time, remove the air vent (8). Clean and reinstall the drain plug and air vent. Inspect the oil for water, dirt or a cloudy condition which could indicate seal failure.

Use a long piece of heavy bar stock and the lathe dog on the drive end of the shaft as shown in Figure 10 to block shaft rotation. **Use caution** not to damage the shaft or keyway.

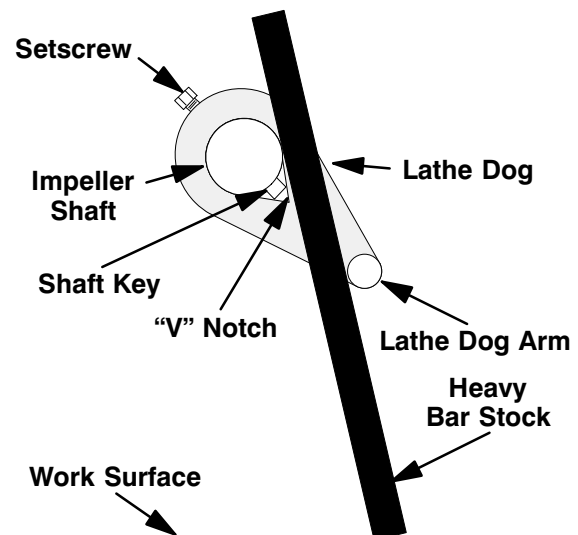

**Figure 10. Blocking Shaft Rotation**

Remove the impeller capscrew and washer (26 and 27). Remove the lathe dog from the shaft.

Install three 3/4-16 UNC-2B capscrews (not supplied) in the tapped holes in the impeller. Attach a suitable puller to the capscrews and use the puller to remove the impeller and key (22A) from the shaft. Remove the puller and the screws from the impeller.

### NOTE

*An alternate method of removing the impeller is to insert a pair of wedges 180° apart between the impeller and seal plate (9). Tap the wedges evenly in an alternating pattern to "walk" the impeller off the shaft.*

Inspect the impeller and replace if cracked or badly worn.

If no further disassembly is required, refer to **Impeller Installation**.

## Seal Removal

### (Figures 6 and 12)

Carefully remove the spring retainer and seal spring. Slide the rotating portion of the seal assembly and shaft sleeve (3) off the shaft as a single unit. Apply oil to the shaft sleeve and work it up under the rubber bellows. Slide the rotating portion of the seal assembly off the shaft sleeve.

Slide a pair of stiff wires with hooked ends along the shaft and hook the stationary seat from the back side. Pull the stationary seat and O-ring from the seal plate (6).

An alternate method of removing the stationary seal components is to remove the hardware (11 and 12) and separate the seal plate from the pedestal (13). Position the seal plate on a flat surface with the impeller side down. Use a wooden dowel or other suitable tool to press on the back side of the stationary seat until the seat and O-ring can be removed.

Remove the seal plate O-ring (29).

Remove the shaft sleeve O-ring (4).

If no further disassembly is required, refer to **Seal Reassembly And Installation**.

### Shaft and Bearing Removal and Disassembly

(Figure 6)

When the pump is properly operated and maintained, the shaft and bearings should not require disassembly. Disassemble the shaft and bearings **only** when there is evidence of wear or damage.



Shaft and bearing disassembly in the field is not recommended. These operations should be performed only in a properly equipped shop by qualified personnel.

Before attempting to remove the shaft (23) and bearings (20 and 24), position a container (1 gallon [4 liters] minimum capacity) under one of the bearing cavity drain plugs (14A). Remove the plug and drain the oil from the bearing cavity into the container. Clean and reinstall the drain plug.

Remove the shaft key (22). Disengage the hardware (11A and 12A) and remove the drive flange (15) and gasket (16). Press the oil seal (28) from the bearing cap.

Place a block of wood against the impeller end of the shaft and tap the shaft until the outboard bearing (20) is free from the pedestal. Remove the outer

race and bearing race spacer from the outboard bearing.

Reach into the pedestal with a pair of snap ring pliers and remove the retaining ring (21) from the groove in the pedestal. Continue to slide the shaft and assembled bearings out of the pedestal until free. Remove the outer bearing race of the inboard bearing (24) from the pedestal.

Pry or press the oil seals (9 and 9A) from the bearing housing. Remove the pedestal O-ring (10).

After removing the shaft and bearings, clean and inspect the bearings **in place** as follows.



To prevent damage during removal from the shaft, it is recommended that bearings be cleaned and inspected **in place**. It is **strongly** recommended that the bearings be replaced **any** time the shaft and bearings are removed.

Clean the pedestal, shaft and all component parts (except the bearings) with a soft cloth soaked in cleaning solvent. Inspect the parts for wear or damage and replace as necessary.



**Most cleaning solvents are toxic and flammable. Use them only in a well ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.**

Clean the bearings thoroughly in **fresh** cleaning solvent. Dry the bearings with filtered compressed air and coat with light oil.



Bearings must be kept free of all dirt and foreign material. Failure to do so will greatly shorten bearing life. **Do not** spin dry

bearings. This may scratch the balls or races and cause premature bearing failure.

Rotate the bearings by hand to check for roughness or binding and inspect the bearing balls. If rotation is rough or the bearing balls are discolored, replace the bearings.

The bearing tolerances provide a tight press fit onto the shaft and a snug slip fit into the pedestal. Replace the bearings, shaft or pedestal if the proper bearing fit is not achieved.

If bearing replacement is required, straighten the tab on the bearing lock washer (18) and use a suitable spanner wrench to remove the bearing lock nut (17) and bearing spacer (19). Use a bearing puller or a press to remove the bearings from the shaft.

Remove the retaining ring.

Remove the outer race of the inboard bearing (24) from the pedestal.

### Shaft and Bearing Reassembly and Installation

#### (Figure 6)

Clean and inspect the bearings as indicated in **Shaft and Bearing Removal and Disassembly**.



To prevent damage during removal from the shaft, it is recommended that bearings be cleaned and inspected **in place**. It is **strongly** recommended that the bearings be replaced **any** time the shaft and bearings are removed.

Inspect the shaft (23) for distortion, nicks or scratches. Dress small nicks and burrs with a fine file or emery cloth. Replace the shaft if defective.

The bearings may be heated to ease installation. An induction heater, hot oil bath, electric oven, or hot plate may be used to heat the bearing. The bearings should **never** be heated with a direct flame or directly on a hot plate.

### NOTE

*If a hot oil bath is used to heat the bearings, both the oil and the container must be **absolutely** clean. If the oil has been previously used, it must be **thoroughly** filtered.*

Position the retaining ring (21) and inboard outer bearing race over the shaft prior to installing the outboard bearing (20).

Separate the outer bearing races from their respective bearings.

Heat the bearings to a uniform temperature **no higher than** 250°F (120°C) and slide them one at a time onto the shaft until fully seated against the shaft shoulders. This should be done quickly, in one continuous motion, to prevent the bearings from cooling and sticking on the shaft.



**Use caution when handling hot bearings to prevent burns.**

After the bearings have been installed and allowed to cool, check to ensure that they have not moved out of position in shrinking. If movement has occurred, use a suitably sized sleeve and a press to reposition the bearings.

If heating the bearings is not practical, use a suitably sized sleeve and a press to install the bearings on the shaft.



When installing the bearings onto the shaft, **never** press or hit against the outer race, rollers, or cage. Press **only** on the inner races.

Secure the assembled shaft and bearings by clamping on the surface between the bearings. Use caution not to scratch or mar the part number on the shaft in this area. Install the bearing spacer (19), lock washer (18) and bearing lock nut (17). Torque the lock nut to 150 ft. lbs. (20,7 m. kg.). Locate the tab on the lock washer that aligns with a slot in the lock nut and bend the tab over into the slot.

Install the oil seal (9A) in the pedestal with the lip positioned as shown in Figure 6. Make sure the oil seal is just flush with the machined face on the inside of the pedestal.

Lubricate the outer bearing race of the inboard bearing (24) and slide it into the pedestal bore until fully seated.

Slide the shaft into the pedestal bore until the inboard bearing is past the bore for the outboard bearing. Use a pair of snap ring pliers to install the retaining ring (21) in the groove in the pedestal I.D.

Slide the inboard outer race for the bearing (20) into the pedestal bore until it seats against the retaining ring. Continue to slide the shaft and assembled bearings into the pedestal until the outboard bearing seats against the inboard race. Use caution not to cut the lip of the oil seal (9A).



When installing the shaft and bearings into the bearing bore, push against the outer race. **Never** hit the rollers or cage.


Apply a light coating of oil to the lip of the oil seal (28) and press it into the drive flange (15) with the lip positioned as shown in Figure 6. The face of the oil seal should be just flush with the outer face of the bearing cap. Inspect and remove any sealant shavings from the O.D. of the lip seal.

Install the bearing race spacer and outer bearing race for the bearing (20) in the pedestal bore.

Install the drive flange gasket (16). Apply "Loctite Threadlocker No. 242" or equivalent compound to the capscrews (12A) and secure the bearing cap to the pedestal with the hardware (11A and 12A). Torque the capscrews (15A) in a criss-cross pattern to 80 ft. lbs. (11 m. kg.). Torque the capscrews again in a criss-cross pattern to 110 ft. lbs. (15 m. kg.), going around the bolt circle 1-1/2 times.

Install the shaft key (22) in the shaft keyway. Slide the bushing and sprocket (5 and 6, Figure 4) onto the shaft to the dimension shown in Figure 11. Install the bushing setscrews and tighten the setscrews in an alternating sequence to secure the

sprocket to the shaft. Torque the setscrews to 66.7 ft. lbs. (800 in. lbs. or 9,2 m. kg.).

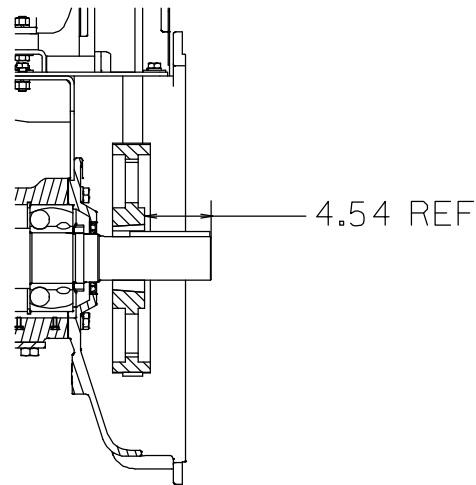

**Figure 11. Drive Sprocket Positioning**

Lubricate the pedestal as indicated in **LUBRICATION** at the end of this section.

#### **Securing Rotating Assembly to Gear Reducer**

##### **(Figure 4)**

Position the drive belt (8) over the sprocket (5) and slide it up through the slot in the drive flange (15, Figure 6).

Using a suitable lifting device, position the assembled pedestal on the pedestal support (20) and secure the pedestal with the attaching hardware (19 and 21). Be sure to install any leveling shims used under the pedestal feet.

##### **(Figure 7)**

Position the air compressor drive belt between the belt tensioners (10, Figure 4) and slide the belt over the air compressor sprocket (10). Use a pry bar to raise the air compressor high enough to install the spacers (18). Secure the air compressor to the bracket (12) with the previously removed hardware (14, 15, 16 and 17).

Reconnect all hoses and fittings to the air compressor.

Reinstall the half of the coupling (13, Figure 1) onto the impeller shaft. Realign and secure the coupling halves to the pump and gearbox shafts as indicated in **Installation, Section B**.


## Seal Reassembly and Installation

(Figures 6 and 12)

Clean the seal cavity and shaft with a cloth soaked in fresh cleaning solvent. Inspect the stationary seat bore in the seal plate for dirt, nicks and burrs, and remove any that exist. The stationary seat bore **must** be completely clean before installing the seal.



**Most cleaning solvents are toxic and flammable. Use them only in a well ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.**

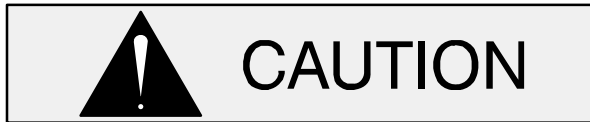

A new seal assembly should be installed **any time** the old seal is removed from the pump. Wear patterns on the finished faces cannot be realigned during reassembly.

Reusing an old seal could result in premature failure.

Handle the seal parts with extreme care to prevent damage. Be careful not to contaminate precision finished faces; even fingerprints on the faces can shorten seal life. If necessary, clean the faces with a non-oil based solvent and a clean, lint-free tissue. Wipe **lightly** in a concentric pattern to avoid scratching the faces.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause leakage. Clean and polish the shaft sleeve, or replace it if there are nicks or cuts on either end. If any components are worn, replace the complete seal; **never mix old and new seal parts.**

Remove the seal from the container and inspect the precision finished faces to ensure that they are free of any foreign matter.

To ease installation of the seal, lubricate the stationary seat O-ring, the I.D. of the bellows and the O.D. of the shaft sleeve (5) with "P-80<sup>®</sup> Emulsion" or water. **Do not** use oil or any substitute lubricant other than water. Apply a drop of light lubricating oil on the finished faces. Assemble the seal as follows, (see Figure 12).

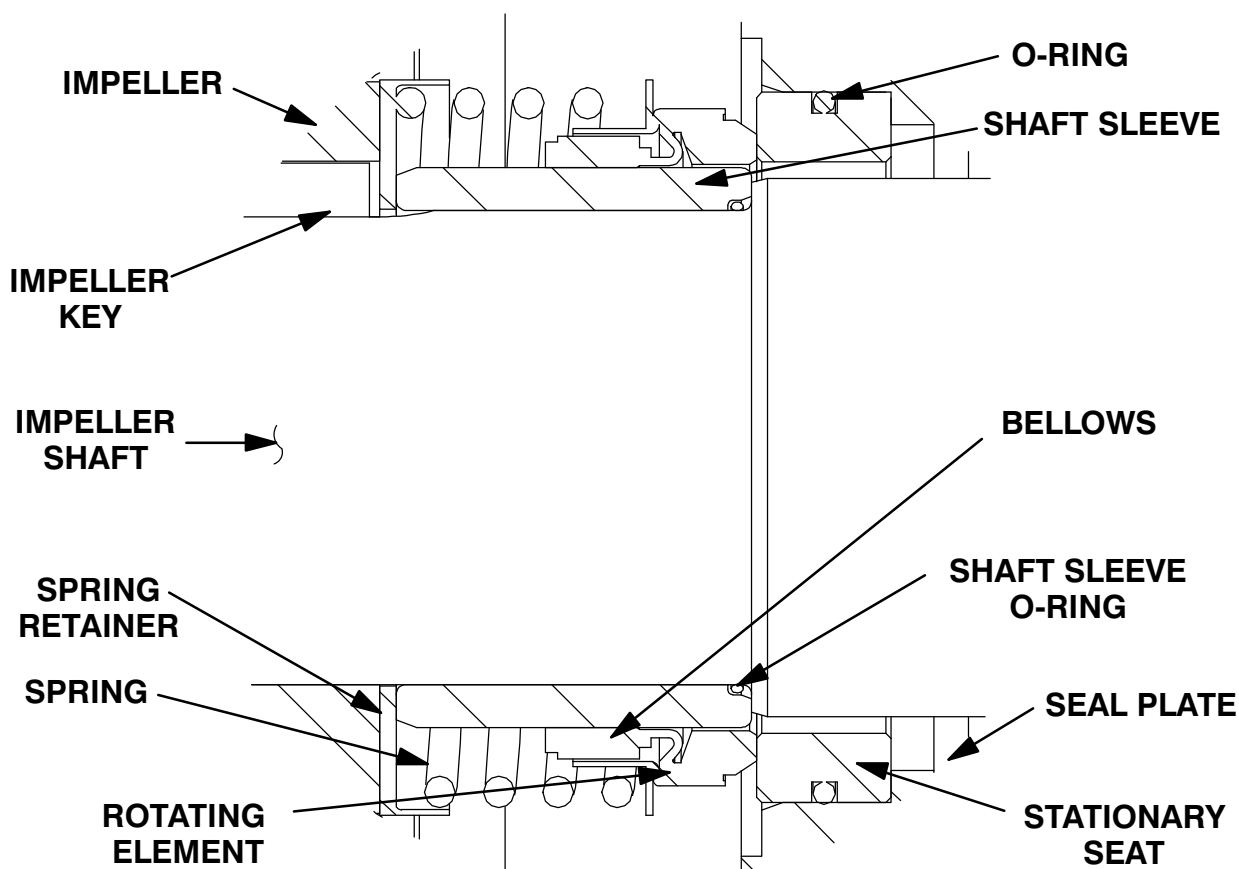


Figure 12. Seal Assembly



This seal is not designed for operation at temperatures above 160°F (71°C). Do not use at higher operating temperatures.

Inspect the seal plate (5), shaft sleeve (3) and the impeller shaft for burrs or sharp corners, and remove any that exist.

Apply a light coating of oil to the lip of the oil seal (9) and press into the pedestal bore with the lip positioned as shown in Figure 3. Make sure the oil seal is just flush with the outer face of the pedestal. Use caution not to cut the lip of the oil seal on the shaft keyway. Inspect and remove any sealant shavings from the O.D. of the lip seal.

Lubricate the O-ring (10) with light grease and install it in the groove in the pedestal.

Position the seal plate over the pedestal shoulder and press it onto the pedestal until fully seated. Se-

cure the seal plate to the pedestal with the previously removed hardware (11 and 12).

Press the stationary seat and O-ring into the seal plate bore until fully seated. A push tube cut from a length of plastic pipe would aid this installation. The I.D. of the tube should be approximately the same as the I.D. of the seal spring.

To prevent damaging the shaft sleeve O-ring (4) on the shaft threads, cover the threads with electrical or duct tape. Slide the O-ring over the shaft until it seats against the shaft shoulder. Remove the tape covering the threads. Check to ensure that the shaft threads are free of any tape residue and clean as required before proceeding with seal installation.

Slide the rotating portion of the seal assembly onto the shaft sleeve until the rotating element is just flush with the undercut end of the sleeve. Slide the shaft and rotating portion of the seal onto the shaft until the sealing faces contact.

Install the seal spring and spring retainer.

After the impeller has been installed, lubricate the seal as indicated in **LUBRICATION**.

## Impeller Installation

### (Figure 6)

Inspect the impeller and replace it if cracked or badly worn. If removed, install the roll pin (25) in the hole in the impeller hub.

Install the impeller key (22A) in the shaft keyway. Align the keyway in the impeller with the impeller key and press the impeller onto the shaft until fully seated.

Use a piece of soft bar stock or a wood block to prevent impeller rotation. Align the hole in the impeller washer (27) with the roll pin in the impeller and install the washer. Apply “Loctite Threadlocker No. 243” or equivalent compound to the threads of the impeller screw (26). Install the impeller screw and torque the screw to 250 ft. lbs. (34,5 m. kg.). Remove the wood block or metal bar used to prevent impeller rotation.

## Pump Casing and Wear Ring Installation

### (Figure 5)

If the wear ring (9) was removed, align the holes in the wear ring for the screws (6) with those in the pump casing and press the replacement ring into the pump casing until fully seated. Apply “Loctite Threadlocker No. 243” or equivalent compound to the threads of the screws (6) and install them in the holes in the wear ring until snug.



The wear ring **must** seat squarely in the pump casing or binding and/or excessive wear will result.

Lubricate the O-ring (11) with light grease and install it in the groove in the O.D. of the seal plate.

Carefully position the pump casing over the impeller. Install the hardware (7 and 8) on the studs (5) and use the hardware to draw the pump casing over the seal plate shoulder until tight.

### (Figure 4)

If removed at disassembly, install the gasket (22) over the studs in the pump casing and secure the

suction spool (26) to the pump casing with the previously removed hardware (31 and 32).

Secure the suction spool to the support assembly (24) with the previously removed hardware (13 and 25).

## Discharge Check Valve Reassembly and Installation

### (Figure 4)

If the discharge check valve (35) was disassembled to replace the flapper or cover O-ring, position the flapper in the valve body and check to ensure free movement.

Install the valve cover O-ring and secure the cover to the body with the previously removed hardware.

Apply a small amount of light grease to the discharge flange gasket to hold it in place and position it against the pump casing flange. Support the discharge check valve assembly using a sling and a suitable lifting device. Using the previously removed hardware, secure the discharge check valve assembly and flange gasket to the pump assembly (1). Secure the discharge check valve to its support bracket using the previously removed hardware.

## Priming Chamber Assembly and Installation

### (Figure 9)

Clean and inspect the components of the priming valve (1). Inspect the linkage and ensure the orifice button (not shown) squarely engages the valve seat. Replace the orifice button if required (see **Priming Chamber Removal and Disassembly** for orifice button removal).

If the orifice button was removed, screw the new orifice button into the linkage bar until fully seated. Align the hole in the linkage bar with the holes in the bracket and reinstall the pivot pin. Secure the pivot pin with the previously removed “e-clip”.

Adjust the orifice button seating as necessary by screwing the orifice button into or out of the linkage bar. Proper adjustment is achieved when the orifice button fully seats against the orifice before the linkage bar on the float bottoms against the threads on the orifice button. When adjustment is complete, install and tighten the lock washer and hex nut securing the orifice button.



Install the strainer (6) and priming valve gasket (4).

Lower the float into the priming chamber (5) and secure the priming valve with the previously removed hardware (2 and 3).

**(Figure 8)**

Install the baffle and gasket (7 and 8) and use a sling and suitable lifting device to position the priming chamber assembly on the pump suction spool (26, Figure 4). Secure the priming chamber assembly with the hardware (4 and 5).

Reconnect both the suction piping and the air discharge tubing to the priming chamber assembly.

## LUBRICATION

### Seal Assembly

**(Figure 6)**

Before starting the pump, remove the air vent and reducer bushing (7 and 8) and fill the seal cavity with approximately 160 ounces (4,7 liters) of SAE No. 30 non-detergent oil to the middle of the sight gauges (6) and maintain it at the middle of the gauges. Clean and reinstall the air vent and bushing. Maintain the oil at this level.

### Bearings

**(Figure 6)**

The pedestal was fully lubricated when shipped from the factory. Check the oil level regularly

through the sight gauges (6A) and maintain it at the middle of the gauges. When lubrication is required, add SAE No. 30 non-detergent oil through the hole for the air vent (8A). **Do not** over-lubricate. Over-lubrication can cause the bearings to over-heat, resulting in premature bearing failure.

Under normal conditions, drain the pedestal once each year and refill with approximately 64 ounces (1,9 liters) of clean oil. Change the oil more frequently if the pump is operated continuously or installed in an environment with rapid temperature change.



Monitor the condition of the bearing lubricant regularly for evidence of rust or moisture condensation. This is especially important in areas where variable hot and cold temperatures are common.

For cold weather operation, consult the factory or a lubricant supplier for the recommended grade of oil.

### Engine

Consult the literature supplied with the engine, or contact your local engine representative.

**For Warranty Information, Please Visit  
[www.grpumps.com/warranty](http://www.grpumps.com/warranty)  
or call:  
U.S.: 419-755-1280  
Canada: 519-631-2870  
International: +1-419-755-1352**

**GORMAN-RUPP PUMPS**