PUBLICATION NUMBER PL-04076-02 May 24, 1999 Rev. C 11-6-2023



PUMP MODEL RS3A31–B



PARTS LIST WITH PERFORMANCE CURVE

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

www.grpumps.com

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

©Copyright by the Gorman-Rupp Company

Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your pump model and serial number in the spaces provided below. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:

Serial Number:

PERFORMANCE CURVE – SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:

Serial Number:

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.


PERFORMANCE CURVES


The performance curves on the following page are based on 70° F (21° C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.




Pump speed and operating condition points must be within the continuous performance range shown on the curve(s). This Page Intentionally Blank

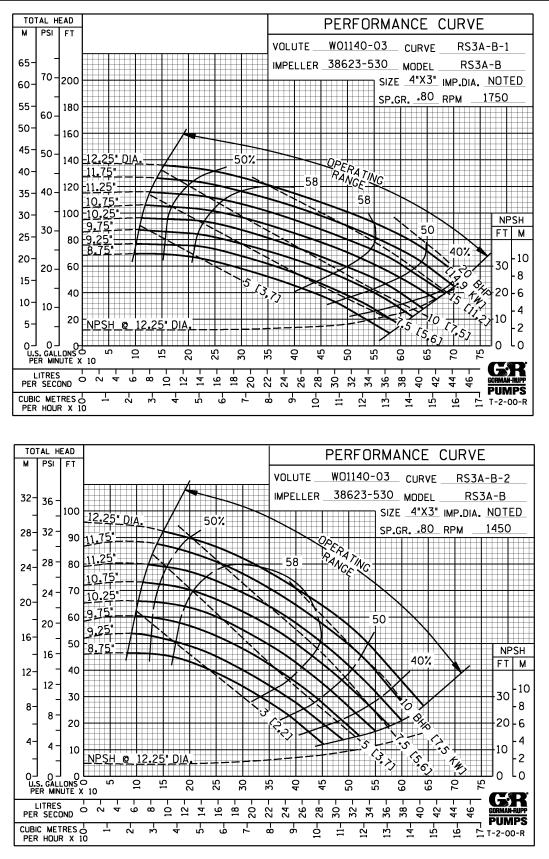



1 of 5

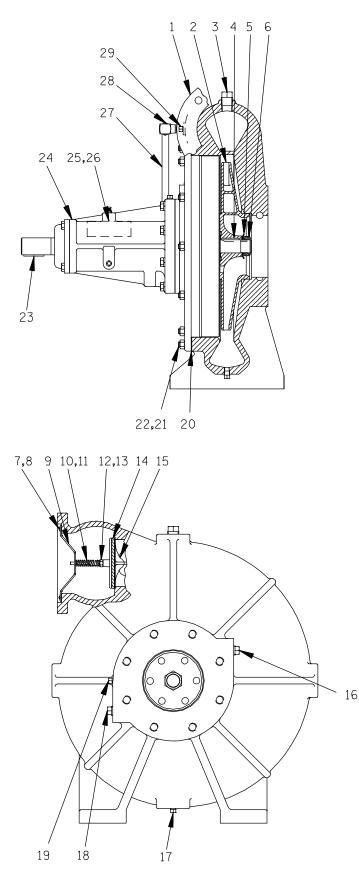

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A. Page 125.3 A4.5 ©Copyright by the Gorman-Rupp Company

05/24/99

PARTS LIST Pump Model RS3A31-B


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM PART NAME PART MAT'L NO. NUMBER CODE	QTY
1	PUMP CASING	W01140-03	11010	1	23 * SHAFT KEY N0406 15990	1
2 *	IMPELLER	38623-530	13048	1	24 BRG HOUSING ASSY 44143-042	1
3	PIPE PLUG	P08	15079	1	25 NAME PLATE 2613DZ 13990	1
4 *	IMPELLER KEY	N0403	15990	1	26 DRIVE SCREW BM#04-03 17000	2
5	BRG LOCKWASHER	23962-506		1	27 PRIMING TUBE ASSY 46335-060	1
6	IMPELLER NUT	K75776	15111	1	28 MALE ELBOW 25812-011	1
7	SCREW	CM0401-1/2	15991	2	29 PIPE PLUG P02 15079	1
8	T-TYPE LOCKWASHER	AL04	17170	2		
9	CHECK VALVE GUIDE	K74025	15991	1	NOT SHOWN:	
10	CHECK VALVE SPRING	K74062		1	* SUCT FLANGE GASKET N14147 19060	1
11	CHECK VALVE STEM	K74008	15991	1	* DISCH FLANGE GASKET 11589GA 19060	1
12	HEX NUT	D04	15991	1	SUCTION STICKER 6588AG	1
13	T-TYPE LOCKWASHER	AL04	17170	1	LUBE DECAL 38816-081	1
14 *	CHECK VALVE O-RING	25152-335		1	INSTRUCTION TAG 38817-011	1
15	DISCHARGE VALVE	38345-628	13047	1	DISCHARGE STICKER 6588BJ	1
16	PIPE PLUG	P06	15079	1	G-R DECAL GR-03	1
17	PIPE PLUG	P02	15079	1	ROTATION DECAL 2613M	1
18	PIPE PLUG	P06	15079	1	BEARING TAG 6588ABB	1
19	PIPE PLUG	P02	15079	1		
20 *	PUMP CASING GASKET	N14146	19060	1	OPTIONAL:	
21	STUD	C0606	15991	12	SUCT/DISCH FLANGES K33850	1
22	HEX NUT	D06	15991	12	BRONZE IMPELLER T06235-22 14150	1

* INDICATES PARTS RECOMMENDED FOR STOCK

† ALL ROTO-PRIME® IMPELLERS ARE TRIMMED.

2 of 5 GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A. Page 125.3 A4.5 ©Copyright by the Gorman-Rupp Company

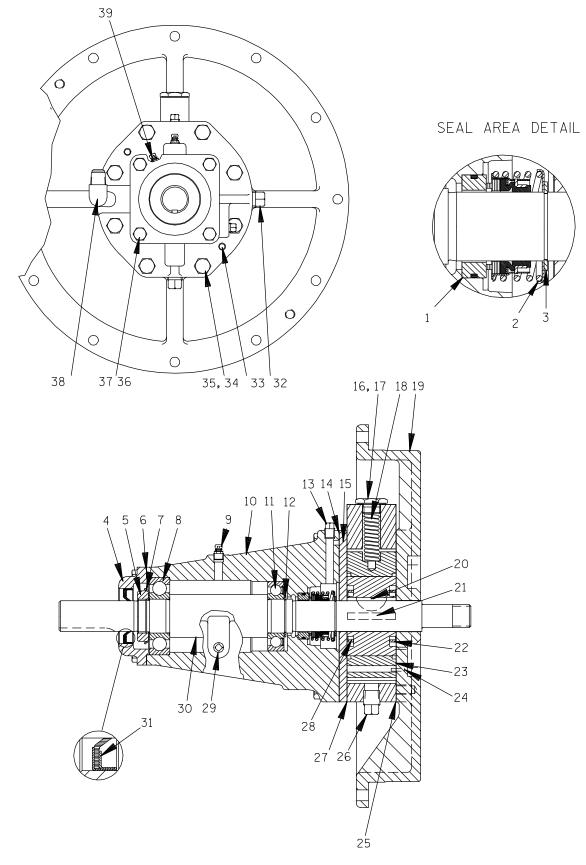

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

©Copyright by the Gorman-Rupp Company


3 of 5

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1 *	SEAL ASSEMBLY	25271-192		1	26	PIPE PLUG	P06	15079	1
2	SPRING HOLDER	25273-266		1	27 🔻	CENTER PLATE GASKE	Γ N14145	18010	1
3	SEAL SNAP RING	S700		1	28	ROTOR BLADE SPACEF	K74031	15030	1
4	BEARING CAP	N14130	10010	1	29	PIPE PLUG	P02	15079	1
5	BEARING LOCK NUT	S301		1	30 🗡	F IMPELLER SHAFT	R10123	15010	1
6 *	BEARING CAP GASKET	K74033	18000	1	31 *	OIL SEAL	25227-230)	1
7	TAB WASHER	S302		1	32	PIPE PLUG	P06	15079	1
8 *	OUTBOARD BEARING	23282-008		1	33	DOWEL PIN	21133-076	;	2
9	AIR VENT	S2162		1	34	HEX HD CAPSCREW	B0615	15991	8
10	BEARING HOUSING	T02990	11010	1	35	LOCKWASHER	J06	15991	8
11 *	BALL BEARING	23257-012		1	36	HEX HD CAPSCREW	B0504	15991	4
12	BEARING RET RING	S248		1	37	LOCKWASHER	J05	15991	4
13	PIPE PLUG	P02	15079	1	38	MALE ELBOW	25812-011		1
14 *	SPACER PLATE GASKET	N14144	18000	1	39	AIR VENT	S2162		1
15	SPACER PLATE	N14129	11010	1					
16	PRESS REG SPRING CAP	K68064	15991	1	OPTIC	NAL:			
17 *	SPRING CAP GASKET	K86067		1		SST IMPELLER SHAFT	R10769	17080	1
18 *	PRESS REG SPRING	K74120		1		TEFLON SEAL ASSY	25271-743		1
19	BODY COVER	T02985A-01	11010	1	•	OIL LUBE BEARING	44143-095	;	1
20 *	ROTOR WOODRUFF KEY	K74041	15990	1		HOUSING ASSEMBLY			
21 *	ROTOR BLADE	K79300-21		6		INBOARD BEARING	S310		1
22	ROTOR BLADE SPACER	K74031	15030	1		OUTBOARD BEARIN	G 23275-008		1
23	GROUP GRIND	42212-012		1		OIL CUP	26713-051		1
24 *	LOCATING PIN	21154-666		1		GROUP GRIND WITH	LK05267		1
25 †	CENTER PLATE GASKET	N14145	18010	2		C.I. ROTOR			

PARTS LIST 44143–042 Bearing Housing Assembly

* INDICATES PARTS RECOMMENDED FOR STOCK

- † 2 GASKETS REQUIRED WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.
- ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.

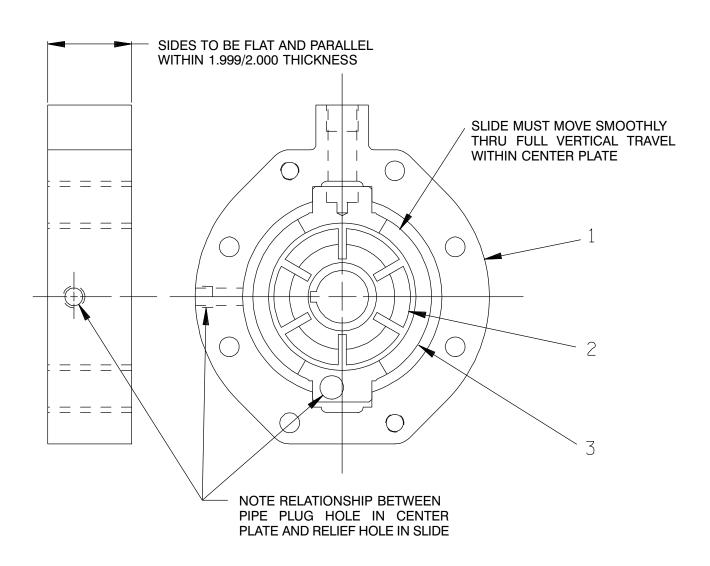

PARTS LIST 42212–012 Group Grind

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	CENTER PLATE	NOT AVAILABLE		1
2	ROTOR	NOT AVAILABLE		1
3	SLIDE	NOT AVAILABLE		1

NOTE: THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

©Copyright by the Gorman-Rupp Company

5 of 5

For Warranty Information, Please Visit www.grpumps.com/warranty or call: U.S.: 419-755-1280 Canada: 519-631-2870 International: +1-419-755-1352