Use With: OM--04151

MR--04315

July 31, 1995 Supersedes: OM--03472--01



PUMP MODEL S6E1-E60 460/575/3

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

PL--04219 S SERIES PUMP

PERFORMANCE CURVE - SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.


PERFORMANCE CURVES

The performance curves on the following page are based on 70° F (21° C) clear water at sea level. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.




Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

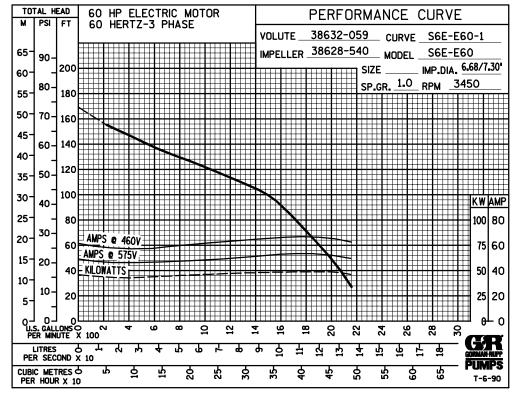

Performance Curve - Model S6E1-E60 460/575/3

PARTS LIST MANUAL PAGE A -- 1

S/N 1012833 UP PUMP ISSUE 1

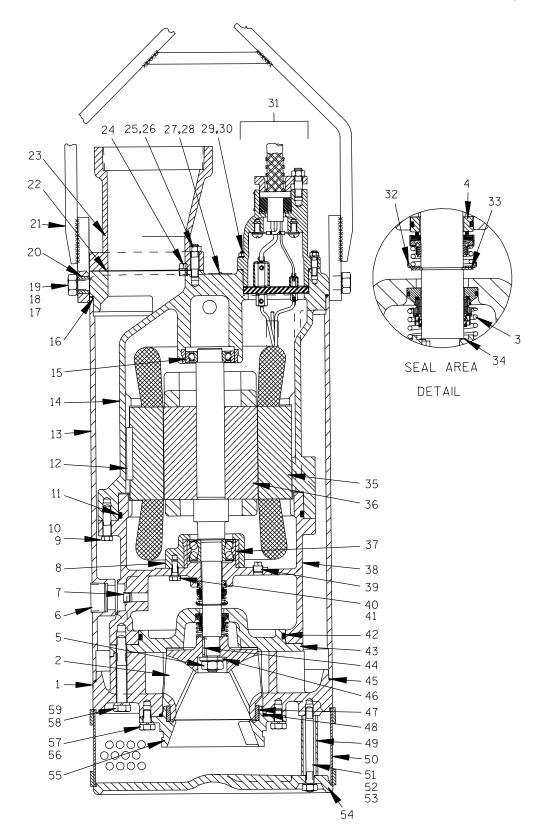

THE GORMAN -- RUPP COMPANY • MANSFIELD, OHIO

 $\textbf{GORMAN-RUPP OF CANADA LIMITED} ~ \textbf{ST. THOMAS, ONTARIO, CANADA} \quad \textbf{Printed in U.S.A.}$

©Copyright by the Gorman – Rupp Company

1 of 4

S/N 1012833 UP

PUMP ISSUE 1

If your pump serial number is followed by an "N", your pump is NOT a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM PART NAME NO.	PART NUMBER	MAT'L CODE	QTY	ITEM PART NAME NO.	PART NUMBER	MAT'L CODE	QTY
1 DIFFUSER	38632-059	1102H	1	39 PIPE PLUG	P06	15079	1
2 * IMPELLER	38628-540	1102H	1	40 HEX HD CAPSCREW	B0605	15991	4
3 * LOWER SEAL ASSY	46512-056		1	41 DYNA SEAL WASHER	S1586		4
4 * UPPER SEAL ASSY	25271-903		1	42 * SEAL PLATE O-RING	S1990		1
5 * IMPELLER NUT	AT14S	17000	1	43 SEAL PLATE	38272-526	1102H	1
6 SOC HD PIPE PLUG	PC24	17000	1	44 ★ IMPELLER KEY	N0405	17000	1
7 SOC HD PIPE PLUG	PC06	17000	1	45 ★ MTR HOUSING O-RING	25152-282		1
8 BEARING CAP	38322-421	13040	1	46 [★] IMPELLER WASHER	31131-026	17000	1
9 HEX HD CAPSCREW	B1008	17000	6	47 * WEAR RING	38691 – 325	14000	1
10 LOCKWASHER	J10	17000	6	48 DIFFUSER O-RING	25152-367		1
11 ★ LWR MTR HSG O-RING	S1676		1	49 STRAINER SUPPORT	31412-034	15079	6
12 * STATOR KEY	N0812	17000	1	50 STRAINER	46611-008	2415V	1
13 MOTOR HOUSING	38311-809	13000	1	51 STUD	C0834	15991	6
14 UPPER MOTOR HSG	38311-316	13000	1	52 LOCKWASHER	J08	15991	6
15 * UPPER BALL BEARING	23282-010		1	53 HEX NUT	D08	15991	6
16 * MTR HOUSING O-RING	25152-282		1	54 BASE PLATE	38352-306	13080	1
17 HEX HD CAPSCREW	B1208	15991	2	55 SUCTION HEAD	38247 – 405	10000	1
18 LOCKWASHER	J12	15991	2	56 HEX HD CAPSCREW	B0804	15991	5
19 FLAT WASHER	K12	15991	2	57 LOCKWASHER	J08	15991	5
20 BUSHING	10045	15071	2	58 HEX HD CAPSCREW	B1020	17000	6
21 HOIST BAIL ASSY	44713-026	2415V	1	59 LOCKWASHER	J10	17000	6
22 * DISCH FLANGE GASKET	38687-049	20000	1	NOT SHOWN:			
23 DISCHARGE FLANGE	38642-207	10010	1	CONTROL BOX			
24 PIPE PLUG	P04	17000	1	- 460V	27515-525		1
25 STUD	C0809	15991	6	-575V	27515-525		1
26 HEX NUT	D08	15991	6	IMPELLER PULLER	48711-018		1
27 NAME PLATE	2613GH	17020	1	5" HEAT-SHRINK TUBE	18763-249		1
28 DRIVE SCREW	BM#04-03	17000	2	INSTRUCTION TAG	38817-073		1
29 STUD 30 DEFORM LOCKNUT	C0607 DD06	15991	4	HEATER PACK			
30 DEFORM LOCKNUT 31 TERMINAL HOUSING	47367 - 079	15991 	4 1	-460V	27521 – 211		1
AND CABLE ASSY	4/30/-0/9		'	–575V	27521-210		1
32 * SPRING HOLDER	25273-273		1	CABLE TIE	27111-207		1
32 A SPRING HOLDER 33 RETAINING RING	S245		1				
				OPTIONAL:			
34 * IMP ADJ SHIM SET 35 STATOR ASSY	37J	17090	1	* REPAIR GASKET SET	48211-063		1
-460V	47113-047		1	LIQUID LEVEL DEVICES:			
–575V	47113-048		1	DIAPHRAGM TYPE	GRP48-03 c	or CDD40	061
36 ROTOR & SHAFT ASSY	47112-047		1	FLOAT TYPE	27471 – 180		1
37 [★] LOWER BALL BEARING	23425-462		1	120V LIQ LVL CONTROL	27521 – 321		1
38 LOWER MOTOR HSG	38311-306	13040	1	120V LIQ LVL GOINTIKOL	27321-321		'


st INDICATES PARTS RECOMMENDED FOR STOCK

THE GORMAN -- RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED ● ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

2 of 4 ©Copyright by the Gorman–Rupp Company

S/N 1012833 UP PUMP ISSUE 1

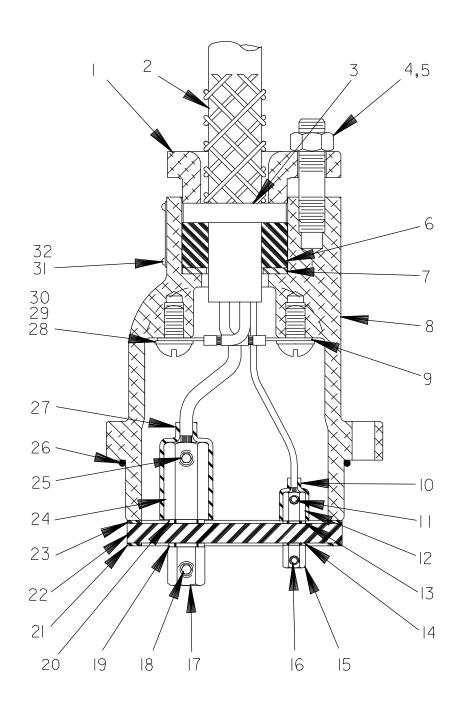

THE GORMAN -- RUPP COMPANY • MANSFIELD, OHIO

 $\textbf{GORMAN-RUPP OF CANADA LIMITED} ~ \textbf{ST. THOMAS, ONTARIO, CANADA} \quad \textbf{Printed in U.S.A.}$

S/N 1012833 UP PUMP ISSUE 1

Terminal Housing And Cable Assembly

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	1	PART NAME	PART NUMBER	MAT'L CODE	QTY
1		TERMINAL GLAND	38381-614	13040	1
2	*	CABLE - 50 FT	47325-006		1
3	*	CABLE GRIP	11227K		1
4		STUD	C0808	15991	2
5		HEX NUT	D08	15991	2
6		GLAND BUSHING	31143-067	19100	1
7		TERMINAL WASHER	31133-122	15991	1
8		TERMINAL HOUSING	38381-237	13000	1
9		TERMINAL	27214-035		1
10		HEAT SHRINK TUBE	31412-056	19530	2
11		ALLEN HEAD SETSCREW	GA#10-01S	15991	2
12		TERMINAL COLLAR	31811-057	14100	2
13	*	DYNA SEAL WASHER	S1590		2
14	*	DYNA SEAL WASHER	S1590		2
15		TERMINAL POST	11181	14100	2
16		ALLEN HEAD SETSCREW	GA#10-01S	15991	2
17		TERMINAL POST	38724-009	14100	3
18		ALLEN HEAD SETSCREW	GA0501 -1/2	14990	3
19	*	DYNA SEAL WASHER	S1586		3
20	*	DYNA SEAL WASHER	S1586		3
21	*	TERMINAL PLATE GSKT	38687-529	20000	1
22	*	TERMINAL PLATE	38711-001	23010	1
23	*	TERMINAL PLATE GSKT	38687-529	20000	1
24		TERMINAL COLLAR	10144	14100	3
25		ALLEN HEAD SETSCREW	GA0501- 1/2	14990	3
26	*	O-RING	25152-155		1
27		HEAT-SHRINK TUBE	31413-014	19530	3
28		TERMINAL	S1550		1
29		RD HD MACHINE SCREW	X0603	14990	2
30		T TYPE LOCKWASHER	AK06	15991	2
31		DRIVE SCREW	BM#04-03	17000	4
32		INFORMATION PLATE	38816-145	17050	1
NOT	SHO	WN:			
		RTV SEALANT	18771 – 106		2

^{*} INDICATES PARTS RECOMMENDED FOR STOCK

THE GORMAN -- RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

4 of 4 ©Copyright by the Gorman–Rupp Company

Page 150.6 E1 JULY 31, 1995

For U.S. and International Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280 International: +1-419-755-1352

For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870